



FRONT VIEW / VISTA FRONTAL

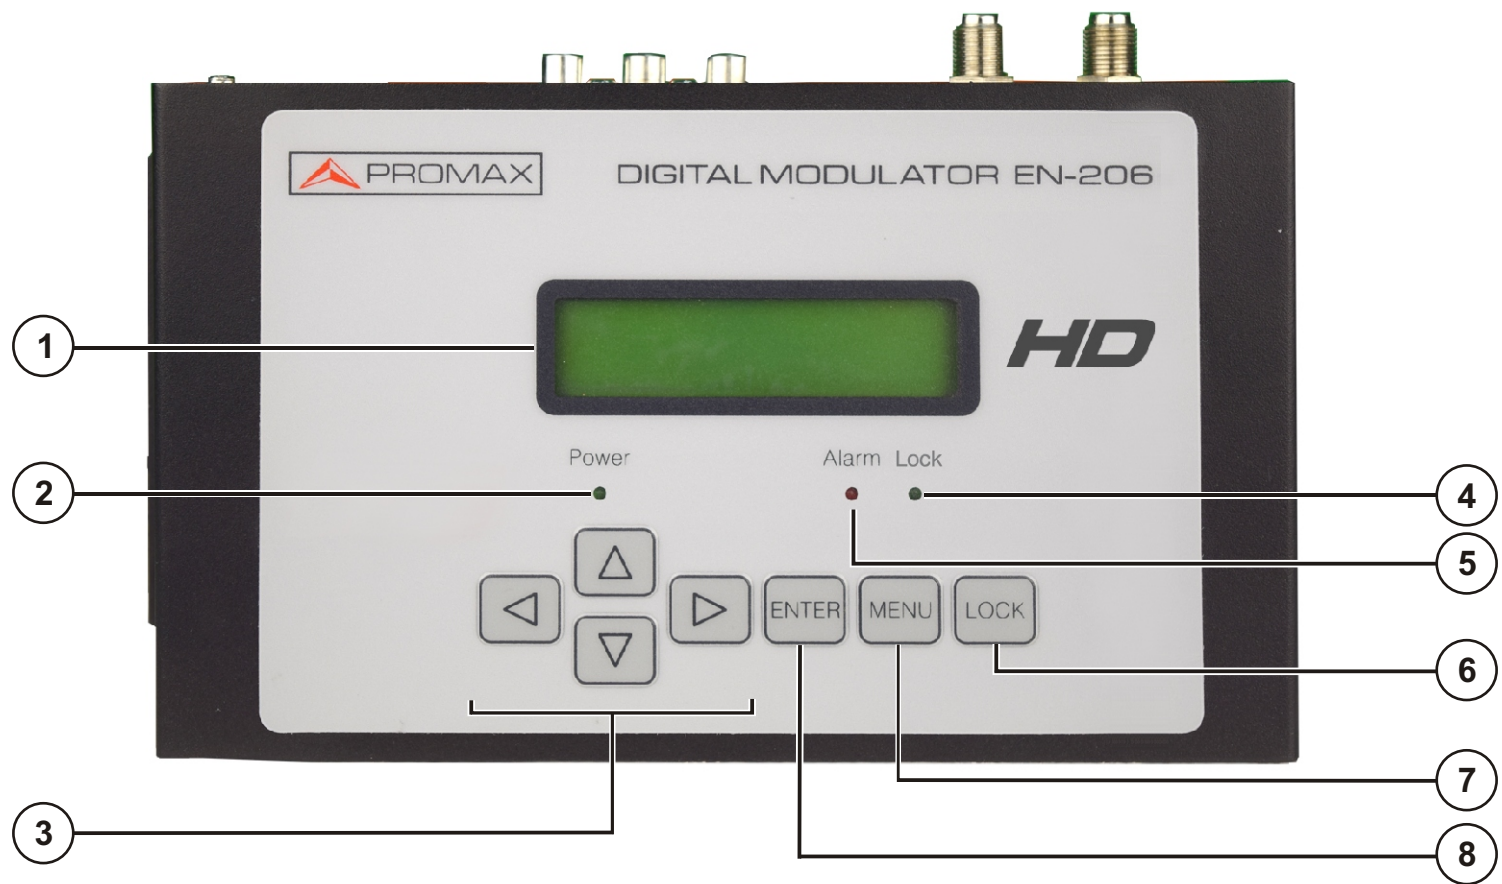

- | | |
|--------------------------------------|----------------------------------|
| ① LCD Display / Pantalla LCD | ⑤ Alarm LED / LED de Alarma |
| ② Power LED / LED de Encendido | ⑥ Lock key / Tecla de Bloqueo |
| ③ Control keys / Teclas de Control | ⑦ Menu key / Tecla acceso a Menú |
| ④ Lock LED / LED de señal enganchada | ⑧ Enter key / Tecla Enter |

TOP VIEW / VISTA SUPERIOR

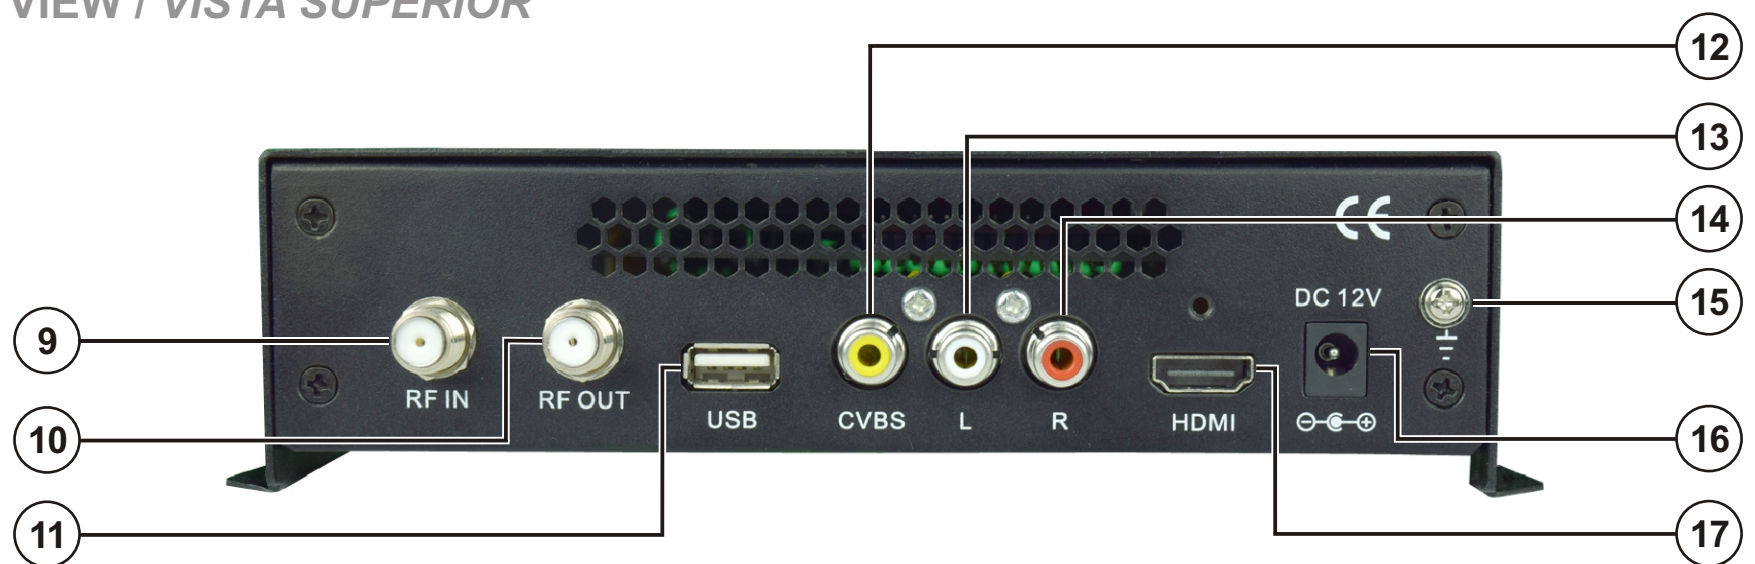

- | | |
|---|---|
| ⑨ RF IN / Entrada RF | ⑭ Right audio input / Entrada audio derecho |
| ⑩ RF OUT / Salida RF | ⑮ Earth connection / Conexión de tierra |
| ⑪ USB port for upgrade / Puerto USB para actualizar | ⑯ DC 12 V |
| ⑫ Composite video input / Entrada vídeo compuesto | ⑰ HDMI In / Entrada HDMI |
| ⑬ Left audio input / Entrada audio izquierdo | |



MENU TREE / ÁRBOL DE MENÚS

