


FRONT VIEW

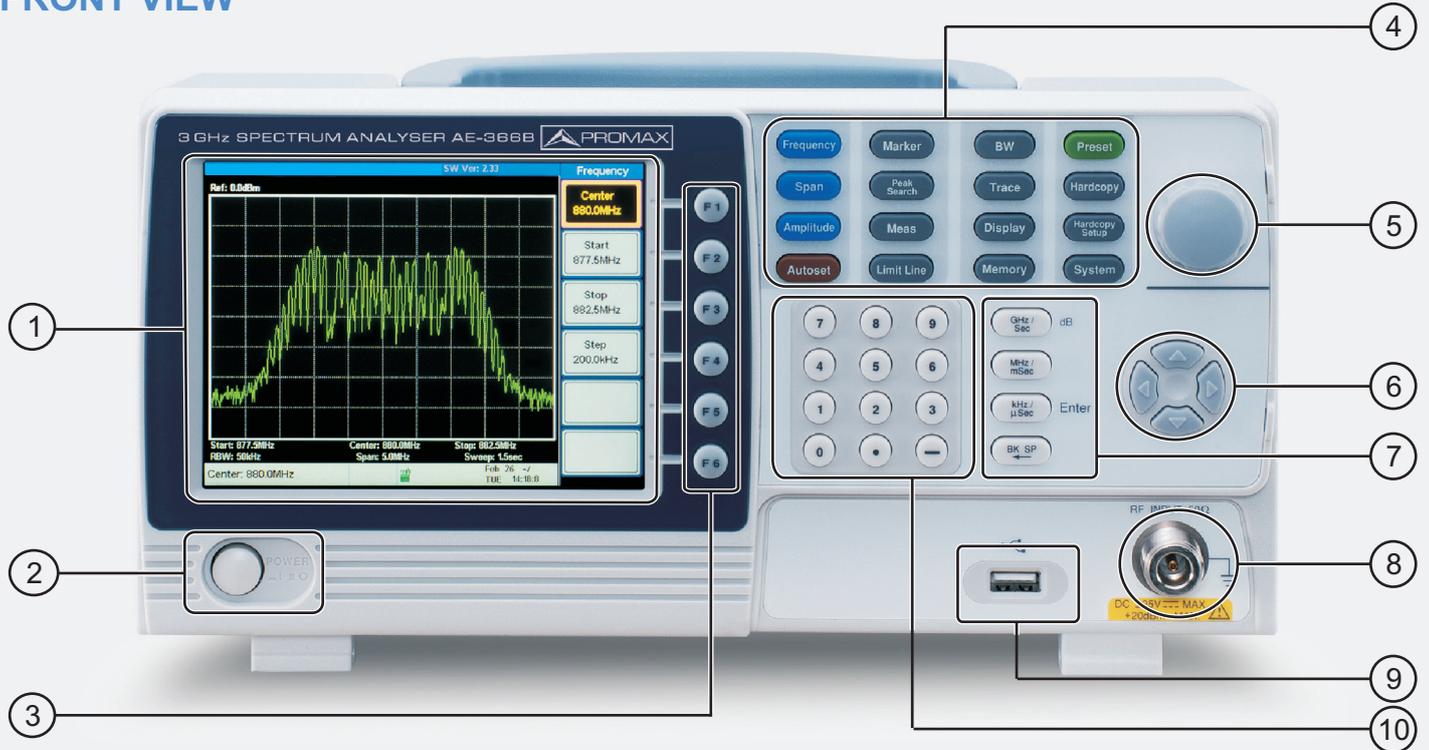

- ① LCD Display
- ② Power button
- ③ Function Keys
- ④ Menu Keys
- ⑤ Scroll wheel
- ⑥ Arrow keys
- ⑦ Keypad and unit keys
- ⑧ RF Input terminal
- ⑨ USB A port
- ⑩ Numeric Terminal

REAR PANEL




- ①① USB B port
- ①② RS 232 port
- ①③ VGA port
- ①④ Security slot
- ①⑤ Fan
- ①⑥ Power socket

MENU KEYS

- Frequency** Sets the center frequency, start frequency, stop frequency and step frequency.
- Span** Sets the span, with options for full span, zero span and last span.
- Amplitude** Sets the amplitude reference level, scale and amplitude units.
- Autoset** Automatically searches the peak signal with maximum amplitude and displays it with appropriate horizontal and vertical scales.
- Marker** The Marker key is used to configure the markers, as well as other related functionality.
- Peak Search** Finds each maximum and minimum peak. Used with the Marker functions.
- Meas** Configures ACPR and OCBW measurements.
- Limit Line** Sets and tests Pass/Fail limit lines.


- BW** Sets the resolution bandwidth.
- Trace** Sets traces and trace related functions.
- Display** The Display key configures the split-screen windowing mode and the basic display properties.
- Memory** The memory key is used to save or recall setup, trace and limit line data.
- Preset** The Preset key will restore the spectrum analyzer to the factory settings.
- Hardcopy** The hardcopy key is a quick save key that will save a screen-shot of the display.
- Hardcopy Setup** Configures the hardcopy options.
- System** The System key is used to configure the RS232 interface, language, update the firmware as well as other system options.

NUMERIC TERMINAL

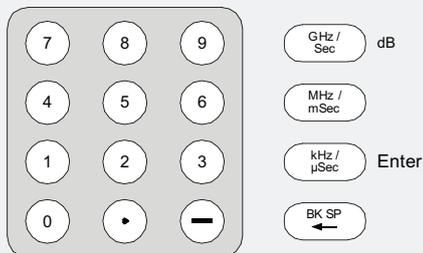


The numeric keypad is used to enter values and parameters. It is often used in conjunction with the arrow keys and scroll wheel. To confirm a value press the Enter key .

SCROLL WHEEL

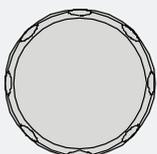

Edit values, select listed items.


ARROW KEYS

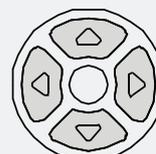

Increment/decrement values (in steps), select listed items.

INPUT / OUTPUT CONNECTORS

RF INPUT TERMINAL

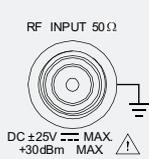

RF input port.

- Maximum input: +30dBm (+20 dBm measurable)
- Input impedance: 50 Ω.
- Maximum DC voltage: ± 25 V.
- N-type: female.

USB-A PORT




USB A port for saving/recalling settings/files to external memory. Only supports FAT/FAT32 formatting.

RS-232 PORT



RS 232 9 PIN DSUB For remote control.

USB-B PORT

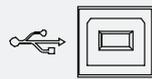


USB-B Device port. For remote control.

VGA PORT



VGA video-out port. Supports SVGA (640x480)

DESCRIPTION DISPLAY

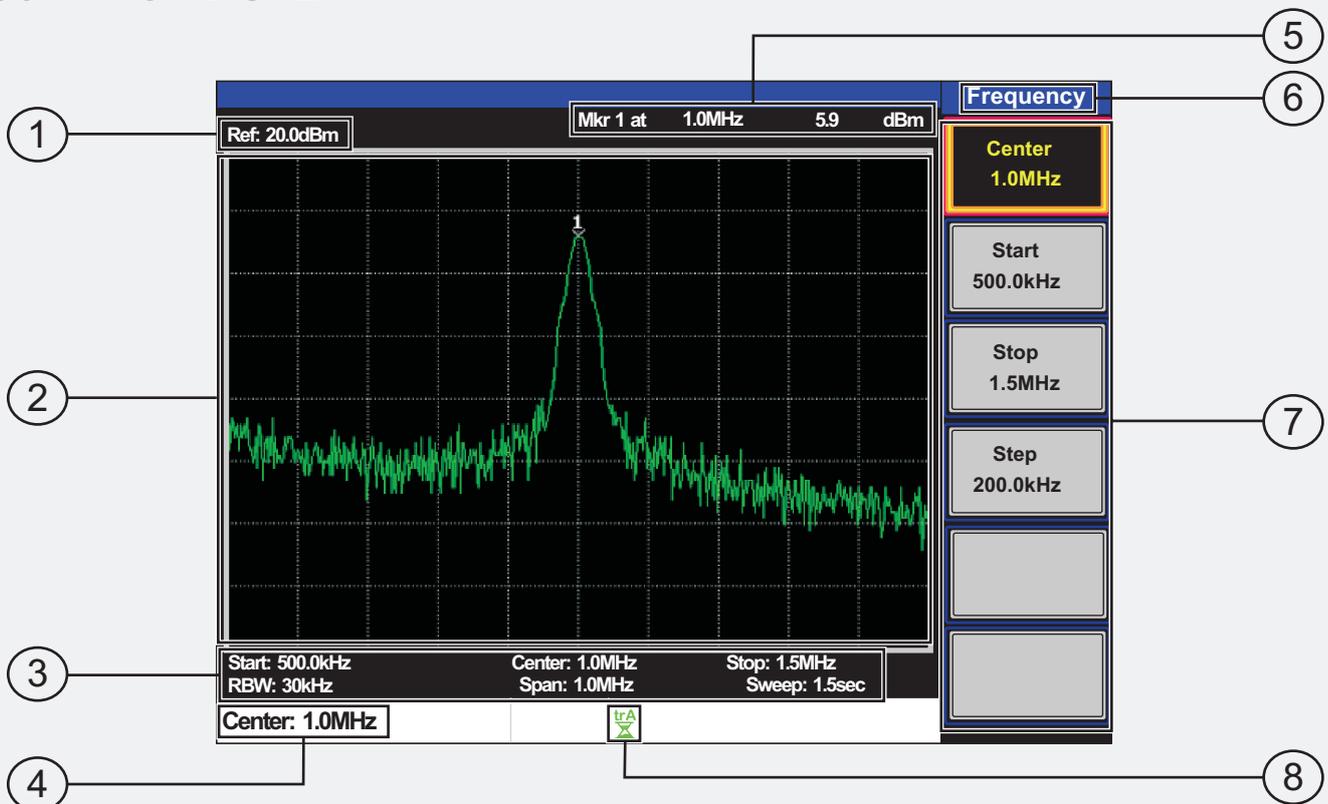

- | | |
|--------------------------------|----------------------|
| ① Reference Level | ⑤ Marker information |
| ② Trace and waveforms | ⑥ Function menu |
| ③ Frequency Bandwidth settings | ⑦ Soft menu keys |
| ④ Entry/Message area | ⑧ Trace icons |

MENU AND FUNCTION KEYS

