

OP-001-GPS

SIGNAL COVERAGE OPTION

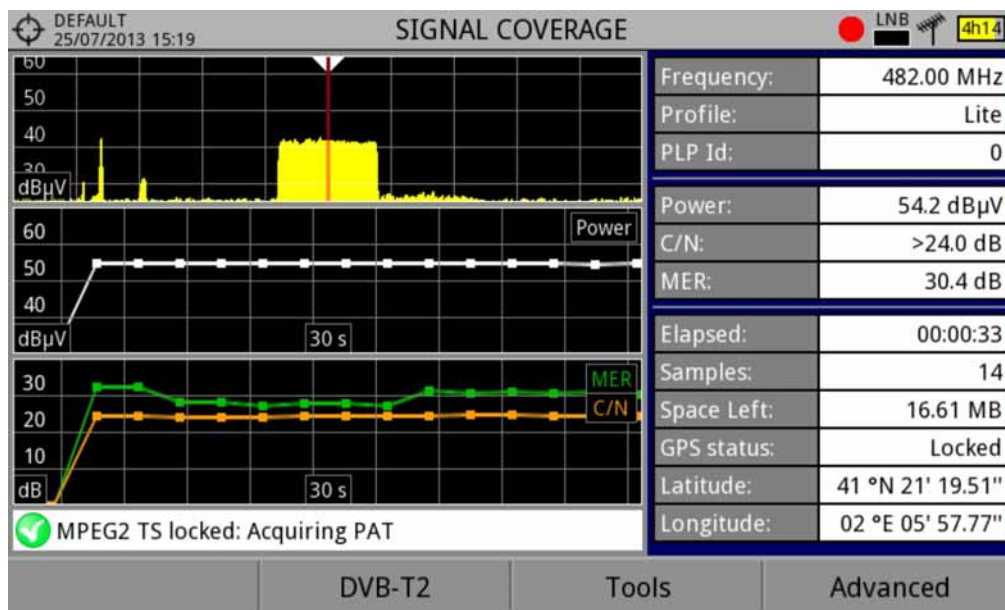


TABLE OF CONTENTS

1	GENERAL	1
1.1	Description	1
2	SPECIFICATIONS	2
2.1	GPS receiver	2
3	SIGNAL COVERAGE ANALYSIS	3
3.1	Operation	3
3.2	Settings	4
3.3	Description of signal coverage screen	5
3.4	Menu Options.....	6
4	DATA FILE PROCESSING	7
4.1	Description	7
4.2	Obtaining an excel file.....	7
4.3	Presenting measurements in Google Earth	10

SIGNAL COVERAGE OPTION

OP-001-GPS

1 GENERAL

1.1 | | | |--|--------------------| | | Description | |--|--------------------|

This annex contains operating instructions for the next option:

OP-001-GPS: Signal coverage analysis with GPS for *HD RANGER/ +*

This option allows the user to check signal coverage by measuring its power, MER and C/N. The position where all these measurements are taken is determined by a GPS receiver. All this data, measurements and GPS position can be downloaded to a PC and exported to a file for later analysis.

Please, read the user's manual of the equipment for detailed information about general operation, specifications and other data.

2 SPECIFICATIONS



2.1 GPS receiver

Chipset

GSP3F SIRF Start III technology

General

Frequency L1, 1575.42 MHz
C/A code 1.023 MHz chip rate
Channels 20

Accuracy

Position 10 meters, 2D RMS
5 meters 2D RMS, WAAS corrected
<5 meters (50%), DGPS corrected
Velocity 0.1 meters/second
Time 1 microsecond synchronized to GPS time

Datum

Default WGS-84
Other Selectable for other Datum

Acquisition Rate (Open Sky & Stationary Requirements)

Reacquisition 0.1 sec., average
Snap start 1 sec., average
Hot start 8 sec., average
Warm start 38 sec., average
Cold start 42 sec., average

Dynamic Conditions

Altitude 18.000 meters max
Velocity 515 meters/second max
Acceleration 4g, max
Jerk 20 meters/second, max

Power

Main power input 5V DC input
Power consumption 0.15 W (continuous mode)
Supply Current 45 mA
Backup power 3V Lithium-Ion rechargeable battery


Mechanical features





Dimensions 45.75 (L) x 39.90 (W) x 14.15 (H) mm
Weight 13 g



3 SIGNAL COVERAGE ANALYSIS

3.1 Operation

The Signal Coverage tool is available for all **DIGITAL TERRESTRIAL** signals.

- 1 Connect the GPS receiver to the equipment.
- 2 In **Settings** menu  select the terrestrial band.
- 3 Access the **SPECTRUM** mode and tune the signal for coverage study.

In case of tuning a **DVB-T2** signal, in the **Signal Parameters** menu  select the Profile (Base or Lite) and the PLP identifier. User has to choose one profile and one PLP identifier per each signal coverage analysis.
- 4 Press the **Tools** key .
- 5 Select the **Signal Coverage** option.
- 6 The **Signal Coverage** function appears on screen.
- 7 Before starting the signal coverage analysis, access the **Configuration** option in the **Advanced** menu  for settings (more details in next section).
- 8 After settings, access the **Advanced** menu  and press on **Start** to start the signal coverage analysis.

In **Automatic** mode, the equipment takes samples automatically. In **Manual** mode each time the user presses the joystick the equipment takes a sample. Measurement are linked to the GPS reference.
- 9 Access the **Advanced** menu  and press on **Stop** to finish the signal coverage analysis.
- 10 Press the **Installations management** key  to access the signal coverage data.

3.2 Settings

User can adjust some parameters on the Signal Coverage analysis:

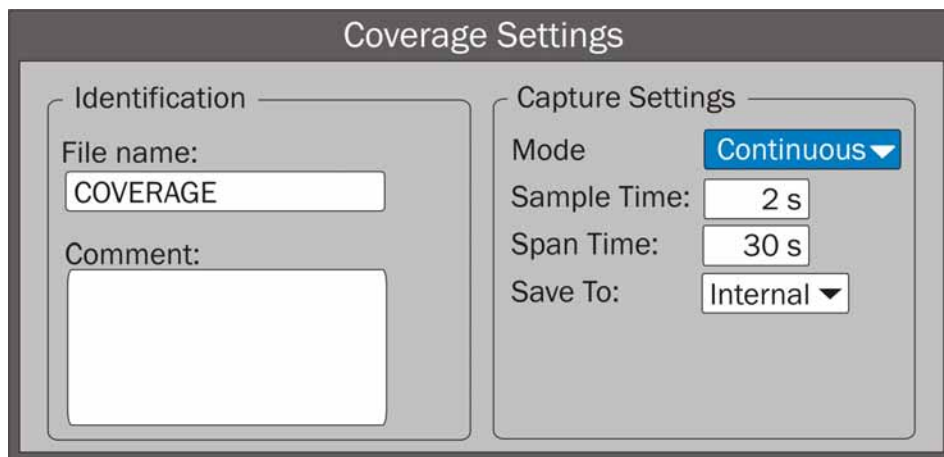


Figure 1.

► File name:

User can give a name to the file where data is saved. All measurement that can be seen in the MEASUREMENT 1/3 screen (frequency, power/level, C/N, PLP identifier, MER, CBER, LBER and LM) will be stored on the data file. Be sure to change the file name when starting a new Signal coverage analysis. If not, new data file will be saved on the last one.

► Comment:

User can write some comments about the study.

► Mode:

There are **two** options: **Continuous** or **Manual**. In continuous mode a sample is taken automatically every sample time. In manual mode a sample is taken every time that user presses the joystick.

► Sample Time:

Time between acquisitions. Only when working in continuous mode. Minimum time is 1 second.

► Span time:

It is the width, in time, shown on screen for the X axis.

► Save to:

There are **two** options: **Internal** or **USB**. For Internal option it saves the file with all data in the internal memory of the equipment. For USB option it saves the file with all data in a USB flashdrive connected to the micro-USB port of the equipment.

3.3 Description of signal coverage screen

The following describes the **Signal Coverage** screen:

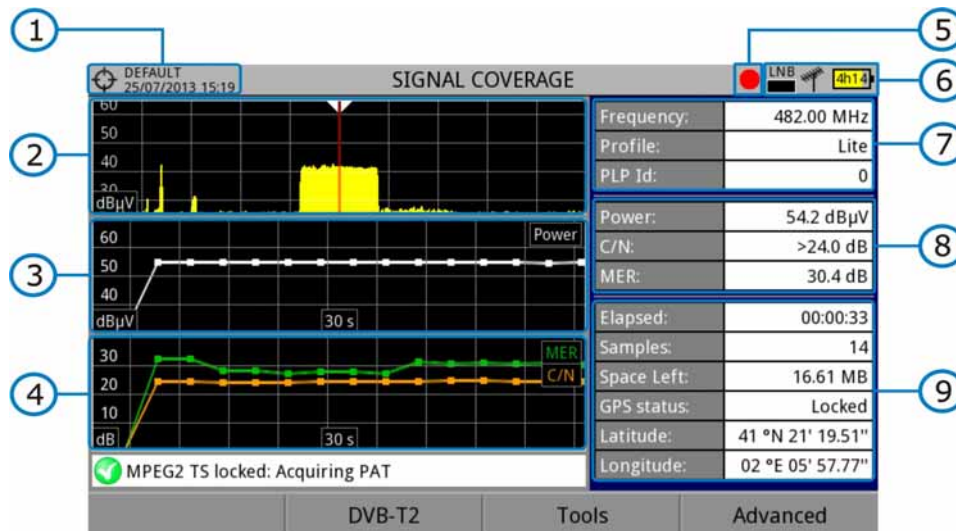


Figure 2.

- 1 Selected installation; date and time.
- 2 Spectrum.
- 3 Power measurement over time (shows span time).
- 4 MER and C/N measurement over time (shows span time).
- 5 Signal coverage started.
- 6 LNB, Selected band; battery level.
- 7 Signal information window 1:

Frequency: frequency at which signal is locked; **Profile** (only for DVB-T2 signals): Base or Lite; **PLP identifier** (only for DVB-T2 signals): identifier of the layer being measured.

- 8 Signal information window 2:

Power, C/N, MER measurements of the signal over time. It shows on screen only the span time selected in settings.

9 Signal information window 3:

Elapsed: Time elapsed since the beginning of the coverage study.

Samples: Samples taken since the beginning of the coverage study.

Space left: Space left in the memory to save data.

GPS status: It shows if the GPS receiver is locked or unlocked.

Latitude, Longitude: It shows the latitude and longitude at the current position, if GPS is locked. Measurement are linked to the GPS position.

3.4 Menu Options

At the bottom of the screen there are four menus available via the function keys.



It displays the channel/frequency where is pointing the cursor and access the tuning menu.



It displays the selected transmission standard menu and accesses the signal parameters.



It displays the Tools menu.



It displays the Advanced menu.

In the **Advanced** menu there are some options for the **Signal Coverage**. They are:

- **Start:** It starts the signal coverage study.
- **Stop:** It stops the signal coverage study.
- **Configuration:** It shows the settings window with some parameters.

4 DATA FILE PROCESSING

4.1 Description

This document is an explanation about the process that is needed to be done in order to obtain a more comfortable view of the XML data obtained with **HD RANGER** family equipment, with GPS option, when doing a Signal Coverage analysis.

Once you got the coverage data, copy the XML data file from the equipment to a USB memory using the Installation Manager. See the equipment's documentation in how to get files from an Installation.

4.2 Obtaining an excel file

For this section, you must have at least Excel 2003 or newer version. Excel 2007 (or later) is highly recommended to avoid macro problems.

- 1** First of all we need to locate the XML data file in the folder from which we want to work. There are no requirements needed to be satisfied. A file named COVERAGE.XSL must be placed in the same data file folder. That second file allows proper data formatting when processed by Excel.
- 2** Select the XML data file and then right click with the mouse button on the file name.

- 3 Choose the option **"Open with"** and then select Excel 2007 (or the available version)

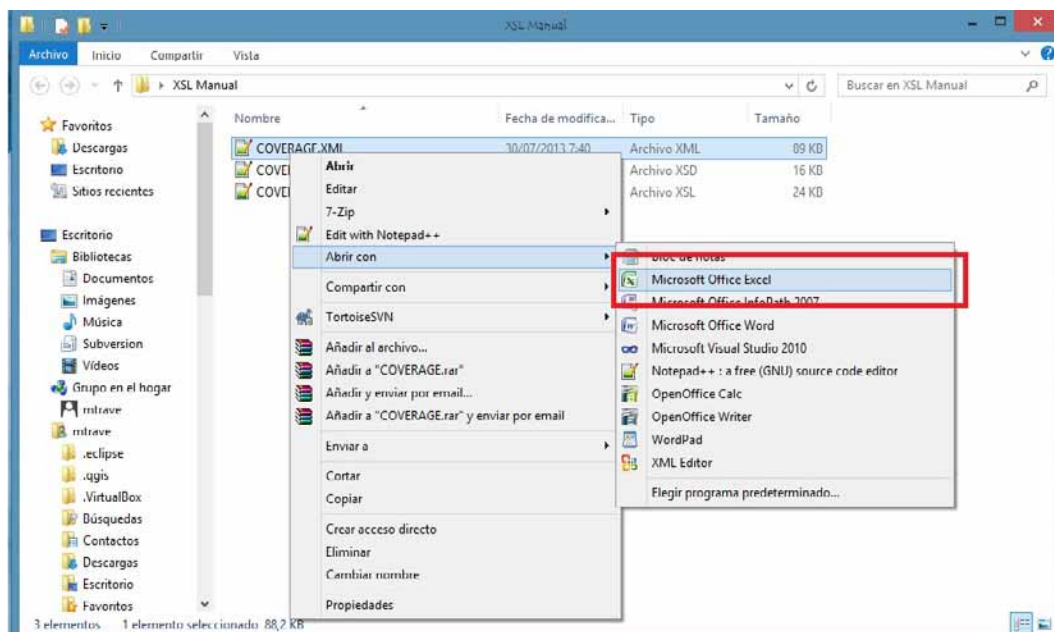


Figure 3.

- 4 When Excel tries to open the file it will ask you the import method to open the XML data file by this way:

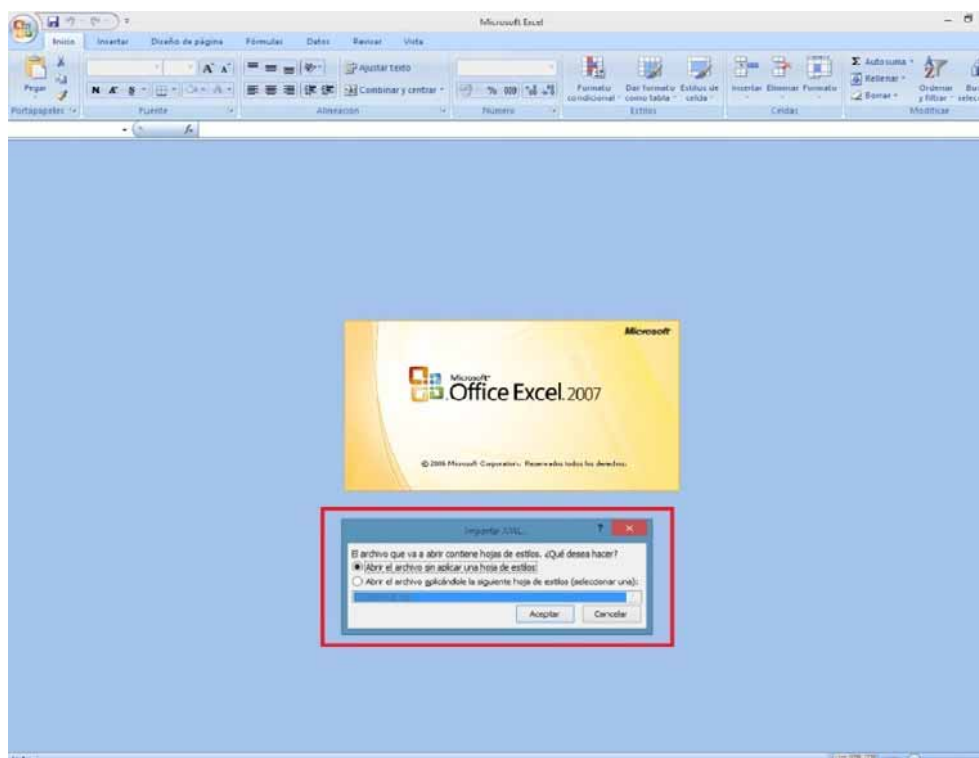


Figure 4.

- 5 You must choose the option in which a stylesheet is asked. It will appear as an option the "COVERAGE.xml" file.

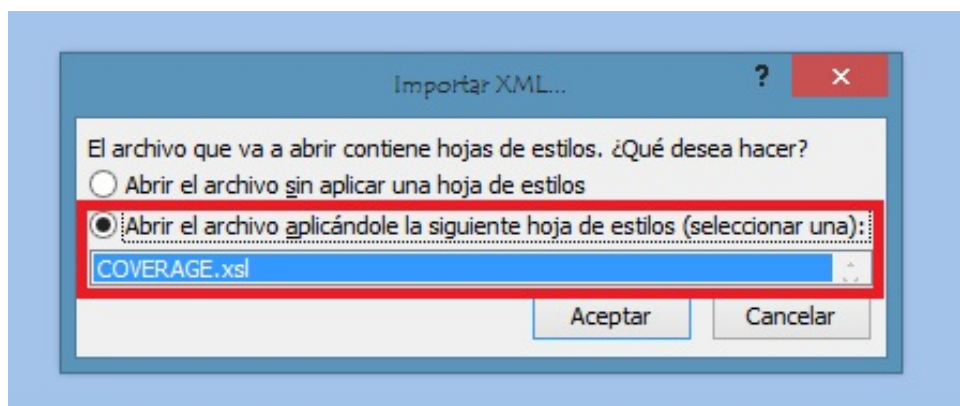


Figure 5.


- 6 Now Excel is opening the XML data file using the format that the XSL file is providing. This step could take few seconds depending on the size of the XML data file.
- 7 At this point, you should have an excel file with three different sheets. Each sheet corresponds to a different view of the same data:
- ✓ The first one will show you the generic signal information and the different coverage measures for each point acquired.
 - ✓ In the second one, you will find the same data but presented in a table format, more user friendly for working with graphs based on each measured parameter.
 - ✓ The third one provides data in a format adapted for geolocation. Information is shown in terms of parameters required for presenting the measured data as a map layer (latitude, longitude, id, description and an icon identifier number) as required for GIS and Google Earth technologies. This third sheet is formatted mainly to be compatible with main Google Earth format converters available in Internet.
- 8 Now save the data as a true excel file. No specific name or path is required, but you must remember the path.

4.3 Presenting measurements in Google Earth

For this process **Google Earth** must be installed on the computer and internet connection will be needed.

- 1 Open a web browser and then search for a converter from Excel file to KML file, for instance, googling "excel to kml" (a kind of XML file used by Google Earth) We propose this one (and this is the one we will explain in detail in the following example explanation).

Navigate to: <http://www.earthpoint.us/ExcelToKml.aspx>

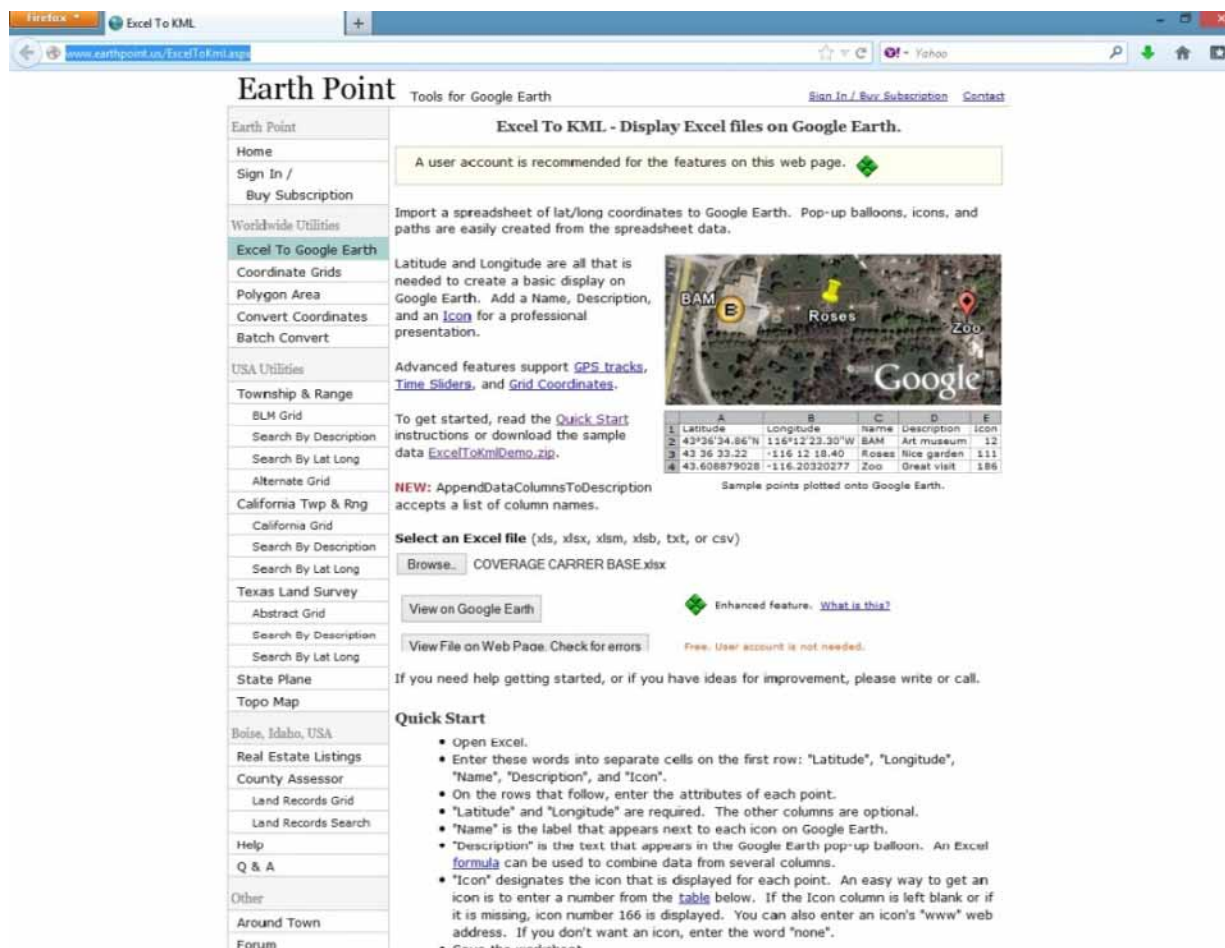

Earth Point Tools for Google Earth [Sign In / Buy Subscription](#) [Contact](#)

Excel To KML - Display Excel files on Google Earth.

A user account is recommended for the features on this web page.

Import a spreadsheet of lat/long coordinates to Google Earth. Pop-up balloons, icons, and paths are easily created from the spreadsheet data.

Latitude and Longitude are all that is needed to create a basic display on Google Earth. Add a Name, Description, and an [Icon](#) for a professional presentation.

Advanced features support [GPS tracks](#), [Time Sliders](#), and [Grid Coordinates](#).

To get started, read the [Quick Start](#) instructions or download the sample data [ExcelToKmlDemo.zip](#).

NEW: AppendDataColumnsToDescription accepts a list of column names.

Select an Excel file (xls,xlsx,xlsni,xlsb,txt, or csv)

[Browse...](#) COVERAGE CARRER BASE.xlsx

[View on Google Earth](#)

[View File on Web Page](#) [Check for errors](#)

Enhanced feature: [What is this?](#)

Free. User account is not needed.

If you need help getting started, or if you have ideas for improvement, please write or call.

Quick Start

- Open Excel.
- Enter these words into separate cells on the first row: "Latitude", "Longitude", "Name", "Description", and "Icon".
- On the rows that follow, enter the attributes of each point.
- "Latitude" and "Longitude" are required. The other columns are optional.
- "Name" is the label that appears next to the icon on Google Earth.
- "Description" is the text that appears in the Google Earth pop-up balloon. An Excel [formula](#) can be used to combine data from several columns.
- "Icon" designates the icon that is displayed for each point. An easy way to get an icon is to enter a number from the [table](#) below. If the Icon column is left blank or if it is missing, icon number 166 is displayed. You can also enter an icon's "www" web address. If you don't want an icon, enter the word "none".
- Save the worksheet

	A	B	C	D	E
1	Latitude	Longitude	Name	Description	Icon
2	43°36'34.86"N	116°12'23.30"W	BAM	Art museum	12
3	43 36 33.22	-116 12 18.40	Roses	Rice garden	111
4	43.608879028	-116.20320277	Zoo	Great visit	166

Sample points plotted onto Google Earth.

Figure 6.

- 2 Click on the **BROWSE** icon:

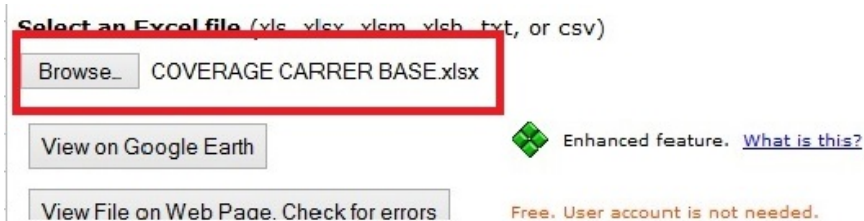


Figure 7.

- 3 A new window will appear in which you will be able to search the Excel file you saved in the step number 9 of the previous section of this document.

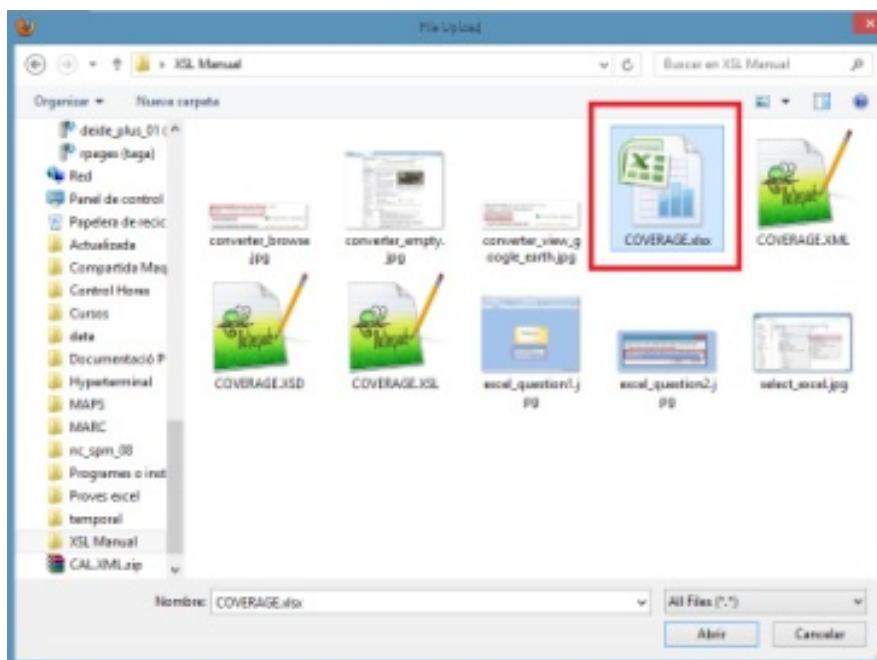


Figure 8.

- 4 After doing the file selection click on the option **VIEW ON GOOGLE EARTH**:



Figure 9.

- 5 The web page will perform the file conversion and then will ask if you want to save the resulting file or just open it using Google Earth software. Select **OPEN WITH** Google Earth.



Figure 10.

Google Earth will try to open the three different excel sheet explained before in this document (see step 8 from Excel opening process for XML data file in the previous section of this document). The first one is not using the format that the converter is expecting and will generate an error. The second and the third one will represent the coverage measurement points, but only the third one will be with the really suitable format.

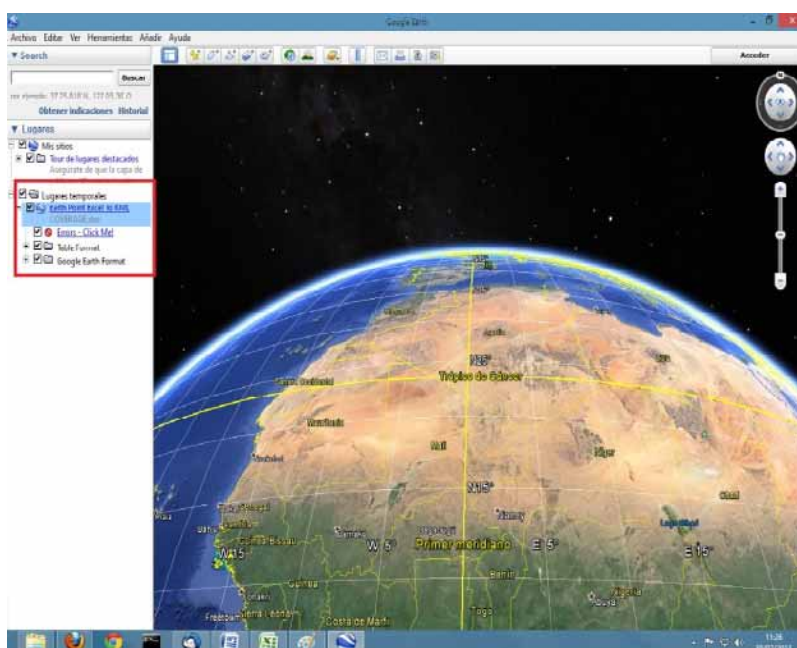


Figure 11.

- 6 Disable the first and the second sheets for a more comfortable view, and click over the third one.

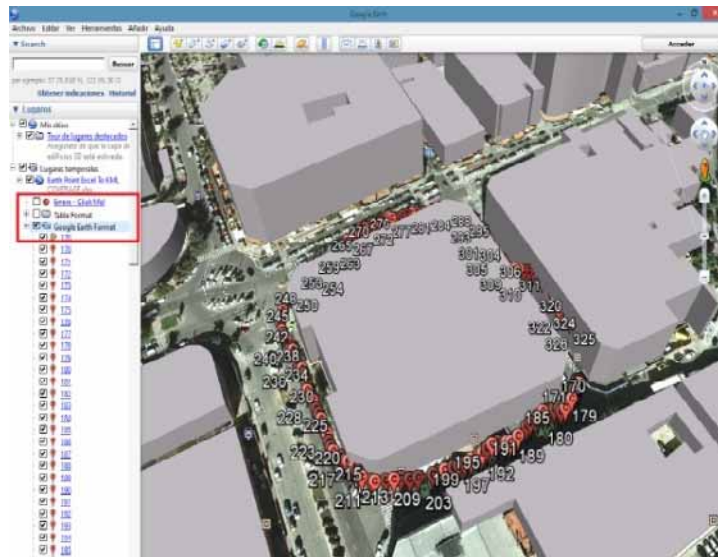


Figure 12.

- 7 The yellow flag symbol mark the first and the last coverage measure point. The other measurement points will be presented as a C symbol.

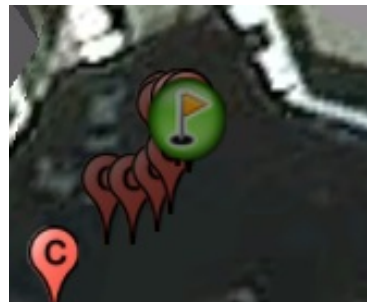


Figure 13.

- 8 Every point will show the POWER and MER measurements, when selected.



Figure 14.

Finally, the KML file generated with the procedure described here can be used directly with most of the GIS tools, to import such data into a layer over a GIS map.