



FRONT VIEW

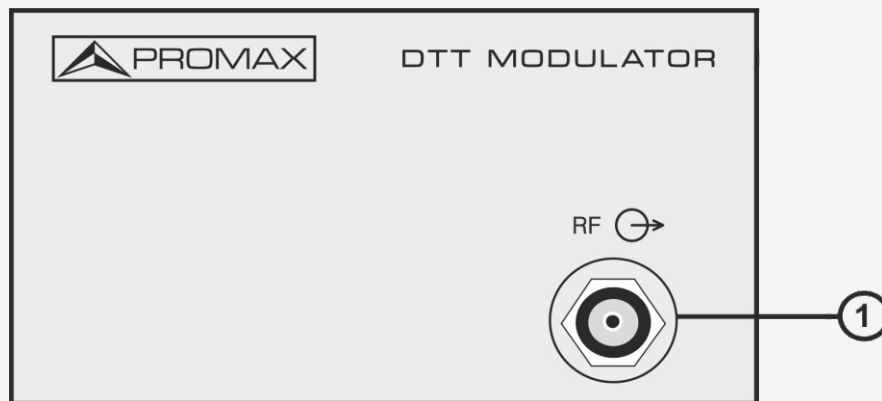

- ① **RF output**, 50 Ω , female N-type connector

REAR VIEW

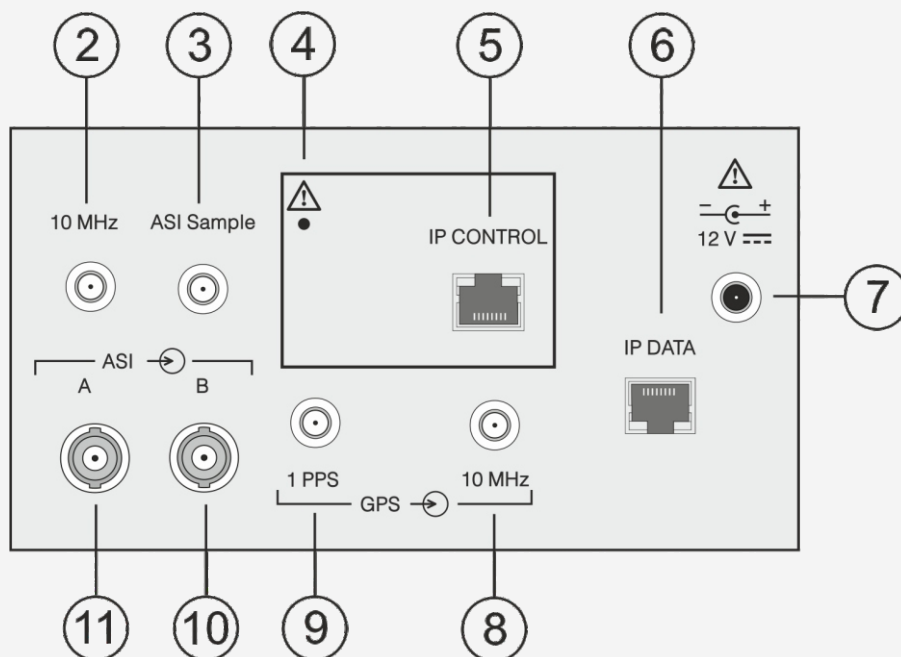

- | | |
|---|--|
| ② 10 MHz reference output , female SMA | ⑦ AC voltage connector
Supplies power to the equipment |
| ③ ASI Sample output , female SMA | ⑧ 10 MHz GPS input , 50 Ω or high impedance, female SMA |
| ④ Reset IP button
If keeping pressed for 10 or more seconds it changes the current IP address to the default IP address: 192.168.42.30 | ⑨ 1PPS GPS input , 50 Ω or high impedance, female SMA |
| ⑤ IP CONTROL , input for web control software, 100 Mbps ethernet, RJ45 connector | ⑩ ASI B input , 75 Ω , female BNC DVB-ASI input number 2 |
| ⑥ IP DATA , input for MPEG2 TS over IP, 1 Gigabit ethernet RJ45 connector | ⑪ ASI A input , 75 Ω , female BNC DVB-ASI input number 1 |

