


FRONT PANEL

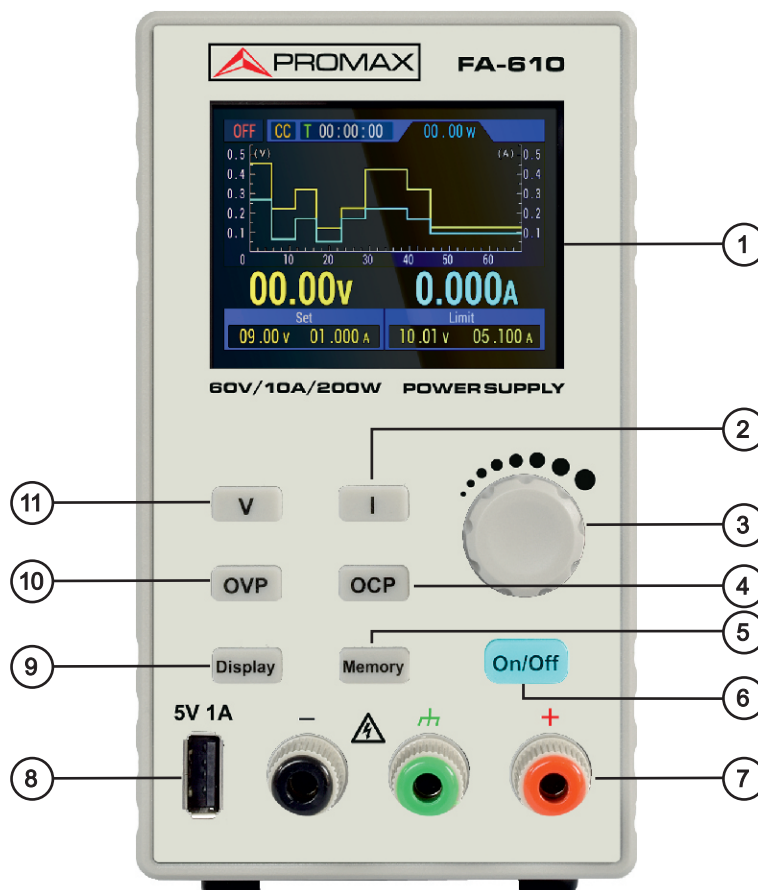


- ① **Display Area:** Display user interface.
- ② **Current Key:** Set current parameters, press to move the cursor when editing parameters.
- ③ **Knob:** Select the main menu or change the value, function equals to the confirmation key.
- ④ **Over Current Setting Key:** Set over current protection parameters, press to move the cursor when editing parameters.
- ⑤ **Memory Key:** 4 sets of channel parameters can be stored for quick output, or long press to enter the List waveform output editing interface.
- ⑥ **On / Off Key:** Turn on/off the channel, or long press to turn on or turn off the power-on automatic startup function.
- ⑦ **Channel Output Terminal:** Output access of channel.
- ⑧ **USB Port:** USB charging port (no read/write function), 5 V / 1 A.
- ⑨ **Display Key:** Number display and curve display switch key.
- ⑩ **Over Voltage Setting Key:** Set over voltage protection parameters, press to move the cursor when editing parameters.
- ⑪ **Voltage Key:** Set voltage parameters, press to move the cursor when editing parameters.



USER INTERFACE

CV: Constant Voltage output.

CC: Constant Current output.

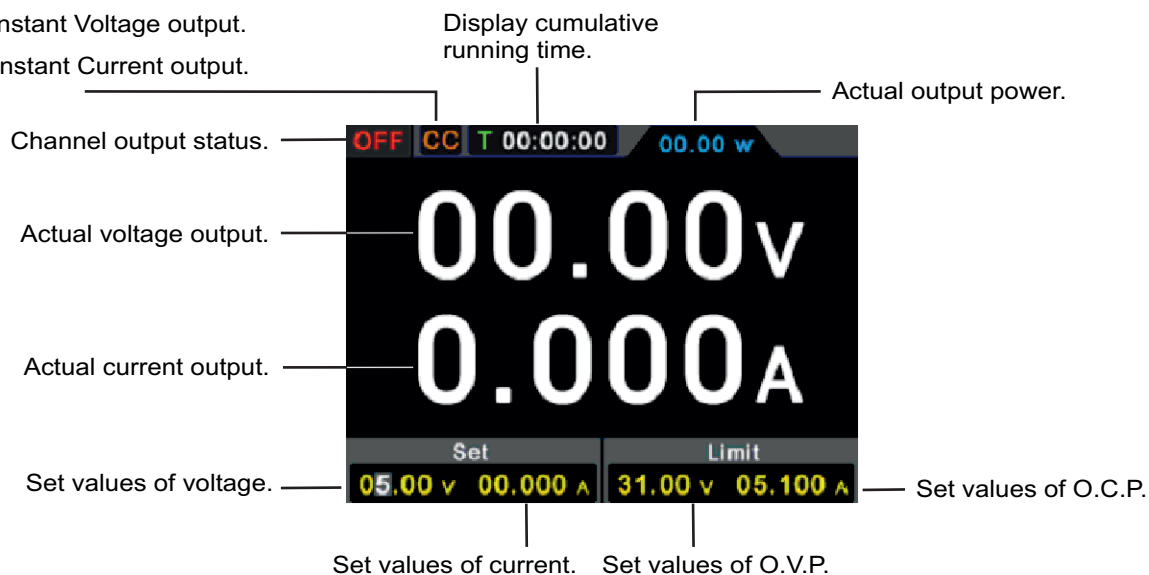

REAR PANEL

- ① **Air vent.**
- ② **Power Button:** Turn on / off the instrument.
- ③ **Fuse:** Power fuse.
- ④ **Conector de alimentación:** Conector de entrada CA
- ⑤ **Device USB Port.**

