


FRONT PANEL



- | | |
|---|---|
| ① Non-contact voltage detector. | ⑥ Auto/Manual range. |
| ② Flashlight. | ⑦ Backlight & Flashlight.
Data Hold. |
| ③ LED indicator. | ⑧ Select frequency/duty cycle.
Frequency in AC voltage/current mode.
Relative Measurements. |
| ④ Display screen. | ⑨ Rotary switch. |
| ⑤ Select DC or AC.
Select Resistance / Continuity / Diode. | ⑩ Input terminals. |

DISPLAY SCREEN

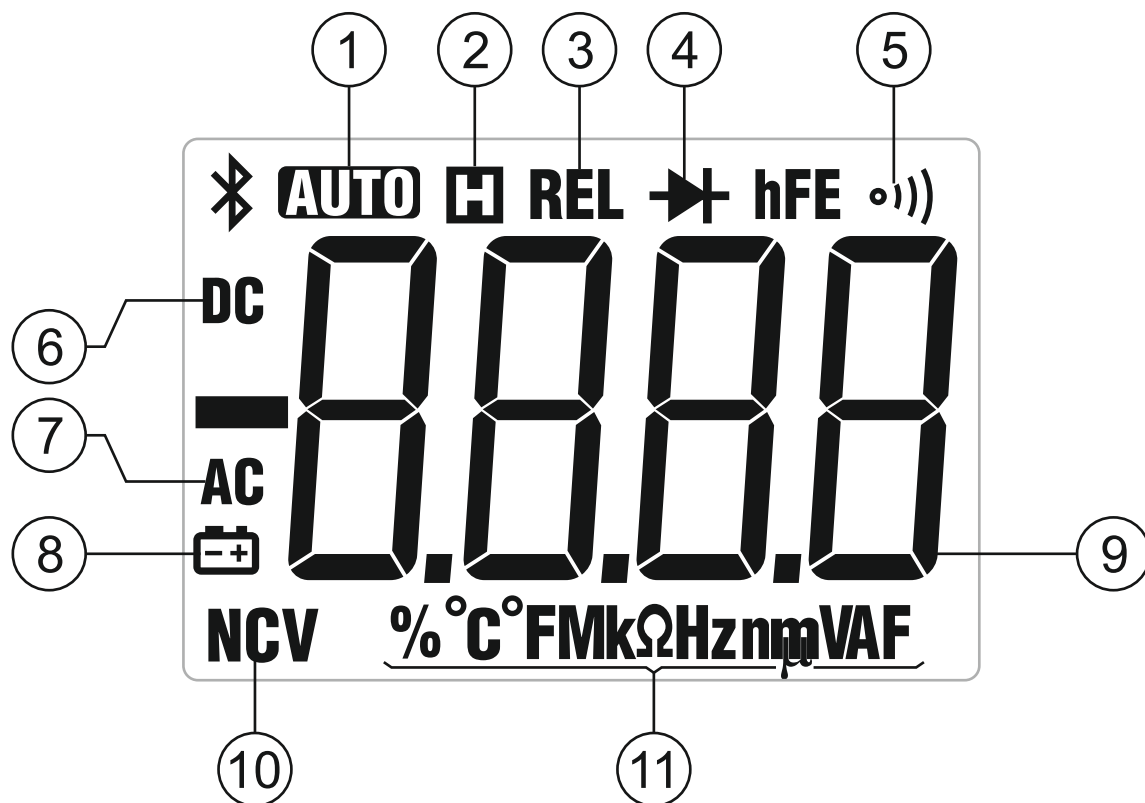

- | | |
|-----------------------------|--|
| ① Auto range. | ⑧ Battery is low. |
| ② Data hold enabled. | ⑨ Measurement display.
"OL" is short for <i>overload</i> , indicates the reading exceeds the display range. |
| ③ Relative enabled. | ⑩ Non-contact Voltage Detect. |
| ④ Diode test selected. | ⑪ Measuring units. |
| ⑤ Continuity test selected. | |
| ⑥ DC. | |
| ⑦ AC. | |

