

FRONT VIEW



- ① It moves along menus. It increases / decreases values.
- ② On / Off button.
- ③ It moves between menu options.
- ④ It accesses to secondary functions.
- ⑤ Cancel / exit.
- ⑥ Start / stop measurement process.
- ⑦ Confirm.



TOP VIEW



- ⑧ **Charge indicator.**
- ⑨ **Connector for AC power supply adapter.**
- ⑩ **Power indicator.**
- ⑪ **USB interface connector.**
- ⑫ **SC/APC optical fibre connector.**
- ⑬ **VLS optical fibre connector**

CAUTION



Invisible laser radiation

Please always avoid looking directly at the optical output or stare at laser beam.

