

FRONT VIEW



- ① Trace Display Area.
 - ② Navigation Window.
 - ③ Zoom Bar.
 - ④ Quick Help Area.
 - ⑤ Common Operation Buttons.
 - ⑥ Info and Function Area.
 - ⑦ Power On / Off.
- | | | |
|--------|---|--|
| Green | → | The system is on or the battery is fully charged when it is powered off. |
| | | |
| Orange | → | Charging battery |
| | | |
| Red | → | The laser of VLC or OTDR is beaming |
| | | |


CAUTION



Invisible laser radiation

Please always avoid looking directly at the optical output or stare at laser beam.

TOP VIEW

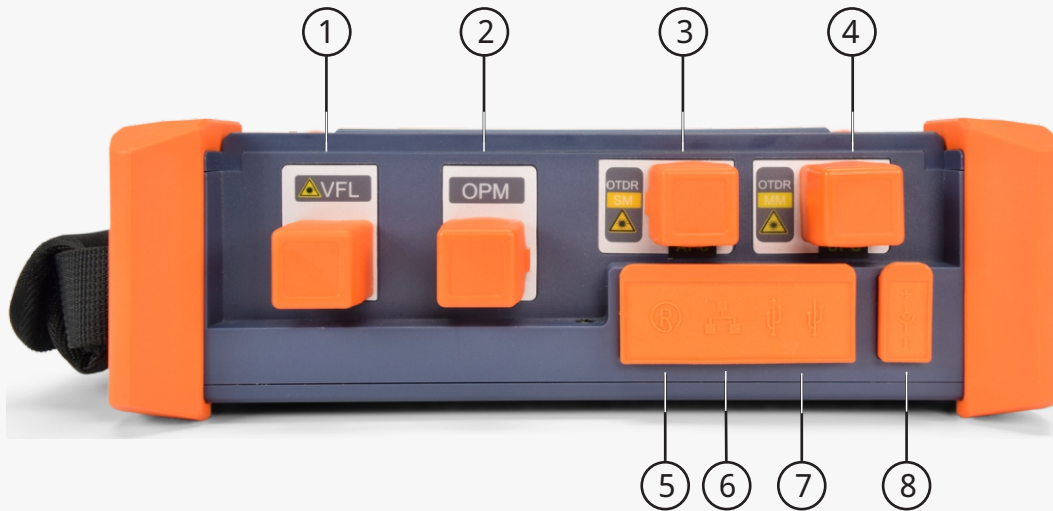

- ① VFL (Visual Fault Locator port).
- ② OPM (Optical Power Meter port).
- ③ OTDR (SM) (OTDR Port Single Mode).
- ④ OTDR (MM) (OTDR Multi-Mode Port).
- ⑤ Reset, (Revert to factory settings and format the meter).
- ⑥ 10 / 100 Mbps Ethernet Port.
- ⑦ USB Port (Connect OTDR with USB devices).
- ⑧ Power (Connect OTDR with AC/DC adaptor).

CAUTION



Invisible laser radiation

Please always avoid looking directly at the optical output or stare at the laser beam.

