

FRONT VIEW



Trademark of the
DVB - Digital Video
Broadcasting Project



SCREEN ICONS REFERENCE

STATUS BAR

- Battery charging**
- Battery not charging.** Yellow level indicates charge left
- USB in serial port mode**
- Satellite band**
- Current voltage, 22 kHz signal and LNB power level**
- Terrestrial band**
- USB flash drive inserted**
- WIFI signal source**
- Current installation**
- Compressed installation**
- SatCR (SCD/EN50494) commands enabled**
- JESS (SCD2/EN50607) commands enabled**
- Joystick multi-function enabled**
Two-letter code indicates the exact function:
 - FR** Frequency tuning
 - CH** Channel tuning
 - SP** SPAN change
 - MK** Marker moving
 - EC** Echo change/zoom
 - AP** Access Point change

Task scheduled

SERVICE LIST SELECTOR

- Digital TV service**
- High Definition TV service**
- Digital radio**
- Data**
- Scrambled service**

DIALOG BOXES

- Error message**
- OK message**
- Question message**
- Warning message**


VIDEO & AUDIO SETTINGS MENU

- TFT backlight brightness**
- Volume**

- ON:** (**<1s**)
- OFF:** (**2s**)




RF ► SETTINGS

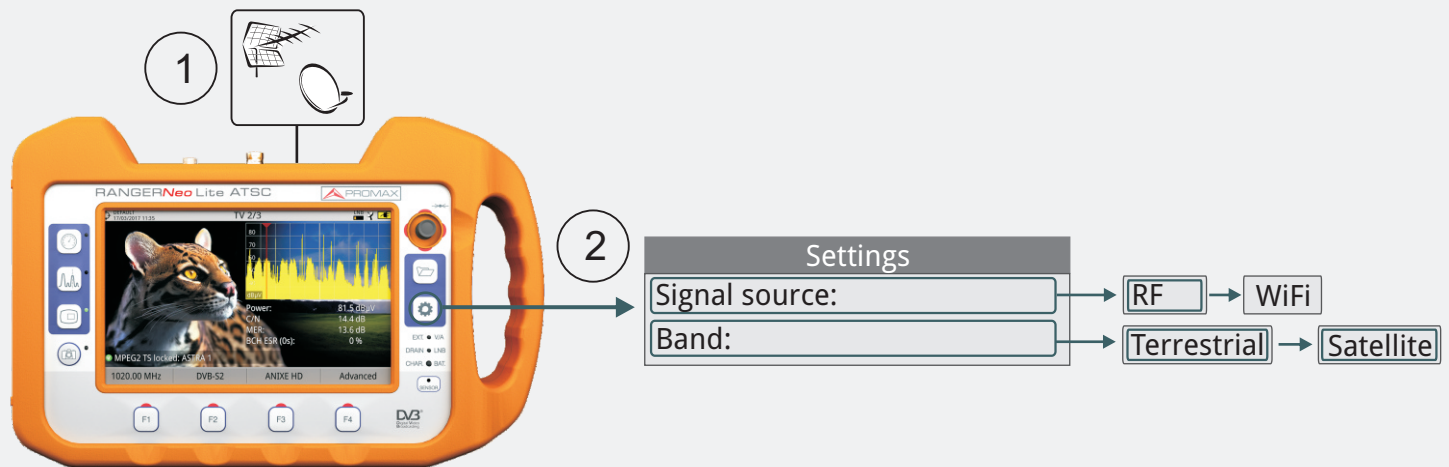


RF ► SCREENS


► MEASUREMENT

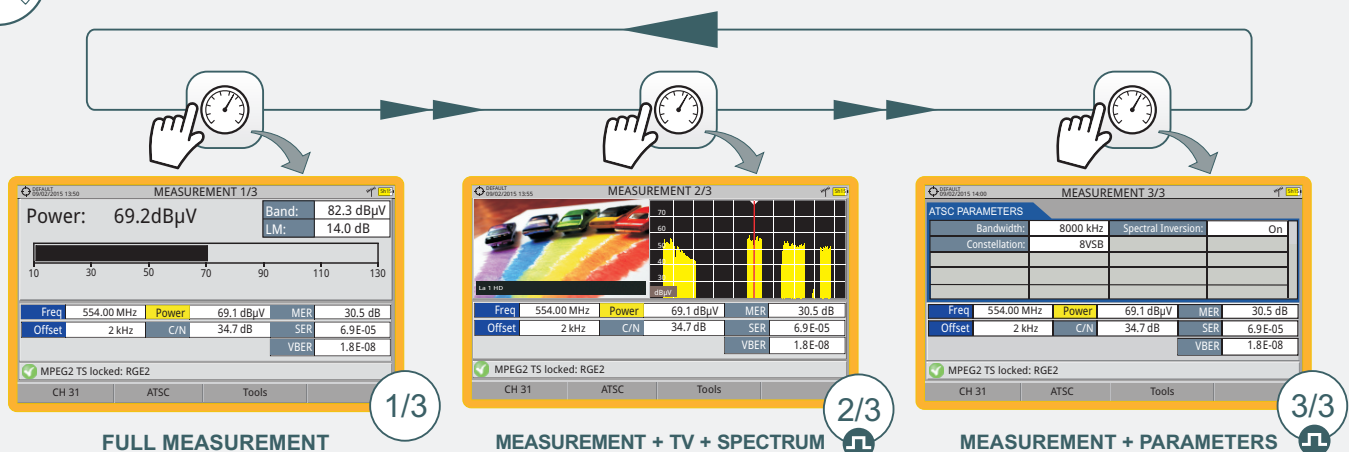

► SPECTRUM ANALYSER

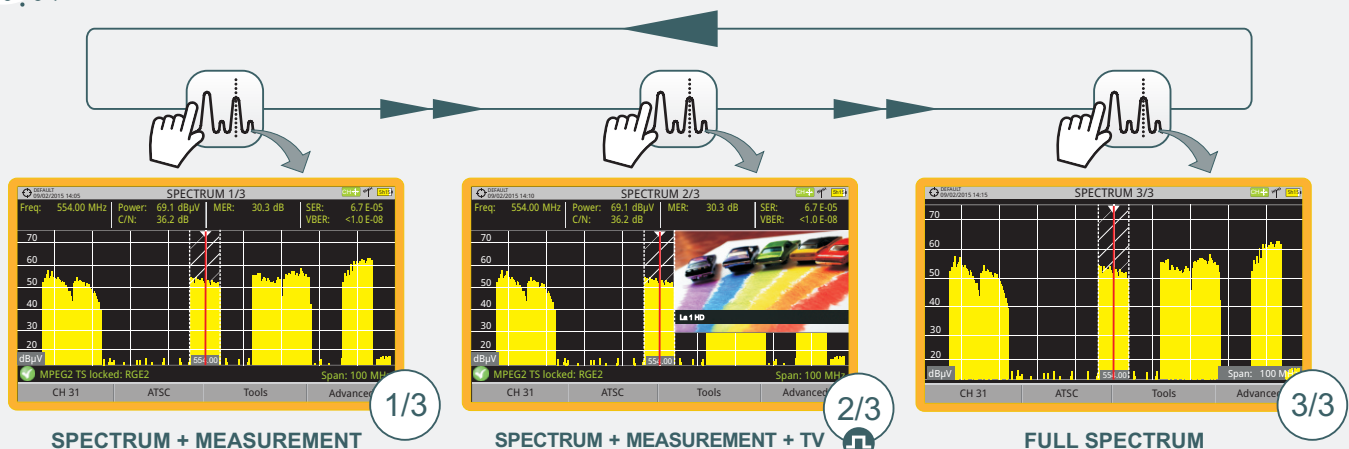


TV MODE



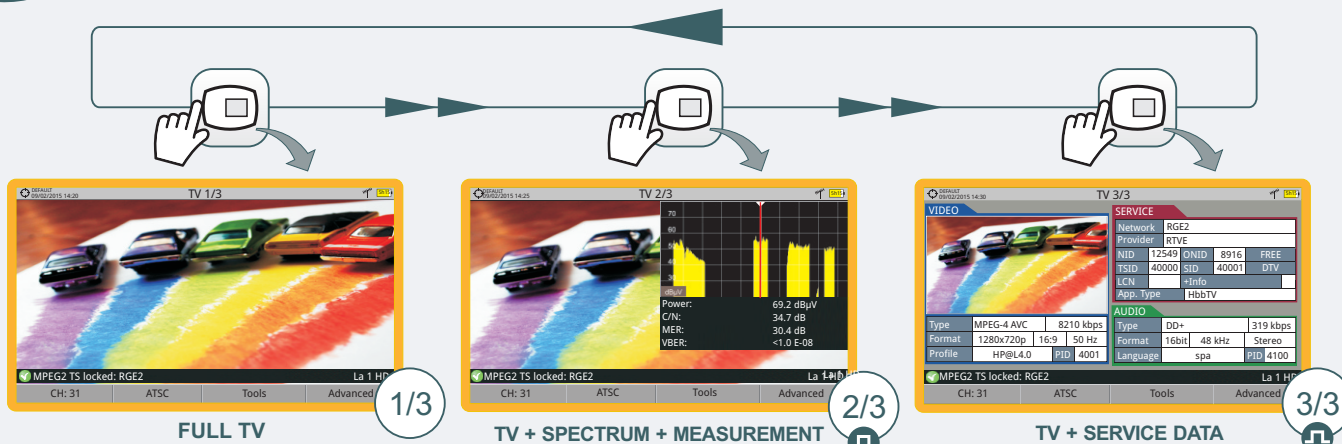


RF




MENUS

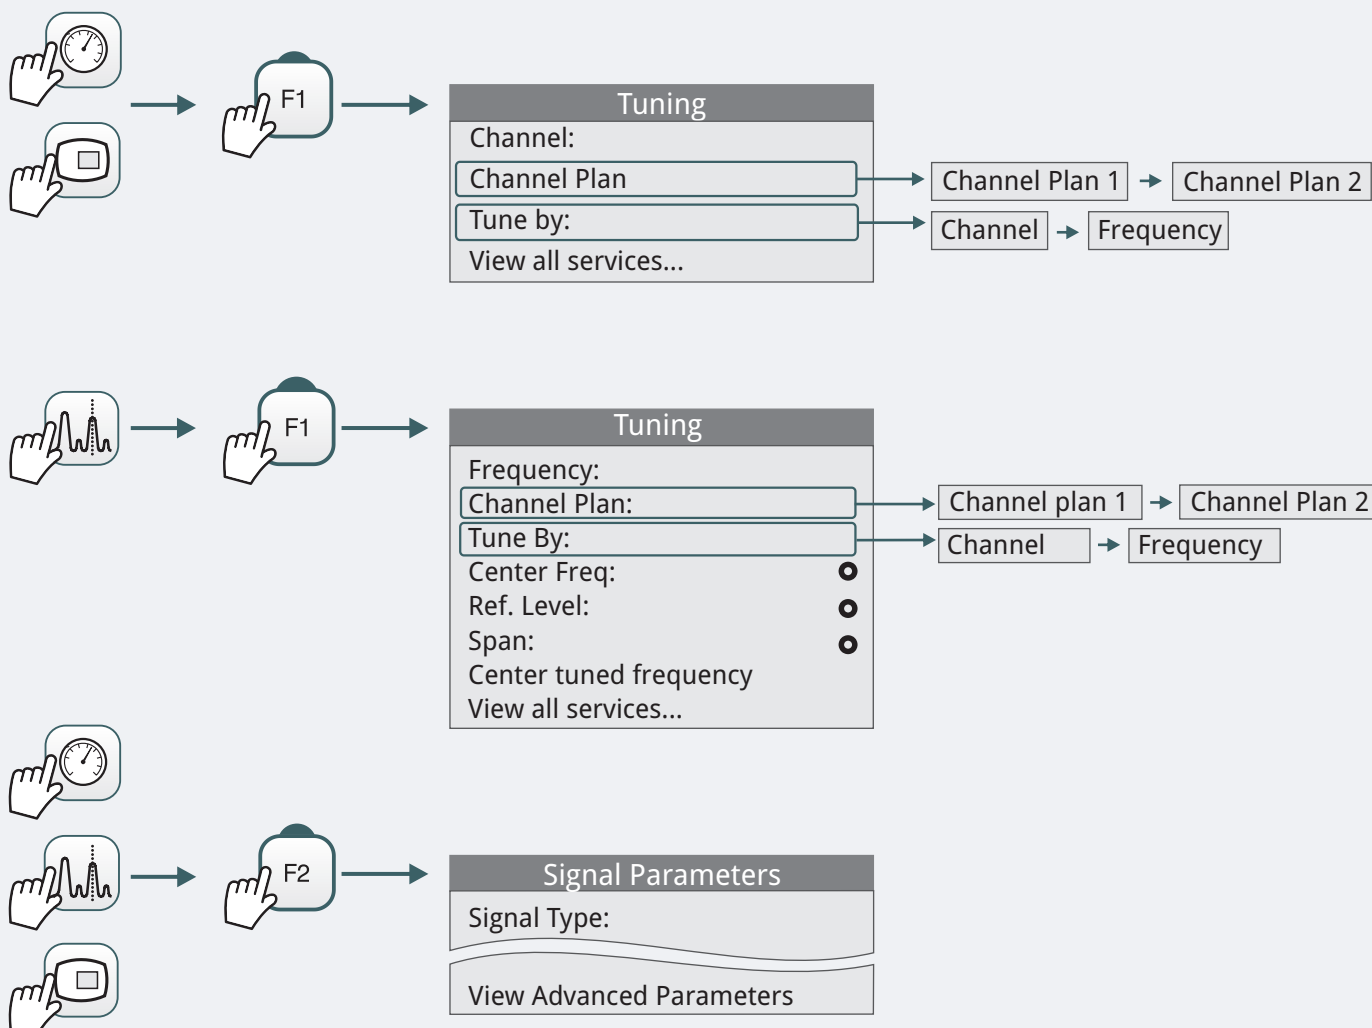

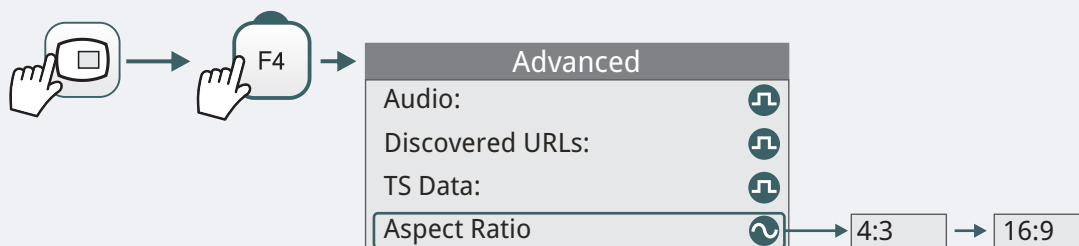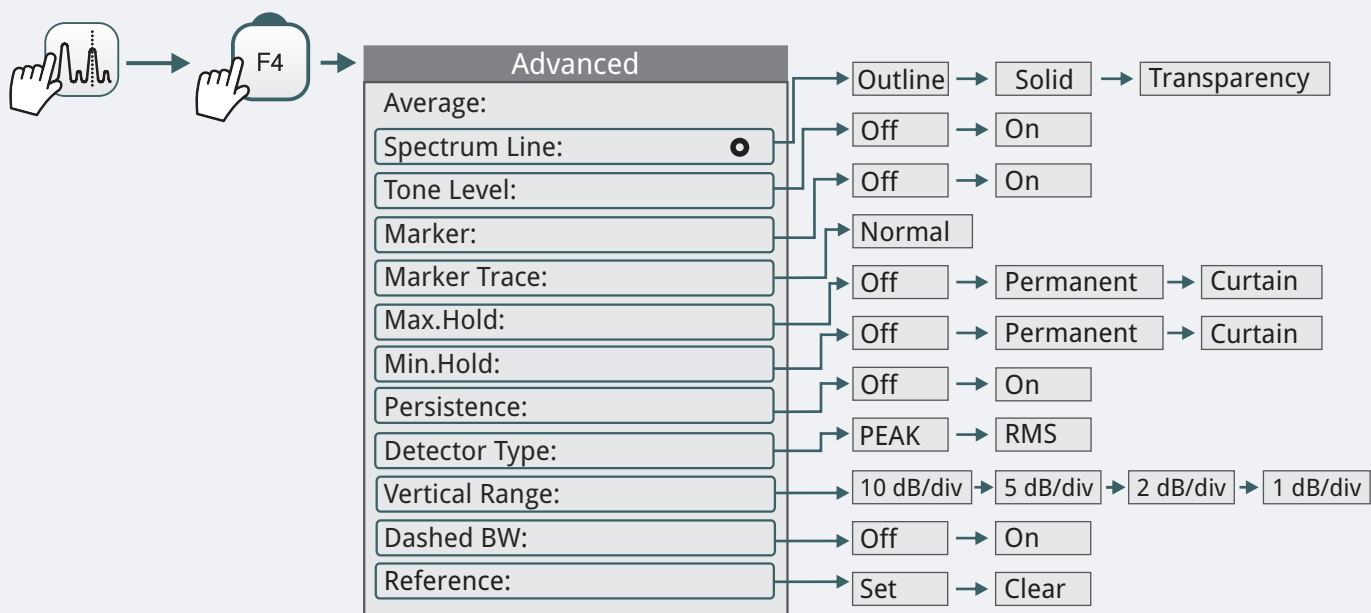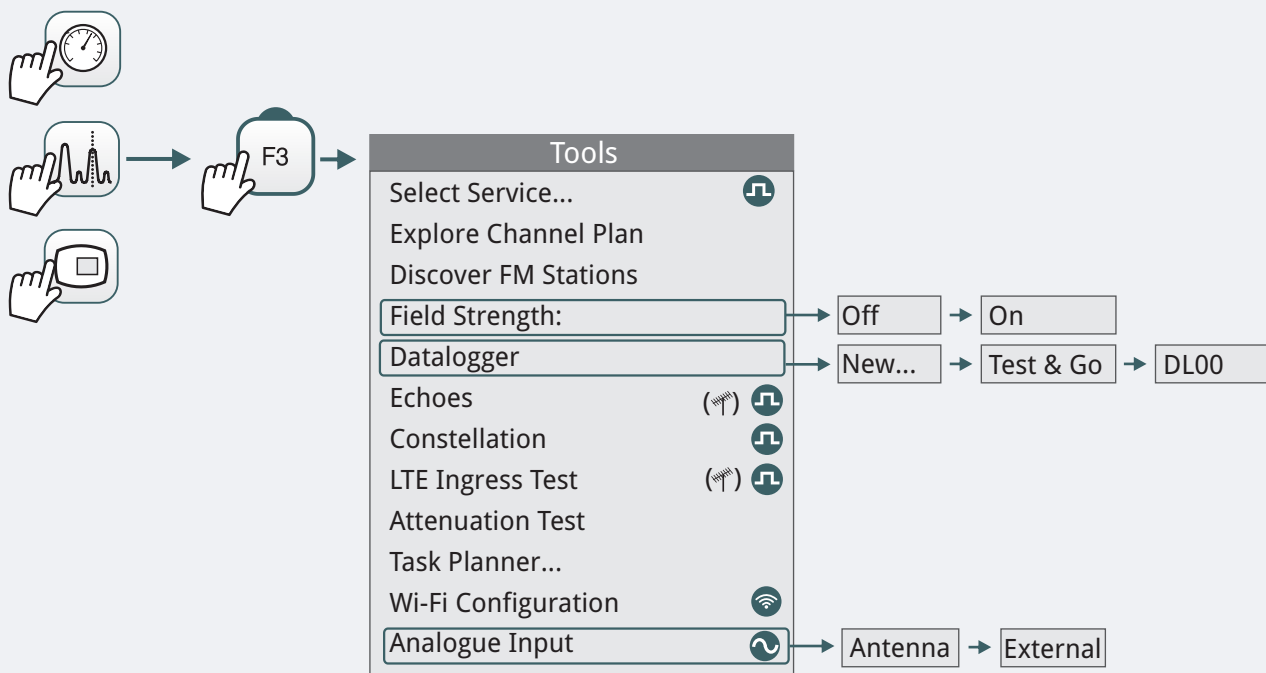

WIFI ► SETTINGS

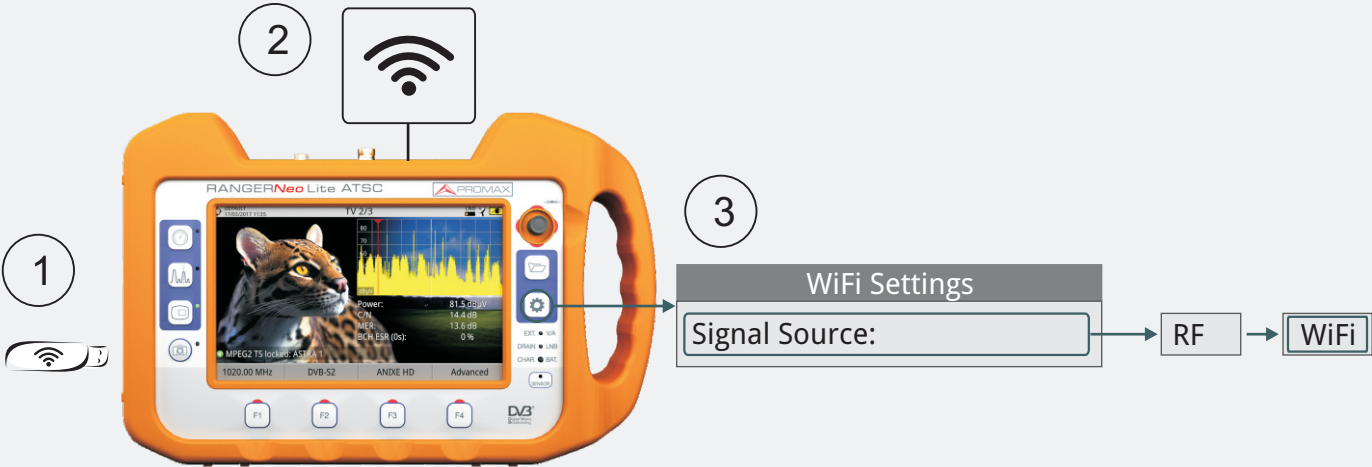


WIFI ► SCREENS

 ► SITE SURVEY


PROMAX 22/12/2016 12:10						SITE SURVEY			
SSID	BSS	CH	RSSI(dBm)	Security	Device				
JAZZTEL	01:23:45:67:89:ab	1	-86	WPA	Wireless Router...				
MOVISTAR	aa:bb:cc:dd:ee:ff	2	-72	WPA2	WAP6969N				
YACOM	98:76:54:32:10:fe	3	-84	WPE					
YOIGO	a1:b2:c3:d4:e5:f6	4	-74	Ninguno					
ORANGE	22:44:66:88:ab:cd	5	-70	WPA					
VODAFONE	13:57:92:46:80:31	6	-88	WPA					
ARRAKIS	ca:ac:ed:de:fb:bf	7	-78	WPA					
TELEFONICA	57:26:21:44:a6:89	8	-76	WPA					
TERRA	11:85:e5:74:0c:53	9	-80	WPA					
WANADOO	b4:07:32:41:a6:1c	10	-82	WPA					
CH 1						Advanced			



WIFI SPECTRUM

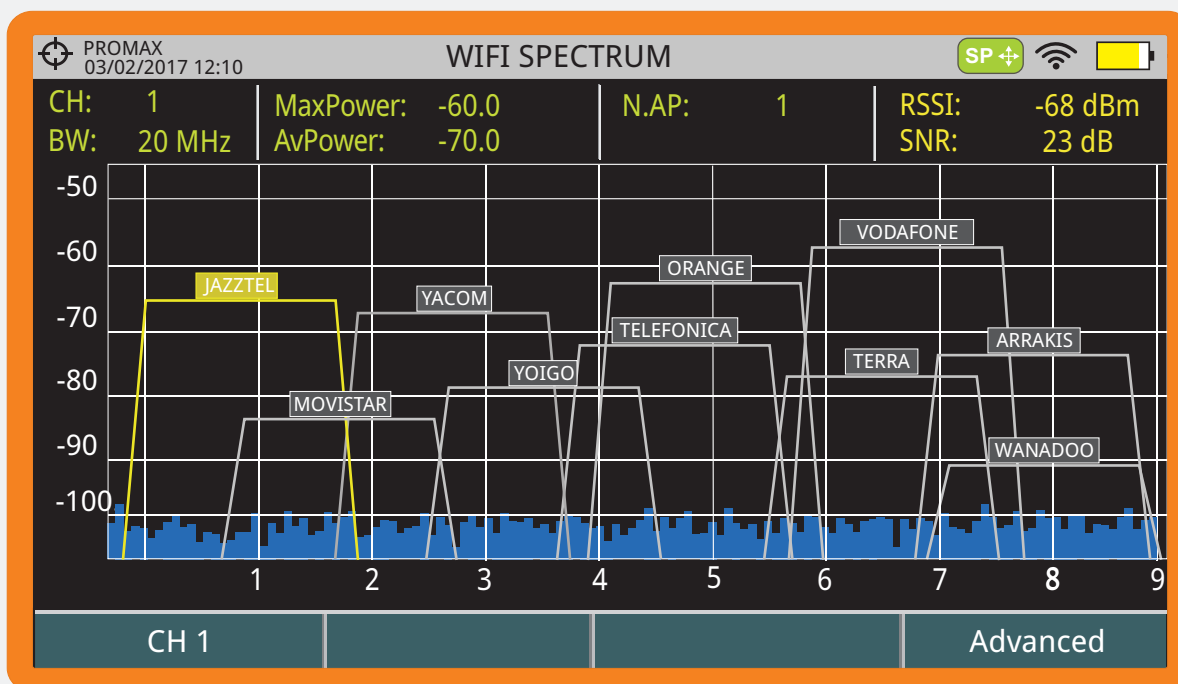

WIFI MENUS

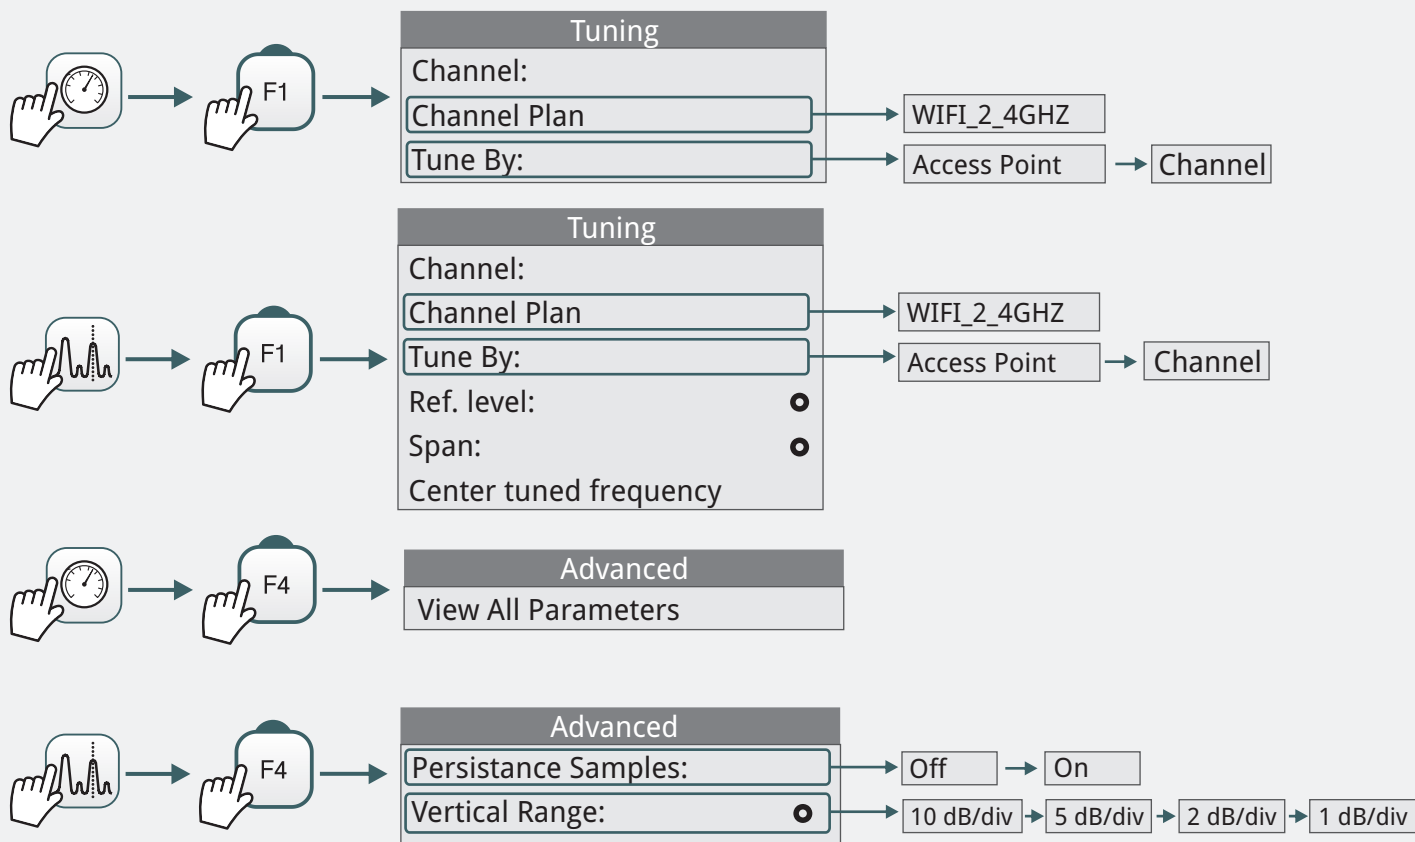





SETTINGS MENU




Terrestrial Settings

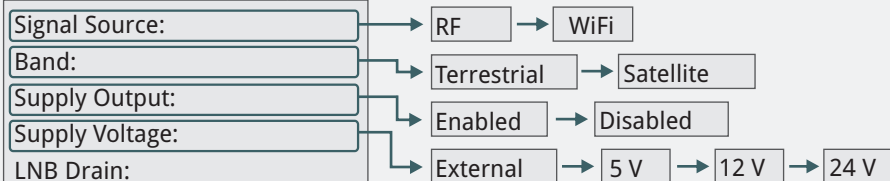


Satellite Settings

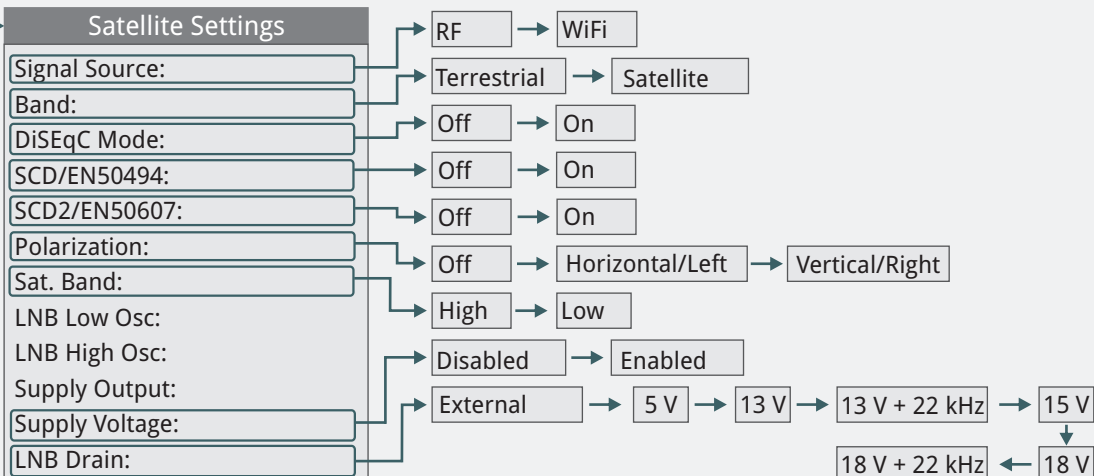

Wi-Fi Settings

 


Video & Audio Settings

 

PREFERENCES MENU




Preferences

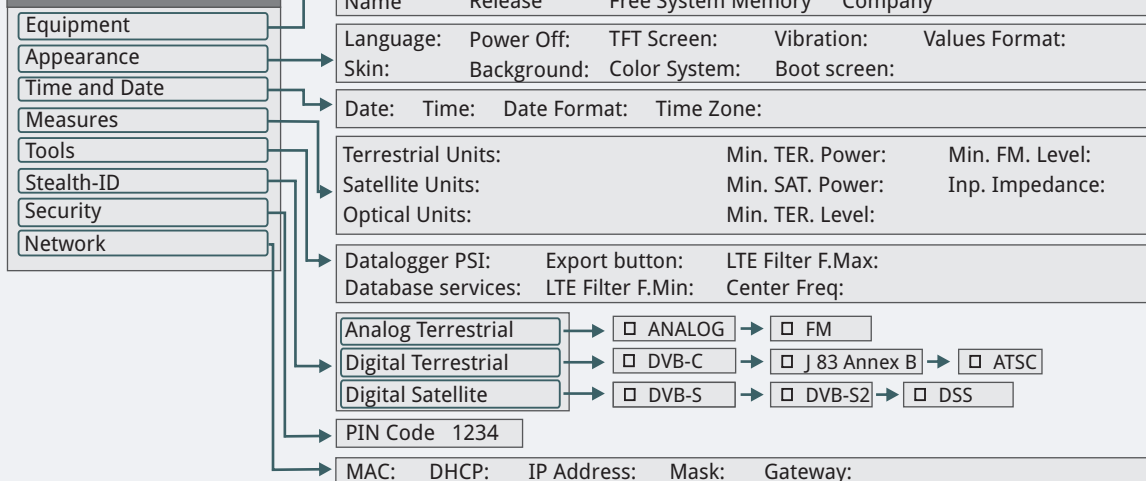




INSTALLATION MANAGEMENT

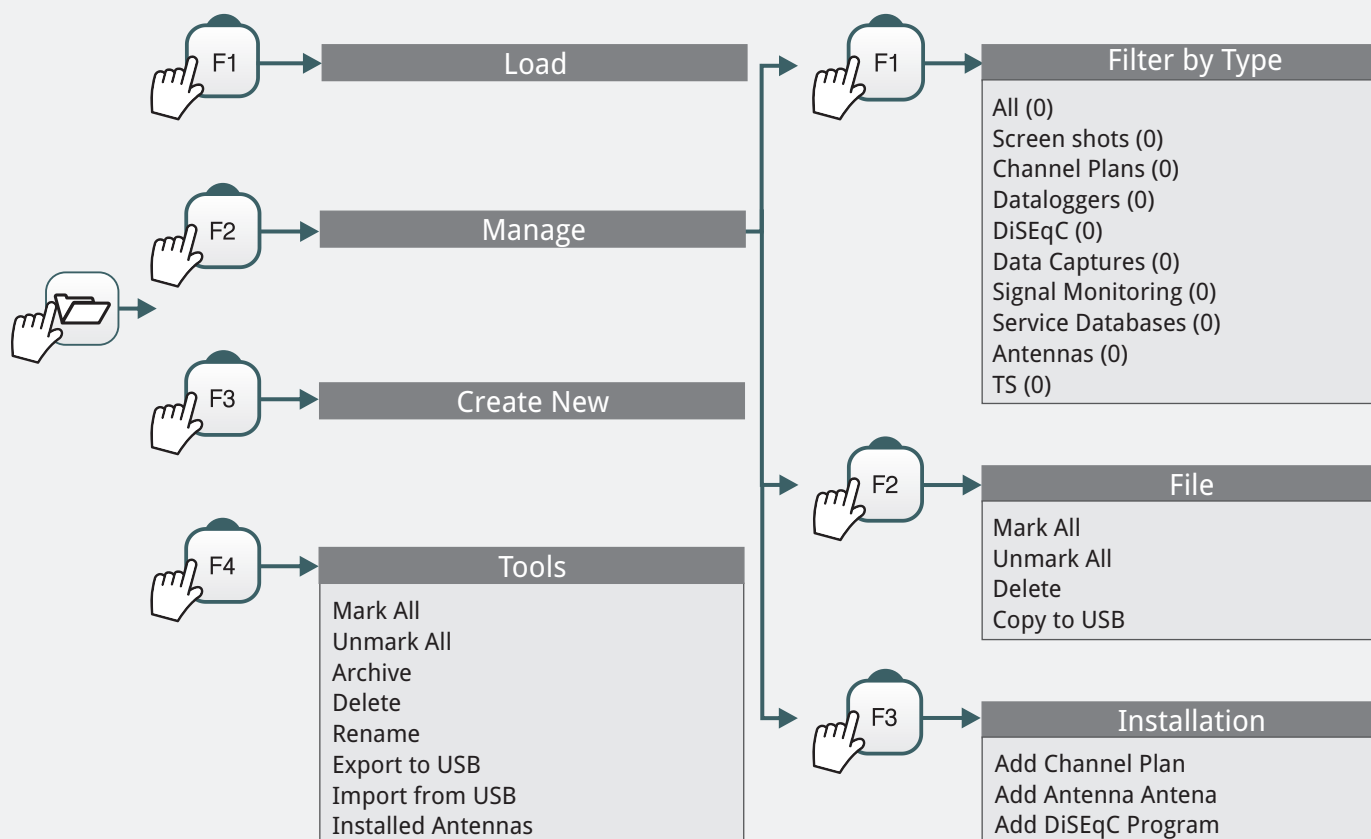




EXPORT* IMAGE / DATA / SPECTRUM

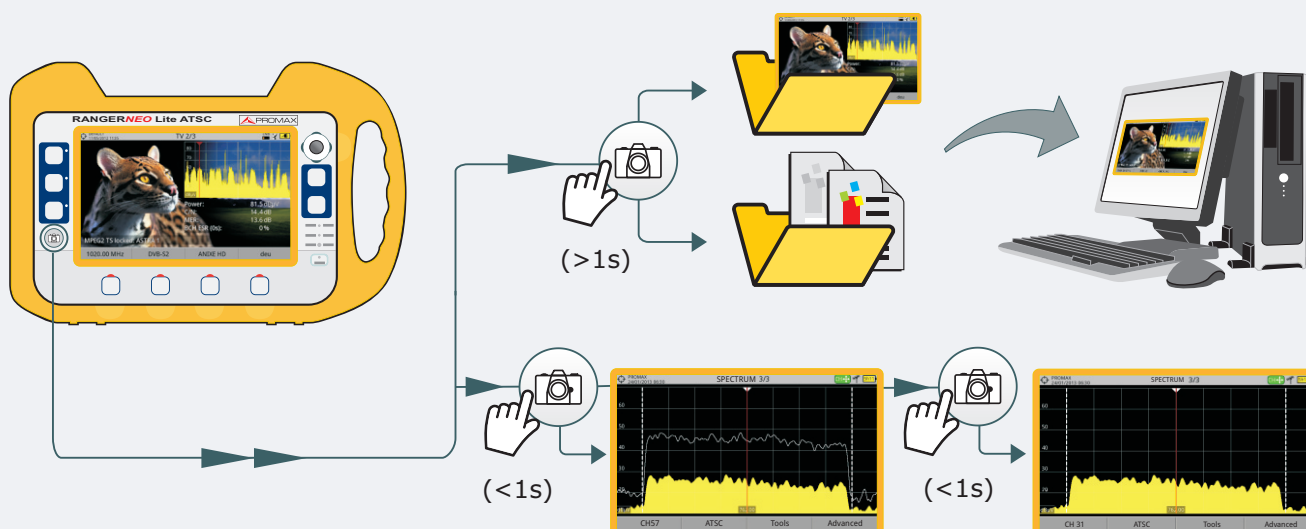

*Export settings in Preferences



▶ JOYSTICK

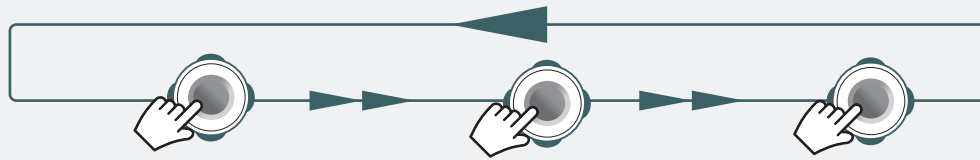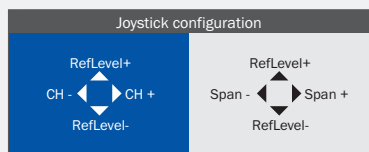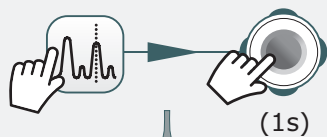

Access Point
change



Frequency
tuning



Channel
tuning



SPAN
Change



Marker moving
(Marker ON)


PARAMETER EDITION



Tuning	
Channel:	44
Channel Plan	CCIR ▶
Tune By:	Channel ▶
Center Freq:	658.00 MHz ●



Tuning	
Channel:	44
Channel Plan	CCIR ▶
Tune By:	Channel ▶
Center Freq:	658.00 MHz ●

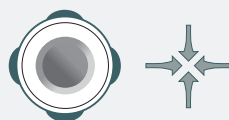


Tuning	
Channel:	44
Channel Plan	CCIR ▶
Tune By:	Channel ▶
Center Freq:	658.00 MHz ●



Tuning	
Channel:	44
Channel Plan	CCIR ▶
Tune By:	Channel ▶
Center Freq:	658.00 MHz ●



Tuning	
Channel:	44
Channel Plan	CCIR ▶
Tune By:	Channel ▶
Center Freq:	658.10 MHz ●

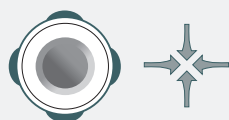

Tuning	
Channel:	44
Channel Plan	CCIR ▶
Tune By:	Channel ▶
Center Freq:	658.10 MHz ●


PARAMETER SELECTION



Advanced	
Average	0 ●
Spectrum Line	Outline ▾




Advanced	
Average	0 ●
Spectrum Line	Outline ▾

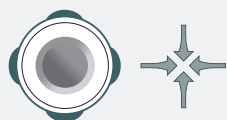

Advanced	
Average	0 ●
Spectrum Line	Outline ▾
	Outline
	Solid
	Trans.



Advanced	
Average	0 ●
Spectrum Line	Outline ▾
	Outline
	Solid
	Trans.


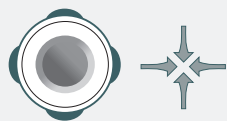


Advanced	
Average	0 ●
Spectrum Line	Solid ▾





TOUCH SCREEN



MENU SELECTION

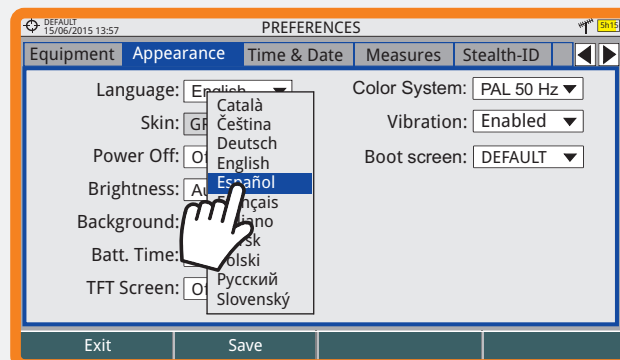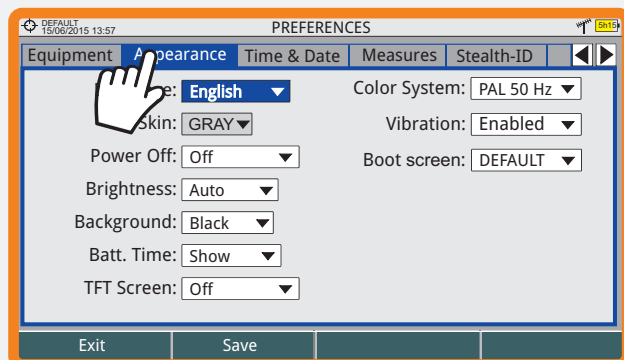



FREQUENCY SELECTION

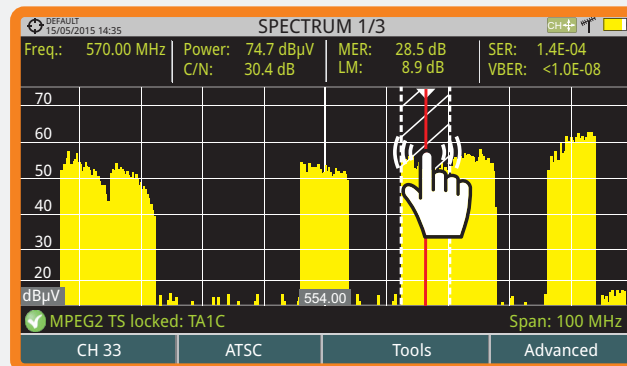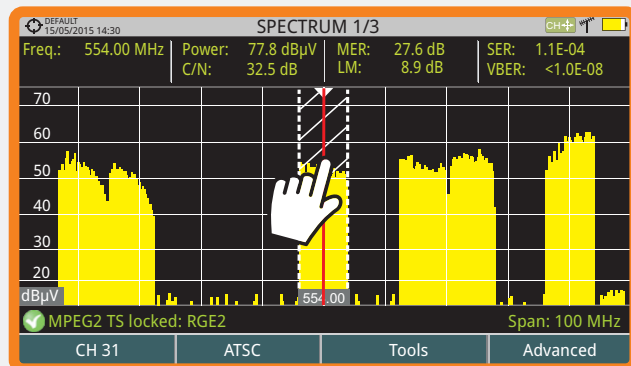

VIRTUAL KEYBOARD WRITING

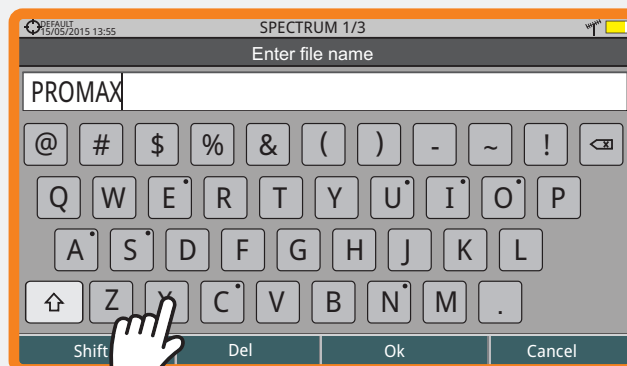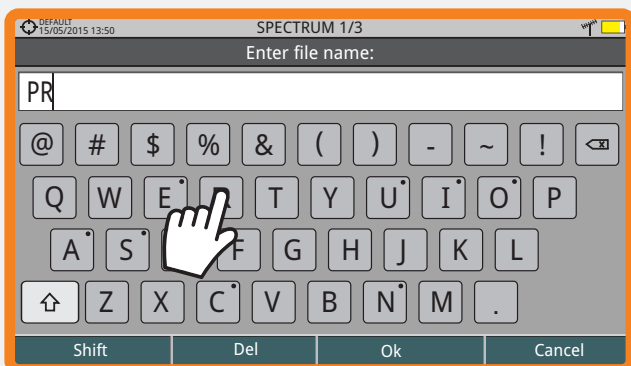



TOOLBAR

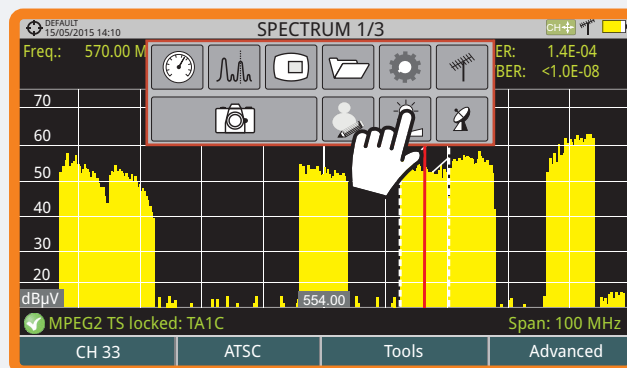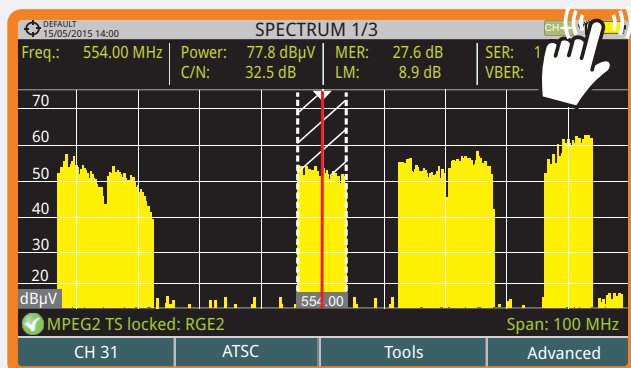



TOOLBAR ICONS

- | | | | | | |
|--|--------------------------|--|------------------|--|------------------------|
| | Measurement Mode | | Settings | | Video & Audio Settings |
| | Spectrum Analyser Mode | | Terrestrial Band | | Preferences |
| | TV Mode | | Satellite Band | | Screen Capture |
| | Installations Management | | | | |


MODE SCREENS

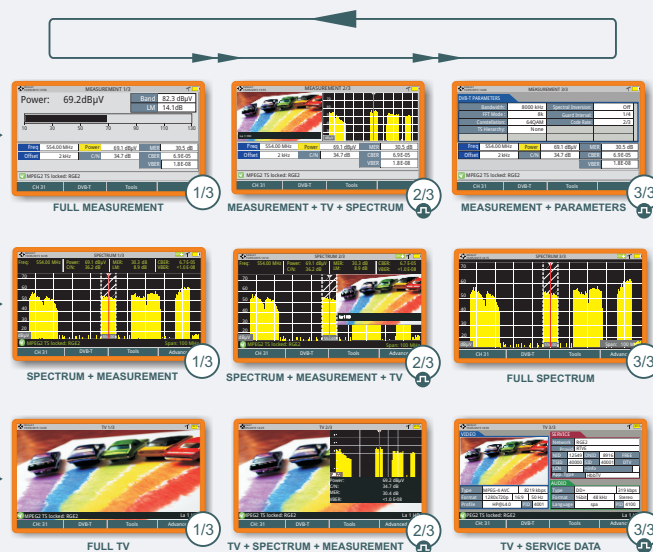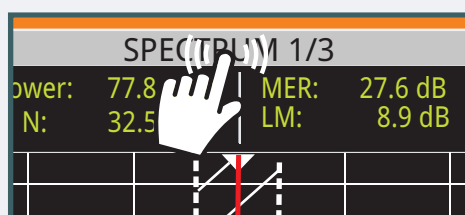

INSTALLATIONS MANAGEMENT

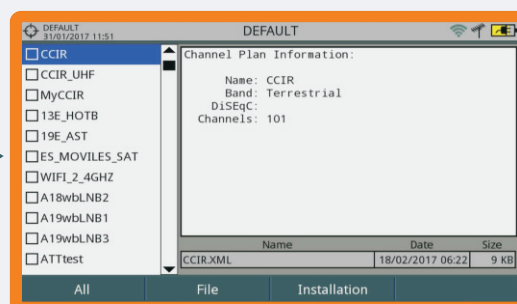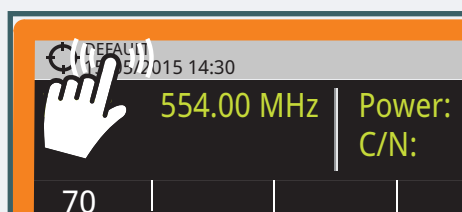


TOP VIEW

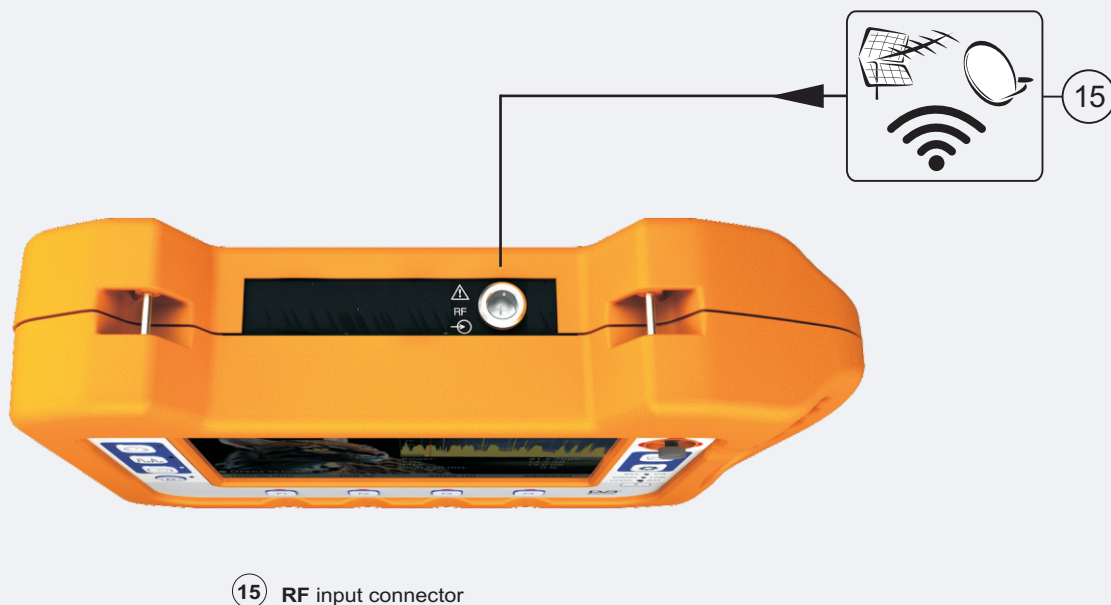

SIDE VIEW

- (16) Power input connector
- (17) ON/OFF button
- (18) Video/Audio input
- (19) HDMI output
- (20) USB connectors
- (21) ETHERNET connector for PC (NetUpdate)

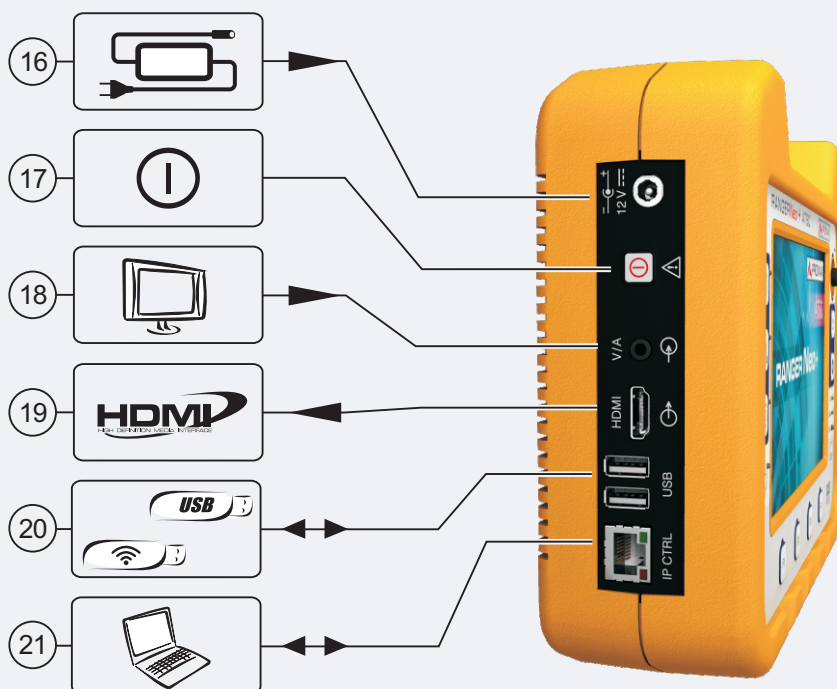

RESET

If the device crashes, press the ON/OFF button for 10 seconds. If the device does not respond then press the F4 key for 6 seconds and then release to reset (see user's manual for more information).

