


***HD* RANGER 2**

TV & SATELLITE ANALYSER



SAFETY NOTES


Read the user's manual before using the equipment, mainly "**SAFETY RULES**" paragraph.


The symbol  on the equipment means "**SEE USER'S MANUAL**". In this manual may also appear as a Caution or Warning symbol.

WARNING AND CAUTION statements may appear in this manual to avoid injury hazard or damage to this product or other property.

MULTIMEDIA CONTENT

You can access instantly to any chapter by clicking on the title of the chapter in the table of contents.

Click on the arrow  at the top right of the page to return to the table of contents.

Throughout this manual are boxes with the symbol . It identifies a direct access to an explanatory video related to the function where it is. User has to click on this icon to watch the video.

All videos are in the PROMAX channel on YouTube, which is accessible through the PROMAX website at: www.promaxelectronics.com

USER'S MANUAL VERSION

Version	Date	Software Version
5.0	May 2016	20.2

- Please update your equipment to the latest software version to maximize its capacity.
- New features in this version of the manual are marked with the label **NEW!**

What's new in manual version 5.0

- IPTV new function: IP Ethernet Frame Viewer.
- IPTV new measures: IPER, DF, MLR, IPTD, IPDV.
- New function "Test & Go".
- Added 40 kHz, 200 kHz and 1MHz resolution filter.
- New function "Service Recording".
- FSM measure is also made with the marker.
- SCD2/EN50607 (JESS): Added channel bandwidth for every User band.
- TV 3/3: parameters in decimal or hexadecimal format and NIT version.
- DVB-S2: warning when TS clock is too high.
- DVB-S/S2: symbol-rate parameter can be set manually.
- In "Preferences" shows the hardware version of the equipment.
- Several minor corrections.
- Screens updated to r20.2.
- Menus updated to r20.2.

What's new in manual version 4.0

- IPTV tool improved (IGMPv3, PING settings, new TRACE tool, TTL displayed, external PING, IP network log, packet rate graph, resources busy, max. interval measure)
- New option: Center frequency available in manual or auto mode.
- HbbTV related link displayed.
- SCD2/EN50607 (JESS) improved.
- Signal monitoring improved (audio and pause options).
- TS Player loop option.
- Task planner for IPTV mode.
- Datalogger for fibre optic.
- TS Analyser shows capture process and PID list.
- New option to work with LTE external filter.
- New option "Center tuned frequency".
- Link Margin (LM) measurement on SPECTRUM screen 1/3 and 2/3.
- Datalogger for "FSM" tool.
- New option to work with radio link down converters (from 1 to 11 GHz).
- More info about HEVC video.
- PLS multistream automatic identification (non-zero PLS).
- New tab "Tools" in "Preferences".
- New logger for "Task Planner".
- Improvement in LBER, VBER, CBER measurements.
- Several minor corrections.
- Screens updated to r19.1.
- Menus updated to r19.1.

What's new in manual version 3.0

- New tool: "Task Planner".
- Identification of HEVC standard (H.265).
- New IPTV screen: "Interarrival packet time".
- TS Analyser: new alarm log with option to export.
- TS Record: option to copy TS to a USB.
- Installation manager updated.
- New option "Marker trace" to use marker over references.
- New signal monitoring viewer.
- IPTV measurement data restructured.
- New "Cell ID" indication in Echoes screen.
- PING function now with response time.
- New option in "Preferences": Input impedance (50/75 Ohm).
- New option in "Preferences": Minimum FM level.
- SatCR now named SCD/EN50494.
- JESS now named SCD2/EN50607.
- Several minor corrections.
- Screens updated to r16.2.
- Menus updated to r16.2.















What's new in manual version 2.0

- Transport Stream Recording.
- New tool: Field Strength meter.
- Improvement in importing files tool.
- New constellation zoom.
- RTP/UDP protocol automatically detected.
- New IPTV measurements screen with more information.
- New PING tool.
- New DHCP option for proper IP address configuration.
- New function for controlling JESS devices.
- PER measurement.
- Bandwidth power and link margin measurement.
- PEAK and RMS detector type.
- New tool: "Discover FM Stations".
- Reference capture in Spectrum Analyser.
- Improved LNB supply management.
- GPS locked/unlocked graphic indication (only for GPS option).
- New options in "Preferences": "Boot Screen"; several in "Equipment"; "Security".
- New option in Spectrum Analyser: "Dashed BW".
- Spectrum Analyser screen 3/3 available for analogue signal.
- Datalogger for "Attenuation test" tool.
- Interactive service detection and identification.
- Independent frequencies for SatCR slots.
- Protection by PIN for some data fields and recovery PIN system.
- Function to recover to the equipment the image from video output.
- DiSEqC commands multiple selection.
- Improvement in copying files to USB with filename > 8 letters.
- Exclusive key for PLP identification.
- User's Manual: New Chapter "General Menu Options".
- New section: "Generic Signal".
- Link in each page to access the contents table.

SAFETY RULES

- * **The safety could not be assured if the instructions for use are not closely followed.**
- * Use this equipment **connected only to systems with their negative of measurement connected to ground potential.**
- * The **AL-103** external DC charger is a **Class I** equipment, for safety reasons plug it to a supply line with the corresponding **ground terminal.**
- * This equipment can be used in **Overvoltage Category I** installations and **Pollution Degree 2** environments.
External DC charger can be used in **Overvoltage Category II**, installation and **Pollution Degree 1** environments.
- * When using some of the following accessories use only the specified ones to ensure safety.:
 - Rechargeable battery
 - External DC charger
 - Car lighter charger cable
 - Power cord
- * Observe all **specified ratings** both of supply and measurement.
- * Remember that voltages higher than **70 V DC** or **33 V AC rms** are dangerous.
- * Use this instrument under the **specified environmental conditions.**
- * When using the power adaptor, the **negative of measurement** is at ground potential.
- * **Do not obstruct the ventilation system of the instrument.**
- * Use for the signal inputs/outputs, specially when working with high levels, appropriate low radiation cables.
- * Follow the cleaning instructions described in the Maintenance paragraph.

* Symbols related with safety:

	DIRECT CURRENT		ON (Supply)
	ALTERNATING CURRENT		OFF (Supply)
	DIRECT AND ALTERNATING		DOUBLE INSULATION (Class II protection)
	GROUND TERMINAL		CAUTION (Risk of electric shock)
	PROTECTIVE CONDUCTOR		CAUTION REFER TO MANUAL
	FRAME TERMINAL		FUSE
	EQUIPOTENTIALITY		EQUIPMENT OR COMPONENT TO BE RECYCLED

Descriptive Examples of Over-Voltage Categories



Cat I Low voltage installations isolated from the mains.

Cat II Portable domestic installations.

Cat III Fixed domestic installations.

Cat IV Industrial installations.



TABLE OF CONTENTS

1 INTRODUCTION	1-1
1.1 Description	1-1
2 SETTING UP	2-3
2.1 Package Content	2-3
2.2 Power	2-4
2.2.1 First charge	2-4
2.2.2 Charging the battery	2-4
2.2.3 Charge/discharge times	2-5
2.2.4 Energy saving	2-5
2.2.5 Smart control battery	2-6
2.2.6 Usage Tips	2-6
2.3 Equipment Details	2-7
2.4 Switching On/Off the equipment	2-9
2.5 Screen Icons and Dialog boxes	2-11
2.6 Menu Tree	2-12
2.7 Controls	2-16
2.7.1 Touch Screen	2-16
2.7.2 Joystick	2-23
2.7.3 Keyboard shortcuts	2-24
2.7.4 Softkeys	2-29
2.7.5 Virtual Keyboard	2-29
2.8 StealthID Function	2-30
2.9 Settings and Configuration	2-32
2.9.1 Settings Menu	2-32
2.9.2 Video & Audio settings	2-36
2.9.3 Preferences Menu	2-36
3 MEASUREMENT MODE 	3-43
3.1 Introduction	3-43
3.2 Operation	3-44
3.3 Screen Description	3-44
3.4 GENERIC Signal	3-46
4 SPECTRUM ANALYSER MODE 	4-47
4.1 Introduction	4-47
4.2 Operation	4-47
4.3 Screen Description	4-48
4.4 Joystick Operation	4-52
4.5 Specific Options	4-54
4.6 Select and edit parameters	4-56
4.7 Locking a signal	4-56
4.8 Satellite Identification	4-56



5 TV MODE	5-58
5.1 Introduction	5-58
5.2 Operation	5-58
5.3 Screen Description	5-59
5.3.1 TV MODE: TV views	5-59
5.3.2 TV MODE: Radio views	5-63
5.4 Specific Options	5-65
5.5 IRG Descriptor	5-65
6 GENERAL MENU OPTIONS	6-67
6.1 F1: Tuning	6-67
6.2 F2: Signal Parameters	6-71
6.3 F3: Tools	6-72
7 TOOLS	7-74
7.1 Transport Stream Analyser	7-74
7.1.1 Description	7-74
7.1.2 Operation	7-74
7.1.3 Table Analyser	7-75
7.1.4 Bitrate Analyser	7-78
7.1.5 Alarms	7-79
7.1.6 PID list	7-81
7.2 Transport Stream Recording	7-82
7.2.1 Description	7-82
7.2.2 Operation	7-82
7.2.3 Menu options	7-84
7.3 Constellation	7-85
7.3.1 Description	7-85
7.3.2 Operation	7-85
7.3.3 Menu options	7-87
7.4 LTE Ingress test	7-88
7.4.1 Description	7-88
7.4.2 Operation	7-88
7.4.3 Menu options	7-91
7.5 Echoes	7-91
7.5.1 Description	7-91
7.5.2 Operation	7-92
7.5.3 Menu options	7-93
7.6 MER by carrier	7-94
7.6.1 Description	7-94
7.6.2 Operation	7-94
7.6.3 Menu options	7-95
7.7 MEROGRAM	7-95
7.7.1 Description	7-95
7.7.2 Operation	7-96
7.7.3 Menu options	7-97
7.8 Spectrogram	7-98
7.8.1 Description	7-98

7.8.2	Operation	7-98
7.8.3	Menu options	7-100
7.9	Attenuation Test.....	7-100
7.9.1	Description	7-100
7.9.2	Operation	7-101
7.9.3	Menu options	7-103
7.10	Signal Monitoring.....	7-104
7.10.1	Description	7-104
7.10.2	Operation	7-104
7.10.3	Menu options	7-106
7.10.4	Settings	7-107
7.10.5	Data viewer	7-108
7.10.6	Data file processing.....	7-109
7.11	Datalogger	7-111
7.11.1	Description	7-111
7.11.2	Operation	7-112
7.11.3	Menu options	7-118
7.11.4	Test & Go	7-119
7.12	Screen and Data capture (Export key)	7-119
7.12.1	Description	7-119
7.12.2	Operation	7-120
7.13	Explore Channel Plan	7-121
7.13.1	Description	7-121
7.13.2	Operation	7-121
7.13.3	Menu options	7-123
7.14	Discover FM stations	7-123
7.14.1	Description	7-123
7.14.2	Operation	7-124
7.14.3	Menu options	7-126
7.15	Field Strength	7-127
7.15.1	Description	7-127
7.15.2	Operation	7-127
7.15.3	Settings	7-128
7.15.4	Creating and importing calibration tables	7-130
7.16	Task Planner.....	7-132
7.16.1	Description	7-132
7.16.2	Operation	7-132
7.16.3	Timer.....	7-135
7.17	Service Recording	7-136
7.17.1	Description	7-136
7.17.2	Operation	7-136
8	IPTV.....	8-138
8.1	Introduction.....	8-138
8.2	Operation	8-138
8.3	Screen Description.....	8-139
8.3.1	Measurement mode.....	8-139

8.3.2	Interarrival Packet Time / Packet Rate Over Time	8-142
8.3.3	TV mode.....	8-143
8.4	Tools	8-145
8.4.1	PING / TRACE.....	8-145
8.4.2	View IP Network Log	8-146
8.4.3	IP Ethernet Frame Viewer	8-147
8.5	Settings	8-147
8.5.1	Multicast Settings	8-147
8.5.2	IPTV parameters and reset measures	8-148
8.5.3	General Settings and Preferences.....	8-148
9	INSTALLATIONS MANAGEMENT	9-150
9.1	Description	9-150
9.2	Operation	9-150
9.3	Installation Management	9-151
9.4	New installation.....	9-155
9.5	Tools for installations	9-155
9.6	Importing Data from USB	9-156
10	CONNECTING TO EXTERNAL DEVICES	10-159
10.1	Mini-USB connector.....	10-160
10.1.1	Connecting the <i>HD RANGER 2</i> (host) to an USB memory (device) ..	10-160
10.1.2	Connecting a computer (host) to the <i>HD RANGER 2</i> (device)	10-162
10.2	V/A Output Connector	10-162
10.3	V/A Input Connector	10-163
10.4	RF Connector	10-163
10.4.1	DiSEqC commands.....	10-163
10.4.2	SCD/EN50494 (SatCR) commands	10-164
10.4.3	SCD2/EN50607 (JESS) commands	10-165
10.5	HDMI Output	10-168
10.6	Common Interface Slot.....	10-168
10.7	TS ASI Input / Output	10-170
10.7.1	TS-ASI Input.....	10-170
10.7.2	TS-ASI Output.....	10-171
10.8	IP network.....	10-171
11	SPECIFICATIONS 	11-172
11.1	General Specifications	11-172
11.2	Measurement Mode.....	11-175
11.3	Spectrum Analyser Mode	11-178
11.4	TV Mode.....	11-180
11.5	Tools	11-181
11.6	IPTV	11-182
11.7	Transport Stream Analyser	11-183
11.8	Options	11-184
12	MAINTENANCE 	12-186
12.1	Considerations about the Screen.....	12-186
12.2	Cleaning Recommendations	12-186

ANNEX 1	SIGNALS DESCRIPTION	1
ANNEX 2	HOW TO POINT A DISH ANTENNA	15
ANNEX 3	DiSEqC COMMANDS	23
ANNEX 4	REMOTE CONTROL COMMANDS	33
ANNEX 5	OP-002-PS: OPTICAL + 5 GHz RF AUXILIARY.....	56
ANNEX 6	OP-002-GPS: SIGNAL COVERAGE OPTION	70
ANNEX 7	OP-002-DAB: DAB/DAB+ OPTION	84
ANNEX 8	DIGITAL DIVIDEND (LTE).....	88
ANNEX 9	MULTIMEDIA CONTENT	94



TV & SATELLITE ANALYSER

HD RANGER 2



1 INTRODUCTION

1.1 Description

The new **HD RANGER 2** is the sixth generation of field meters that **PROMAX** launches. As each new generation, it represents an evolution from the previous, since it integrates the latest technological innovations and develops applications for the new demands and needs that have emerged in recent years.

The new **HD RANGER 2** has been created with the aim to make easy the user experience. From its ergonomic design and stylized lines to the reduction of keys and the easy use of its interface, everything has been designed so the user has a simple tool to use but powerful and useful.



Figure 1.

The **HD RANGER 2** is a universal analyser that covers several of the most popular standards of the DVB family, as well as formats such as MPEG-2 or MPEG-4 and Dolby audio. There is also the possibility of an extension to work in fibre optics installations, DAB/DAB+ and GPS (see these options on the manual annex).



Besides the basic functions of TV meter and spectrum analyser for terrestrial and satellite band, it provides additional tools, such as the detection of 4G signal interferences (some of its working frequencies are close to the TV bands), the diagrams constellations or the echoes detection.

The **HD RANGER 2** has an application to manage data generated at each installation. This feature helps the user to manage information generated so he can access it at any time or download it to a PC for further analysis.

The **HD RANGER 2** has been designed and developed entirely in the European Union. A multidisciplinary team of highly qualified professionals has dedicated effort and commitment to the development of a powerful, efficient and reliable tool. During the manufacturing process, all used materials have been subjected to a strict quality control.

In an effort to facilitate its work to professionals, our long experience ensures an after sales quality service, which includes software updates and upgrades for free.



Figure 2.



[Click here to watch this video: Introducing the HD RANGER Series](#)



[Click here to watch this video: Introducing the HD RANGER 2](#)



2 SETTING UP

2.1 Package Content

Check that your package contains the following elements:

- **HD RANGER 2** Analyser.
- External DC charger.
- Mains cord for external DC charger.
- Car lighter charger.
- "F" Adapters (3 units).
 - "F" / H - BNC / H Adapter.
 - "F" / H - DIN / H Adapter.
 - "F" / H - "F" / H Adapter.
- Support belt and carrying bag.
- USB On-the-go (OTG)(A) Male - Mini USB (B) Male cable.
- USB cable (A) Female - Mini USB (B) Male cable.
- 4V/RCA Jack Cable.
- Transport suitcase.
- Quick Start Guide.

NOTE: Keep the original packaging, since it is specially designed to protect the equipment. You may need it in the future to send the analyser to be calibrated.



2.2 Power

The **HD RANGER 2** is powered by a 7.2 V built-in rechargeable Li-Ion battery of high quality and long operation time.

This equipment can operate on battery or connected to the mains using a DC adapter. An adapter is also supplied to use with the power connector car (cigarette lighter).

2.2.1 First charge

The equipment comes with the battery half charged. Depending on the time elapsed from first charge and environmental conditions may have lost some of the charge. You should check the battery level. It is advisable a first full charge.

2.2.2 Charging the battery


Connect the DC power adapter to the equipment through the power connector on the left side panel (see figure 3).



Figure 3.

Then connect the DC power adapter to the mains via the mains cord. Ensure that your mains voltage is compatible with the adapter voltage.

For a **fast** charging of the battery is necessary to switch off the equipment.

If the equipment is ON, the battery charging will be slower, depending on the type of work you are doing. When connecting the equipment to the mains the mains connected symbol  appears inside the battery icon.



When the equipment is connected to the mains, the CHARGER indicator remains on. This indicator changes its colour according to the percentage of battery charge:

- RED** Less than 80 % of charge.
- ORANGE** Between 80 % and 90 % of charge.
- GREEN** 100% full charge.

When switching on the equipment, the battery voltage is checked. If the tension is too weak to start, the LED EXT and DRAIN flashes and the equipment does not start up. In this case please charge the battery immediately.

2.2.3 Charge/discharge times

Average charging time with the equipment off (fast charge):

- 3 hours to achieve an 80 % charge.
- 5 hours to achieve a 100 % charge.

With the equipment on (slow charge):

- 5 hours to achieve an 80 % charge.
- 8 hours to achieve a 100 % charge.

Average discharge time (with external supply disabled):

- With the battery full charge the average battery time is 5:30 hours.
- With the battery at 80% charge the average battery time is 4 h.

2.2.4 Energy saving

These options are available in the **Preferences** menu, pressing the  key for 1 s.

- Power Off:** It allows the user to select the time to power off, which is the time after which the equipment shuts down automatically unless user press any key.
- TFT Screen:** User can select a time after which the TFT screen turns off, but the equipment is still running normally. The equipment can measure (for example, making a datalogger or channel exploration) and the battery will last longer, about 10 % more. The screen turns on by pressing any key. Time options are: off, 1, 5, 10 or 30 minutes.



2.2.5 Smart control battery

The built-in battery of the equipment is of the "**smart**" type, which means that reports its state of charge. This information is displayed inside the battery icon in the form of the average time available. In this way the user can know at any time the remaining battery level.

The remaining time charge that appears is calculated according to the work that has been doing. If you activate the external supply of the equipment, the average time would be reduced according to the increase in consumption that occurs.

2.2.6 Usage Tips

The battery is losing storage capacity as you go through its life. Contact your **PROMAX** distributor when necessary to replace the battery.

To prolong battery life the user should follow these tips:

- In case of providing a long inactivity period of the equipment it is advisable to make every 3 months a charge / discharge cycle and a subsequent partial charge (40% aprox.).
- It is advisable to keep it in a cool place and away from heat.
- You should avoid keeping the battery for a long period of time at full load or fully discharged.
- There is not necessary to wait to fully discharge before a charge because these batteries have no memory effect.

2.3 Equipment Details

■ Front View



Figure 4.



■ Side view

Power input connector

ETHERNET connector

Video/Audio input

ASI-TS input

Video/Audio output

ASI-TS output

Mini-USB connector

ON / OFF slide switch

HDMI output



Figure 5.

■ Top view

FC-APC connector (optical signal input)*

SMA connector (RF aux. input signal)*

BNC female connector (RF signal output)

F male connector (RF signal input)



Figure 6.

* **Optical Option.** Refer to annex.



■ **Bottom view**



Figure 7.

2.4 **Switching On/Off the equipment**

This analyser is designed for use as a portable equipment and it does not require any previous installation.

► **Switching On:**


- 1 Slide for a while (approximately one second) the power slide switch located on the left side of the equipment.
- 2 When all indicators light up at once release the switch, which returns to its rest position.
- 3 The boot screen (user can select the boot screen from "Preferences" menu) appears and also a progress bar that indicates the system load. At the top left corner it shows the equipment model and the installed software release detected.
- 4 After the system load, the same view and screen before shutdown appears.




► **Switching Off:**

- 1 Use the power slide switch located on the left side of the equipment. There are two options:
Short slide down (<1 s): A menu on screen allows the user to select between power off or reboot.
Long slide down (>1 s): The equipment turns off directly.
- 2 When the screen goes off, user should release the switch, which returns to its rest position.
- 3 The boot screen picture appears and also a bar showing the system shutdown progress.
- 4 The equipment keeps its last status (mode and screen) which is recovered when power on.

► **Reset:**

- 1 Press the  key for 5 seconds. The equipment automatically turns off. Use only in case of system crash.

In the **PREFERENCES** menu  (press 1s), APPEARANCE tab, option "**Off**" the user can activate the automatic shutdown option, selecting a waiting time (time without pressing any key) after which the equipment turns off automatically.



2.5 Screen Icons and Dialog boxes

On the screen are some icons that provide useful information to the user about the current status of the instrument.


	Battery charging.		Warning.
	Battery not charging. Yellow level indicates charge left.		USB flash drive inserted.
	Battery not charging, time left indicator.		LTE filter enabled.
	USB in serial port mode.		Current installation.
			GPS locked.
			GPS unlocked.
	Satellite band.		SATCR (SCD/EN50494) commands enabled.
	Current voltage, 22 kHz signal and LNB power level.		JESS (SCD2/EN50607) commands enabled.
			5 GHz RF Auxiliary Input
	Terrestrial band.		Task scheduled.
			Multi-function Joystick enabled. Two-letter code indicates the exact function:
	IPTV mode enabled.	FR Frequency tuning. CH Channel tuning. SP Span change. MK Marker moving. EC Echo/zoom change.	
	Compressed installation.		
	OK.		
	Searching.		



2.6 Menu Tree



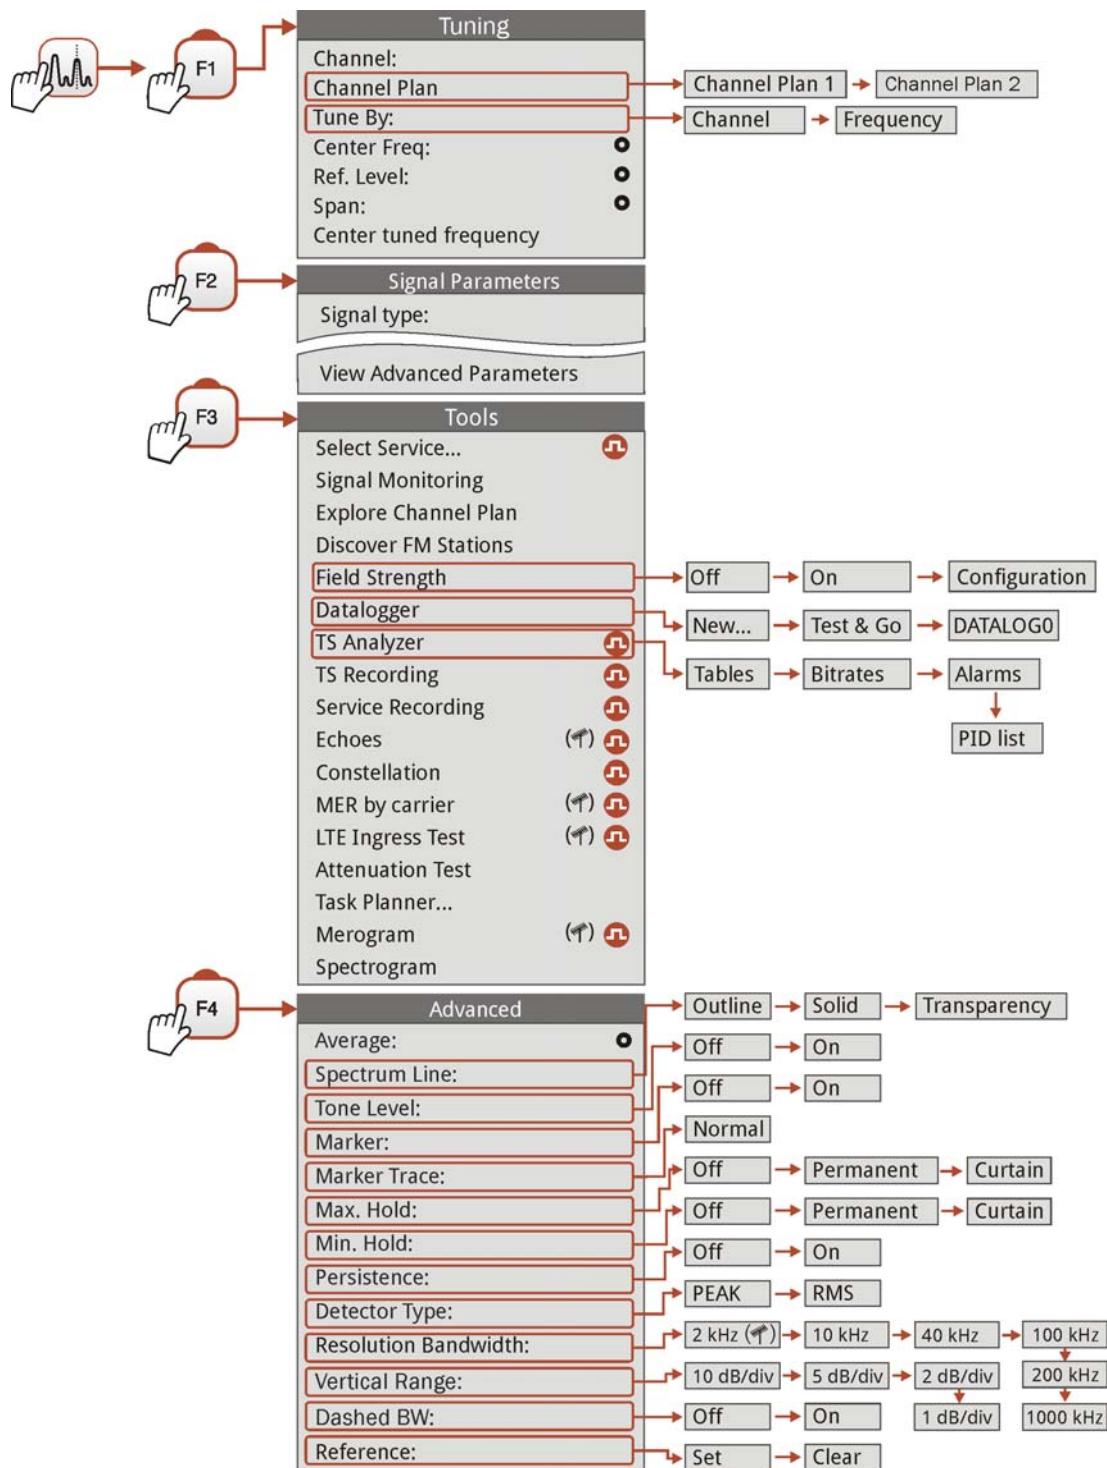SPECTRUM ANALYSER MENU



Only available for **digital channels**



Option available for **terrestrial band**



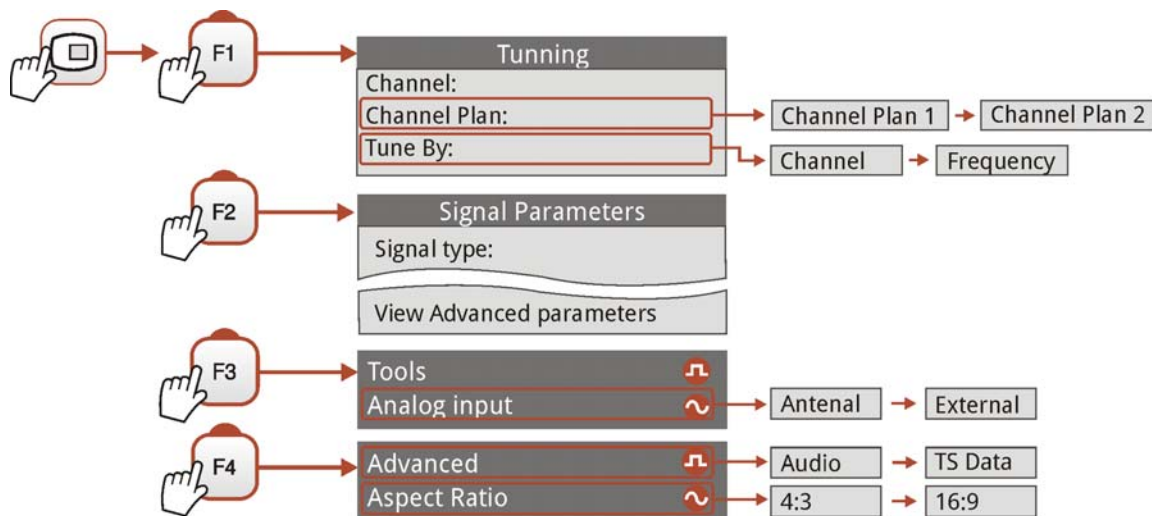
Only available for **analogue channels**




Option available for **satellite band**



TV MENU



MEASUREMENT MENU

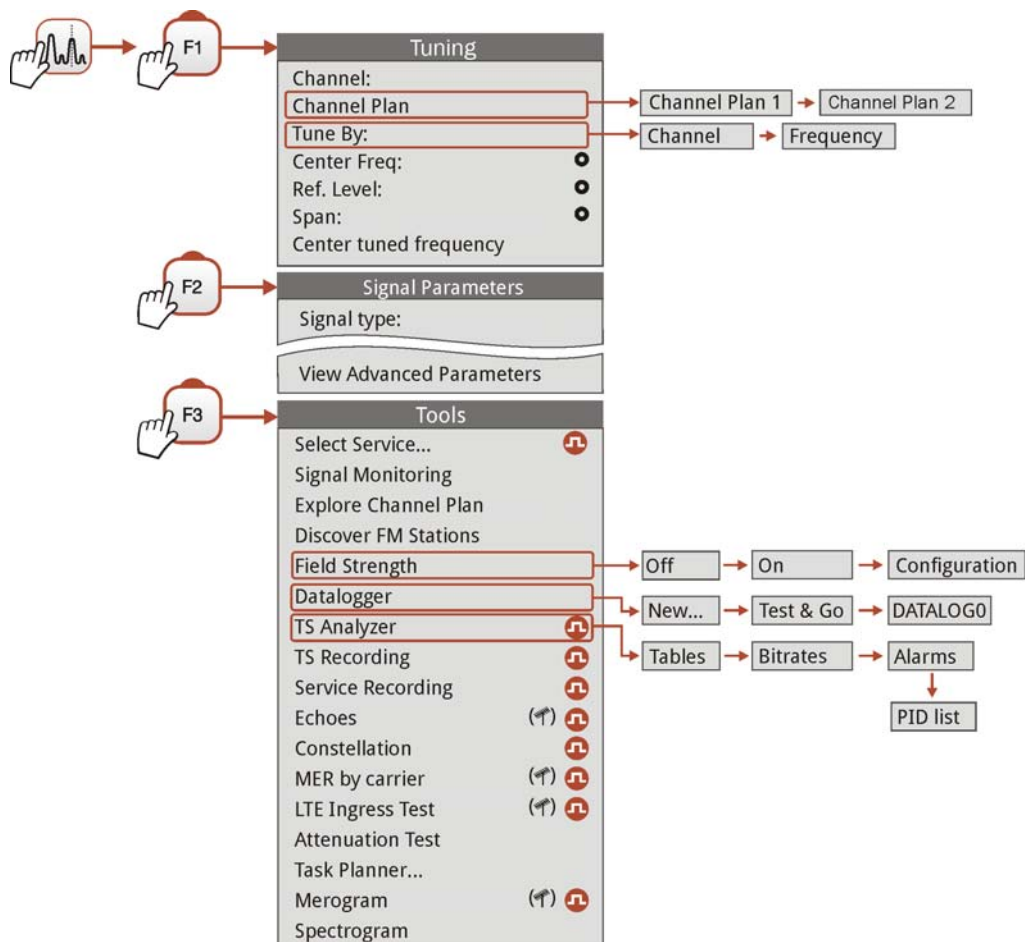

Only available for **digital channels**



Option available for **terrestrial band**



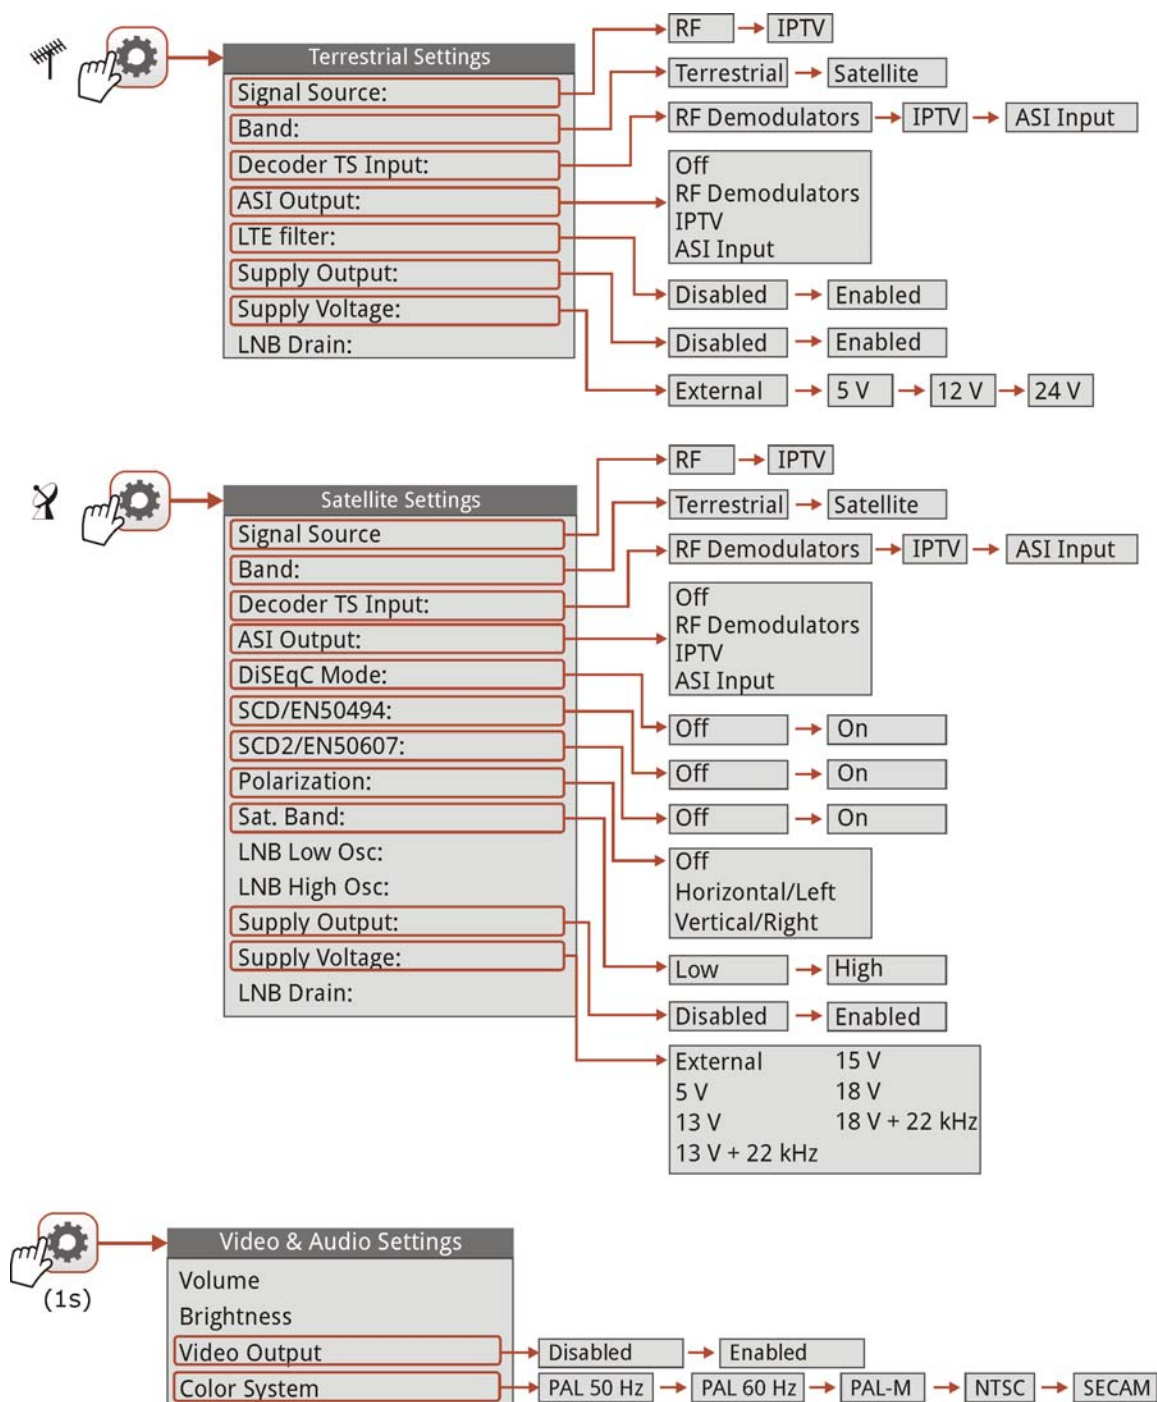
Only available for **analogue channels**



Option available for **satellite band**



SETTINGS MENU




Option available for **terrestrial band**



Option available for **satellite band**

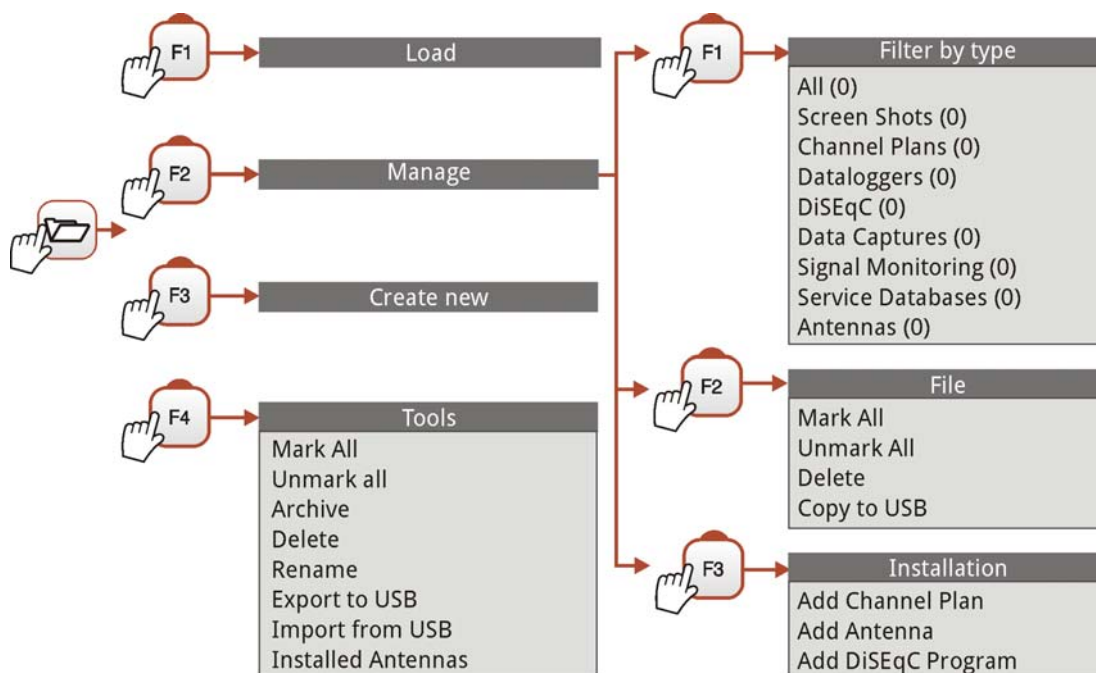INSTALLATIONS MANAGEMENT



PREFERENCES MENU

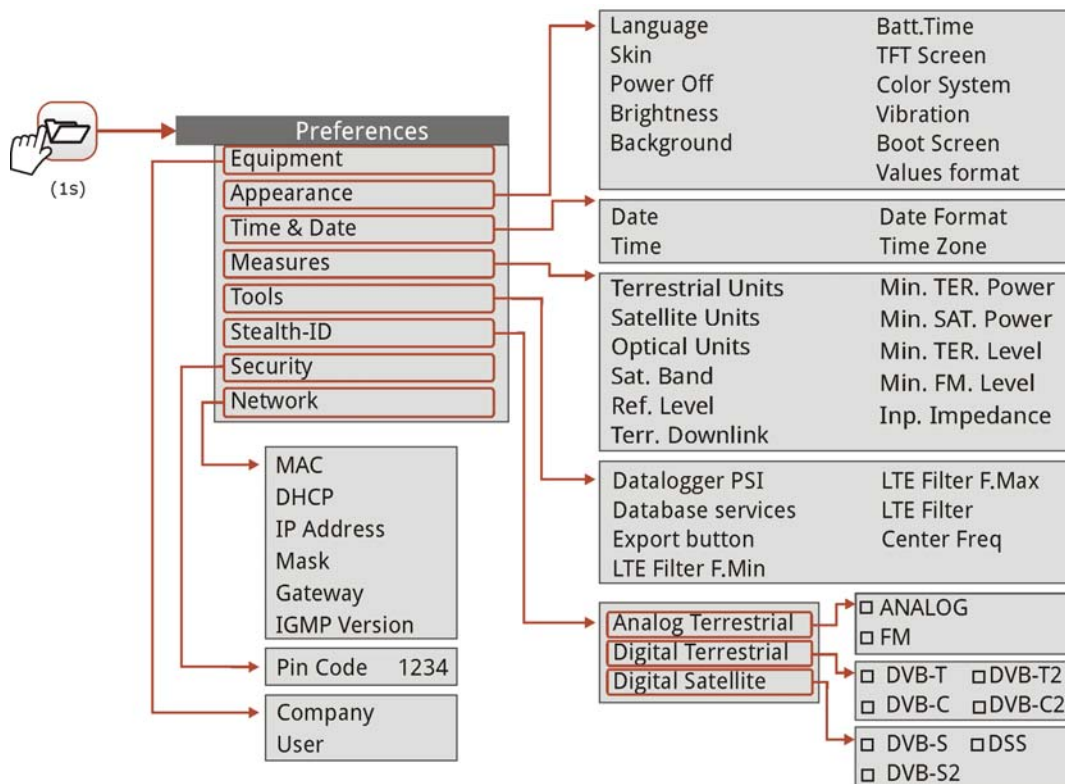


Figure 8.



2.7 Controls

The equipment has been designed to be an easy tool to use. For this reason the number of keys has been reduced and these are grouped by function.

The menu navigation includes hints that appear when the cursor is placed on a disabled (greyed) option for a while. This hints help the user to understand why an option is disabled and what to do to enable it.

The equipment can be fully operated using both the touch panel (even using wearing gloves) and the conventional keyboard.

For measurement and navigation through the menus, the equipment has the touch panel, a joystick, 4 programmable keys (softkeys) and 6 direct access keys (shortcut keys).

Next the use of each one of them is described:

2.7.1 Touch Screen

The control software is designed in such a way that the meter can be fully operated using both the touch panel and the conventional keyboard.

These actions can be done through the touch panel:

- **Menu Selection.**
- **Frequency or channel selection.**
- **Frequency or channel scroll.**
- **Virtual keyboard writing.**
- **Toolbar access.**
- **Mode screens switch.**
- **Installations Management.**

Each touch on the screen is associated with a physical vibration. This vibration can be enabled or disabled through the option "Vibration" in the "Preferences" menu.



► Menu Selection

User can operate on the menus on screen: drop-down menu, select an option, accept or exit a message, and so on, just touching on the option.

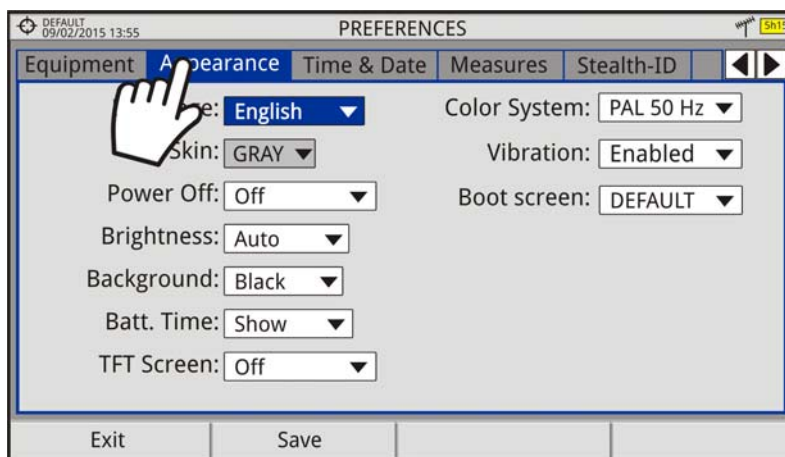


Figure 9.

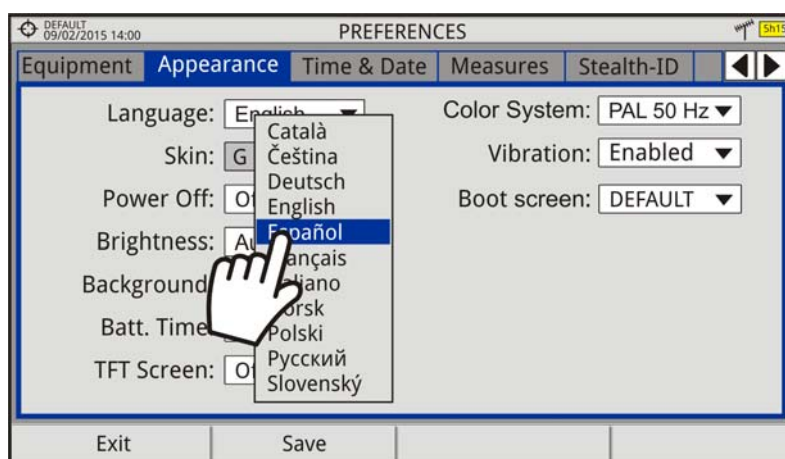


Figure 10.

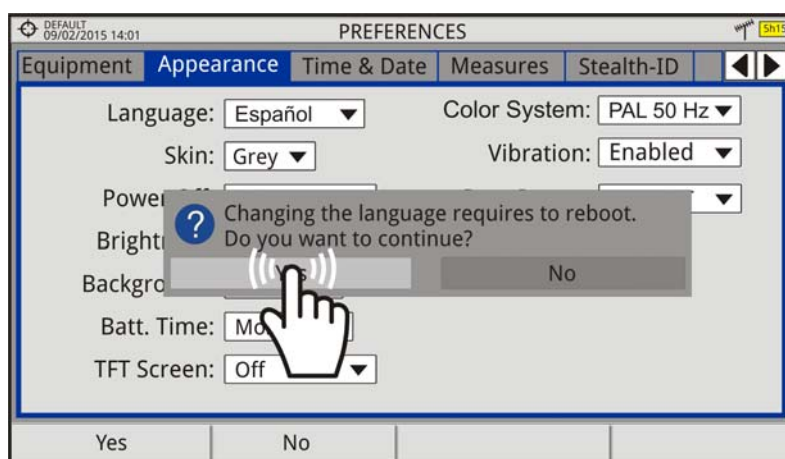


Figure 11.



► Frequency or Channel Selection

At the Spectrum Analyser mode, user can select a channel or frequency by tapping on the frequency or channel.

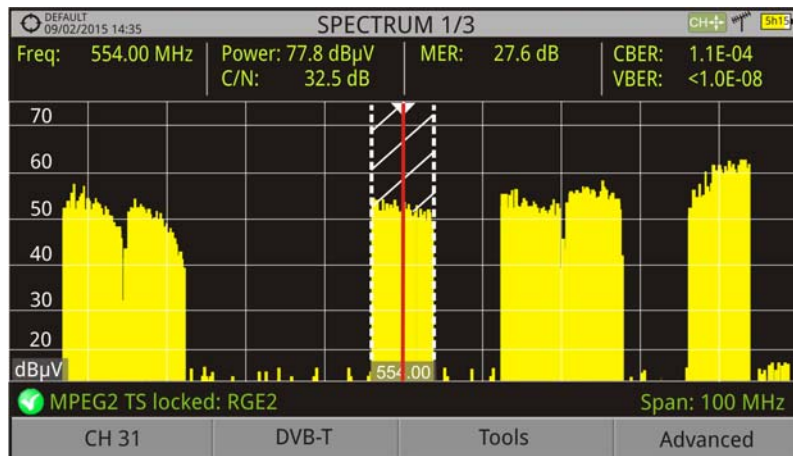


Figure 12. First screen (channel locked).

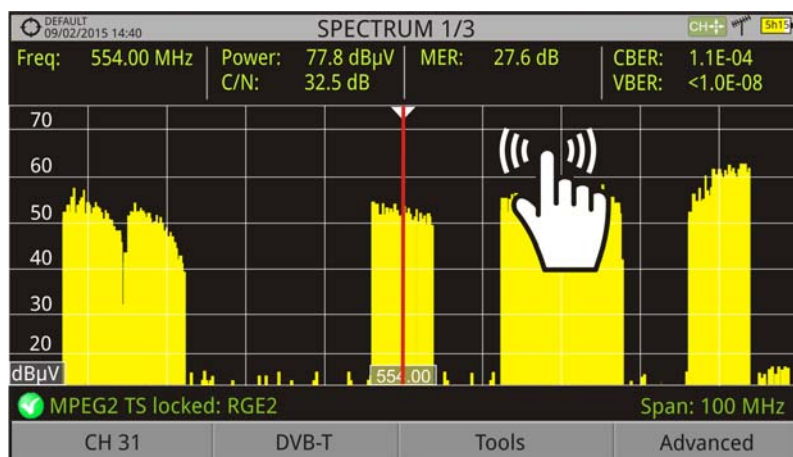


Figure 13. Tap on the new frequency.

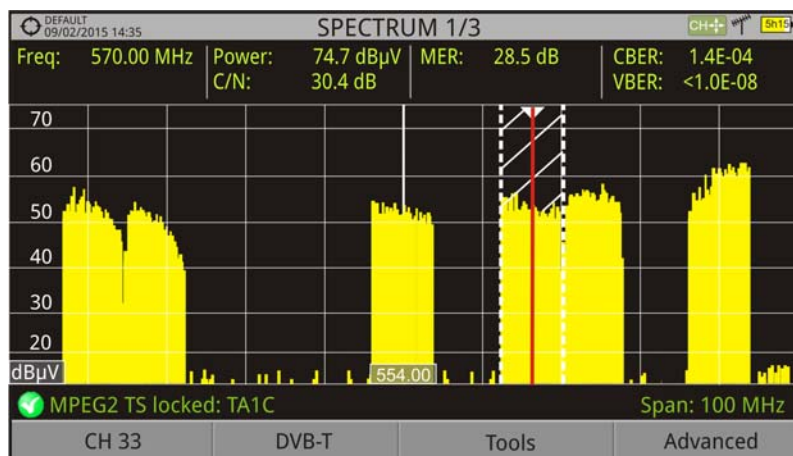


Figure 14. The cursor moves to the frequency.



► Frequency or Channel Scroll

At the Spectrum Analyser mode, user can scroll through frequency or channels by dragging and dropping his finger on the screen.

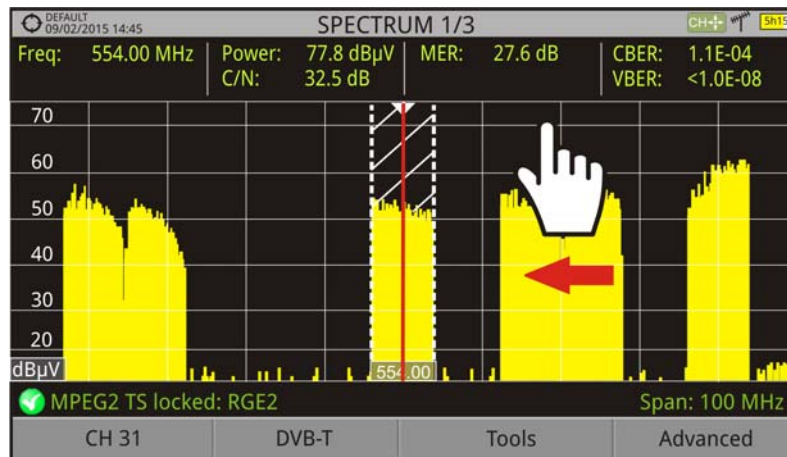


Figure 15.

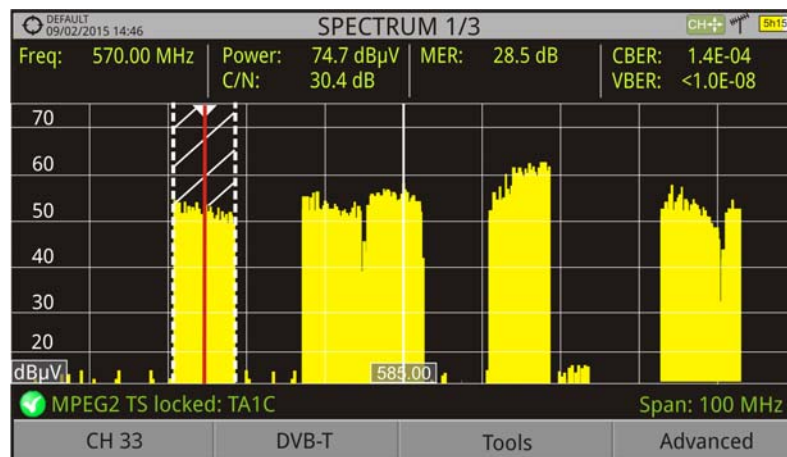


Figure 16.



► **Virtual keyboard/keypad writing.**

User can type directly on the on-screen keyboard or keypad.



Figure 17.

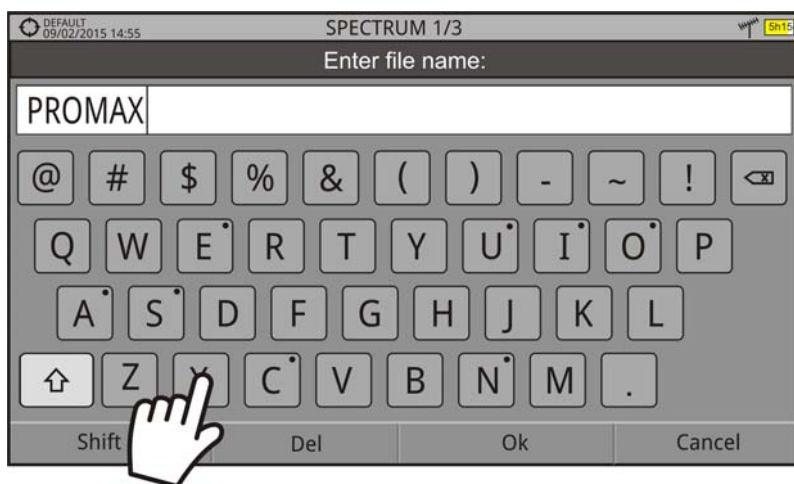


Figure 18.



► Toolbar

User can access the more important functions through the toolbar by pressing on the right top corner of the screen.

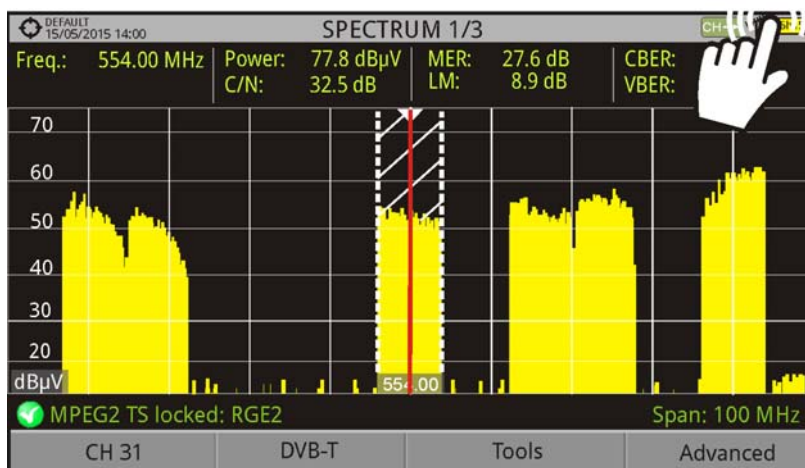


Figure 19.

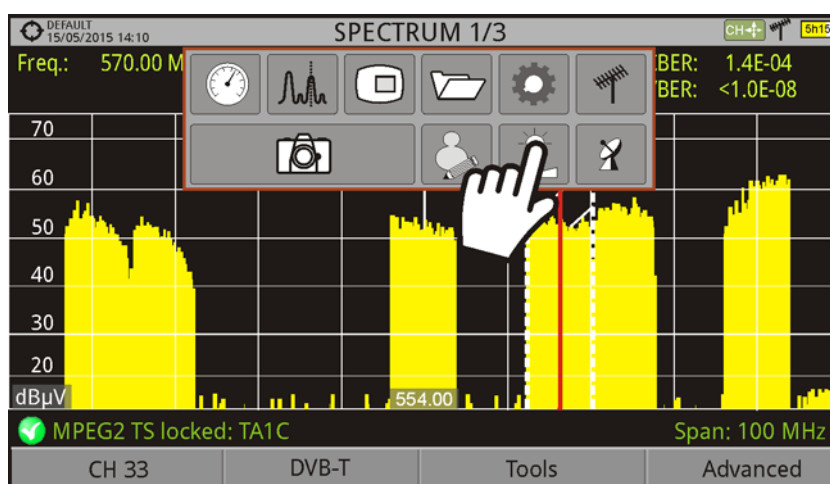


Figure 20.

• Toolbar icons description

	Measurement Mode		Settings		Video & Audio Settings
	Spectrum Analyser Mode		Terrestrial Band		Preferences
	TV Mode		Satellite Band		Screen Capture
	Installations Management				



► Mode screens

User can switch the view of the current mode by pressing on the top center of the screen.

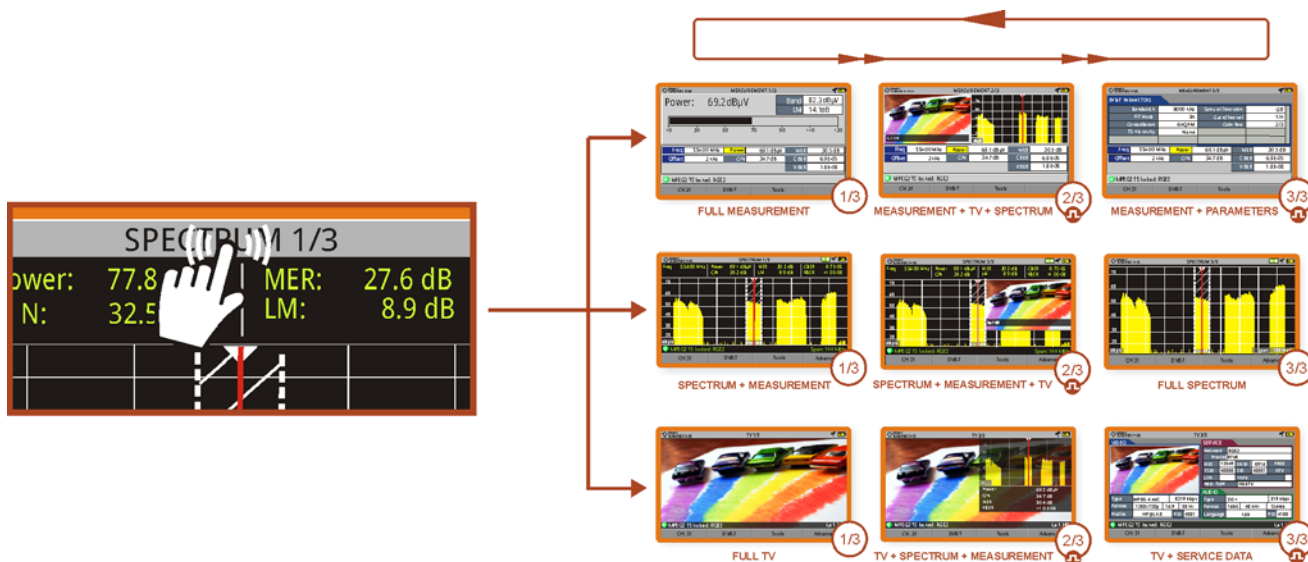


Figure 21.

► Installations Management

User can access data of the current installation by pressing on the left top corner.

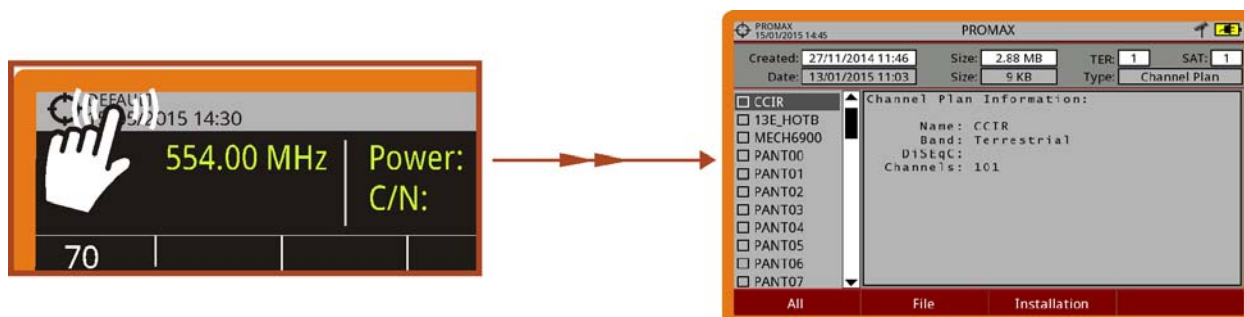


Figure 22.



2.7.2 Joystick

Joystick positions are five:

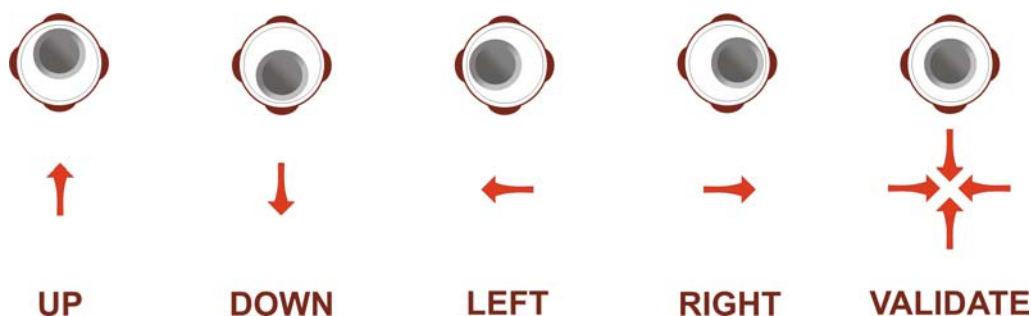


Figure 23.

The joystick is multifunctional, that is, each time you press its function changes. The user can see the active function according to the icon that is displayed at the upper right corner of the equipment, as shown in the image.

In the **SPECTRUM ANALYSER** mode, the joystick has the following functions:



- **CH or FR:** Channel change (CH) or frequency (FR) change (according to the tune selected: tune by channel or tune by frequency).
- **SP:** Span change.
- **MK:** Marker moving (if marker is enabled).

Figure 24.

Using the **ECHOES** tool, the joystick is also multifunctional:

- **CH or FR:** Channel (CH) change or frequency (FR) change (according to the tune selected: tune by channel or tune by frequency).
- **EC:** Echo change.

According to the selected function, the joystick will do a specific action.



[Click here to watch this video: Navigating through the menus](#)



2.7.3 Keyboard shortcuts

► Management Keys

There are two Management keys. Each one has two different functions according to the pressing time:



Short press: It shows the list of installations and the menus to manage them.

Long press: It shows the preferences menu.



Short press: It shows the menu of terrestrial or satellite settings (according to the selected band).

Long press: It shows the Video & audio settings.



► Export / Reference key

Depending on how long you press this key, it has two different functions:

Short Press: Pressing this key for less than one second on the Spectrum Analyser mode, it holds on screen the current waveform as a reference. It is equivalent to go to the option "Reference - Set" from the "Advanced" menu. Pressing short again, it deletes the waveform reference. It is equivalent to go to the option "Reference - Clear" in the "Advanced" menu.

Long press: Pressing this key for one second it makes a capture of what it is shown on screen at the time.

The capture may be from the screen image, from the measurement data or from both.

The type of capture, either screen, data, or both can be set in the "**Export button**" option which is on the label "**Measures**" in the "**Preferences**" menu.

More information in the chapter "**Export key**".

**► Mode keys**

On the left side there are 3 keys to access the equipment modes.

**Measurement Mode key.****Spectrum Analyser Mode key.****TV Mode Key.**

The active function on screen is indicated by the LED next to the mode key.

Pressing a key repeatedly provides access to a different view within the same mode. Each view is shown at the top. When reaching the third view it returns to the first view. For some signals (analogue, generic) not all the views are available.

Following there is an example of the views available for each mode (examples extracted from a digital terrestrial signal):



Measurements



1/3

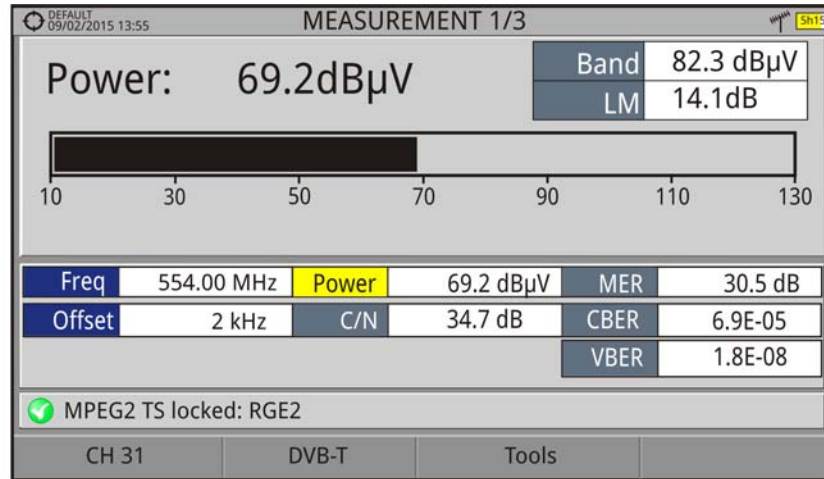


Figure 25. FULL MEASUREMENT



2/3

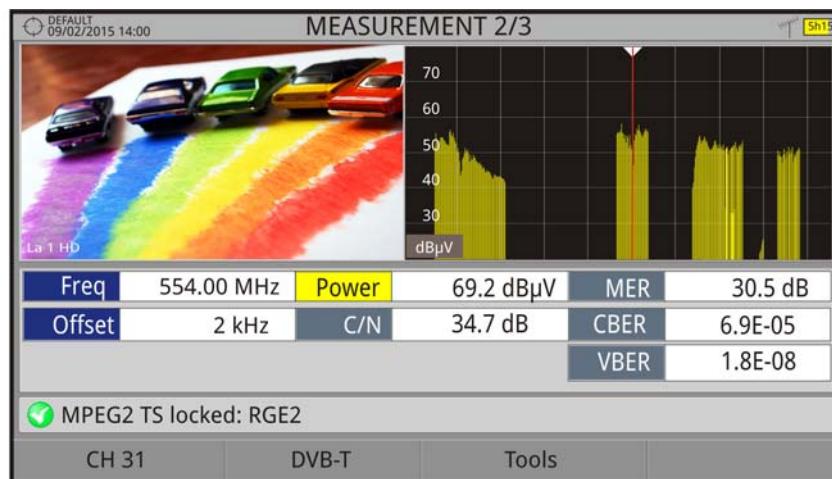


Figure 26. MEASUREMENT + TV + SPECTRUM



3/3

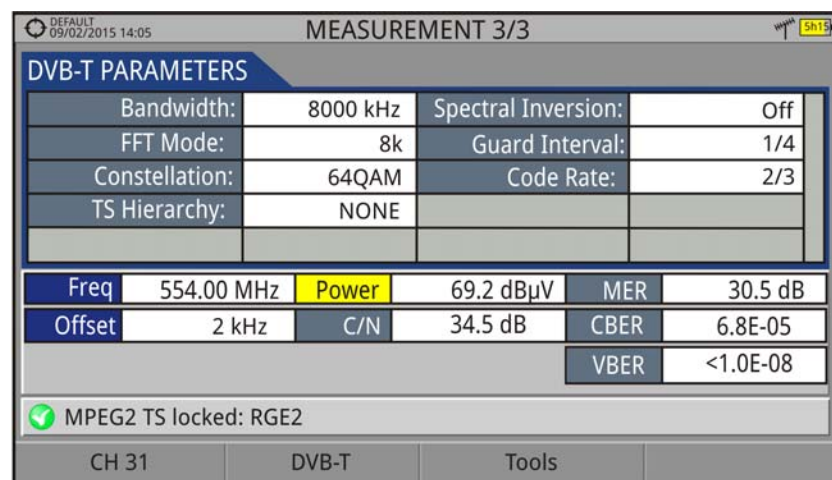


Figure 27. MEASUREMENT + PARAMETERS



Spectrum Analyser



1/3

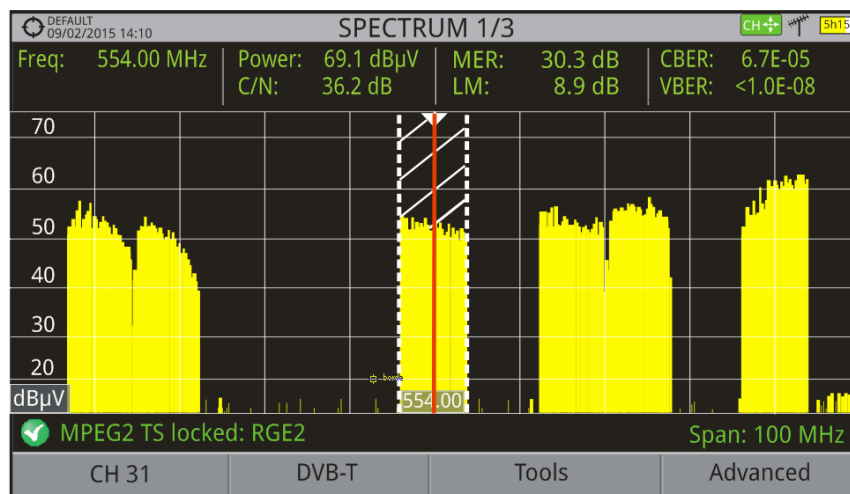


Figure 28. SPECTRUM + MEASUREMENT



2/3

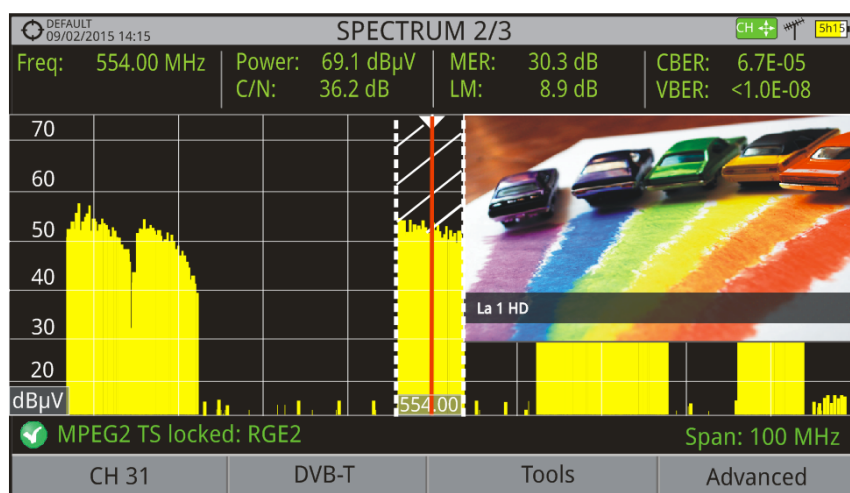


Figure 29. SPECTRUM + MEASUREMENT + TV



3/3

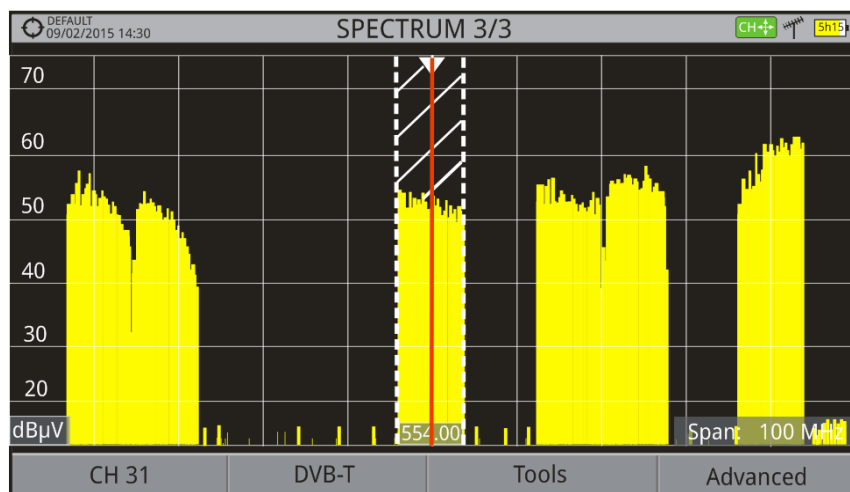


Figure 30. FULL SPECTRUM



TV Mode



1/3



Figure 31. FULL TV



2/3

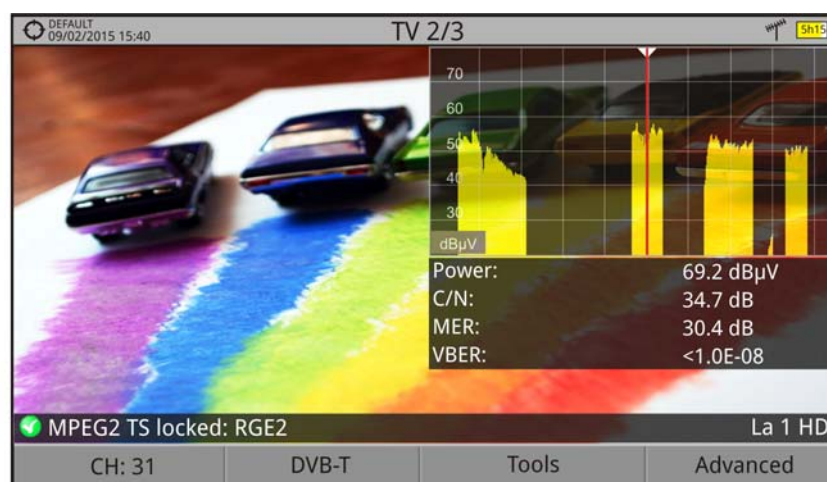


Figure 32. TV + SPECTRUM + MEASUREMENT



3/3

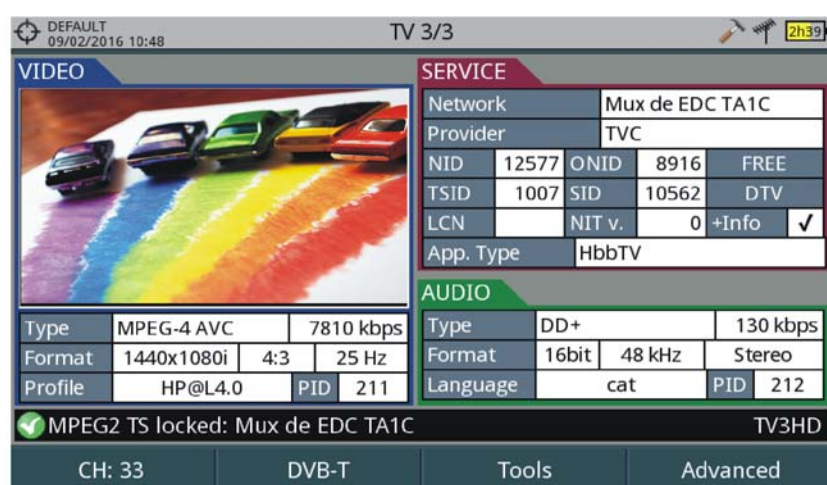


Figure 33. TV + SERVICE DATA



2.7.4 Softkeys

There are four programmable keys, also called softkeys, numbered from **F1** to **F4**.

Each key provides access to a menu. This menu varies depending on the function the user is working on the meter.

The menu is displayed on each softkey at the bottom of the screen.

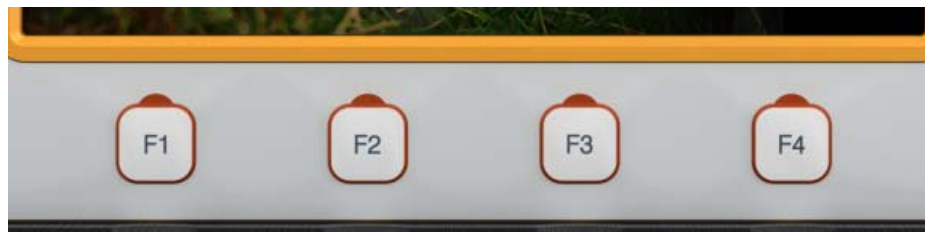


Figure 34.

2.7.5 Virtual Keyboard

When a user needs to enter or edit a text (from an image, Channel Plan, etc.), a screen with a virtual keyboard appears as shown at the figure.










Figure 35.





To edit the file name user should follow these steps:

- 1** Place the cursor over the text box where the name appears.
- 2** Move the cursor to place it next to the letter that user wants to edit.
- 3** Press on the virtual keyboard to edit.

To delete a letter, move the cursor to the right side of the letter and then press the joystick on the Delete key  or press  (Del).

To enter an upper case letter press first  or press on the  key. To block upper case press  or press on the  key twice consecutively. To return to lower case press  or the key again.

Keys with a point at the top right corner give access to special characters, by keeping pressed for one second on the key.

After editing press  (Ok) to validate the name and continue the process or  (Cancel) to cancel.

2.8 **StealthID Function**

The **StealthID** function of the **HD RANGER 2** is a signal identification function performed automatically by the equipment without any user intervention.







The equipment tries to identify the channel or frequency of the input signal it receives, and according to the band selected by the user, it applies identifying criteria according to the standards of that band. When the equipment recognizes in the input signal the identification parameters of a standard, it decodes the signal and shows the data of that signal on the screen.

The identification system tries to lock the first signal using the modulation defined in the channel plan for that signal. If after five seconds it fails to lock with that modulation, it starts the wheel for automatic detection. If then it locks in a modulation other than indicated, it generates an internal temporary channel plan to accelerate tuning the same channel later on.



► Operation

The user only has to follow these steps in order to identify a signal:

- 1 Press the **Preferences** key  for 1 second.
- 2 In the **StealthID** tab, select the signal types to auto-identify (see "Menu tree" [figure 7](#)). By default all them are selected. Press the  key to save the changes made and the  key to exit the **Preferences** screen.
- 3 Press the **Settings**  key.
- 4 Select the band (terrestrial or satellite).
- 5 Select a channel or frequency to identify.
- 6 The bottom of the screen shows the message "**Searching for signal**" and the standard transmission checking. Wait a few seconds for the equipment to identify the signal. User can force the auto-identification of a signal by pressing the  key and selecting the type of signal from the menu.
- 7 When the equipment identifies the signal a text shows the detected signal type.
- 8 Press  (Signal Parameters) to see the signal parameters.

► Signals automatically detected by the StealthID function

- Digital Terrestrial Television First Generation (DVB-T)
- Digital Terrestrial Television Second Generation (DVB-T2: T2-Base and T2-Lite profiles)
- Digital Satellite Television First Generation (DVB-S)
- Digital Satellite Television Second Generation (DVB-S2)
- Digital Satellite Television, exclusive for DirecTV (DSS)
- Digital Cable Television First Generation (DVB-C)
- Digital Cable Television Second Generation (DVB-C2) Generic 2
- Analogue terrestrial TV
- Analogue Cable TV
- Analogue Satellite TV
- Analogue Terrestrial FM



2.9 Settings and Configuration

2.9.1 Settings Menu

Press the **Settings** key  to access the settings menu.

Depending on the selected band, the menu may be different.

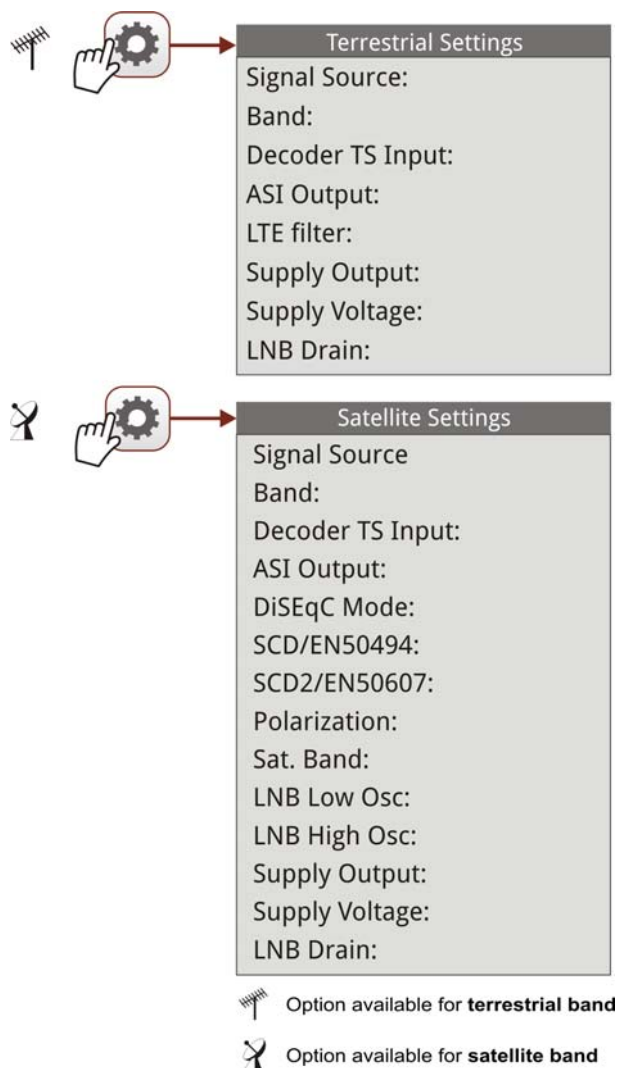


Figure 36.

A brief explanation of each option available on the menu:

► Signal Source

It allows the user to select the signal coming into the equipment between the RF input for RF signal and the IPTV input for TV over any type of IP packet based distribution network.



► **Band** (available for satellite and terrestrial band)

It allows the user to select between terrestrial or satellite frequency band.



[Click here to watch this video: Switching satellite / terrestrial bands](#)

► **Decoder TS Input**

It allows the user to select the transport stream coming into the equipment between the RF Demodulators, IPTV input, ASI input and the transport stream played from the TS Recording tool.

- **RF Demodulators:** (This option is available only if RF is selected as a Signal Source). The TS extracted from the RF signal by means of the internal RF demodulator. The RF signal can come from digital terrestrial, satellite or cable.
- **IPTV:** (This option is available only if IPTV is selected as a Signal Source). The TS extracted from the IPTV signal.
- **ASI Input:** The TS coming directly through the ASI-TS input connector.
- **Recorded TS:** The TS comes from the one being played and previously recorded with the TS Recording tool (warning: this option is automatically selected each time a recorded TS is played. Disable it once the TS playing has finished).

► **ASI Output**

It allows the user to select the signal source for the TS-ASI packets going out through the equipment ASI Output. User can select among Off, RF Demodulators, IPTV and ASI Input. This transport stream can feed the signal to other devices.

- **Off:** ASI Output disabled.
- **RF Demodulators:** (This option is available only if RF is selected as a Signal Source). The signal through ASI Output is the TS extracted from the RF signal by means of the internal RF demodulator. The RF signal can come from digital terrestrial, satellite or cable.



- **IPTV:** (This option is available only if IPTV is selected as a Signal Source). The signal through ASI Output is the TS extracted from the IPTV signal.
- **ASI Input:** TS-ASI packets coming from ASI input connector go out through the ASI output connector.

► **External power supply** (available for terrestrial and satellite band)

It enables or disables the power supplied to external units such as preamplifiers for antennas in terrestrial television or LNBs and FI simulators in the case of satellite TV.

When this option is enabled the equipment applies at the output the voltage selected by the user in the Supply Voltage option (see below). When this option is disabled the equipment does not apply the voltage to the output but it will behave as if it did.

► **Supply voltages** (available for terrestrial and satellite band)

It selects the voltage to be applied to an external unit.

Available voltage options change depending on the selected band.

Voltage available for terrestrial band is: External, 5 V, 12 V and 24 V.

Voltage available for satellite band is: External, 5 V (for devices working with 5 V such as GPS active antennas), 13 V, 13 V + 22 kHz, 15V, 18 V, 18 V + 22 kHz.

In the External supply voltage option the power supplier to the external units is the power supplier of the antenna preamplifiers (terrestrial television) or the satellite TV receiver (collective or domestic).

► **LNB Drain** (available for terrestrial and satellite band)

The LNB drain option shows the voltage and current flowing to the external unit. If there is any problems (e.g. short circuit), an error message appears on the screen ('SHORTCIRCUIT'), a warning beep sounds and the equipment will not supply power. The equipment does not return to its normal operating state until the problem is solved. During this time the equipment checks every three seconds if there still the problem, warning with an audible signal.

The DRAIN LNB light indicator is lit if current is flowing to the external unit.

► **LTE Filter** (only available for terrestrial band with LTE filter selected "internal" in Preferences)

It enables or disables the LTE filter (see section: "LTE Interference Test"). When the LTE filter is enabled an icon will appear at the top right of the screen.



► **DiSEqC Mode** (only available for satellite band)

It enables or disables DiSEqC mode. DiSEqC (Digital Satellite Equipment Control) is a communication protocol between the satellite receiver and accessories of the satellite system (see chapter "CONNECTING TO EXTERNAL DEVICES").

► **SCD/EN50494** (only available for satellite band)

It enables or disables the SCD/EN50494 function to control devices of a satellite TV installation that supports this technology (see chapter "CONNECTING TO EXTERNAL DEVICES").

► **SCD2/EN50607** (only available for satellite band)

It enables or disables SCD2/EN50607 mode to control devices in a satellite TV installation which must be compatible with this technology (see chapter "CONNECTING TO EXTERNAL DEVICES").

► **Polarization** (only available for satellite band)

It allows the user to select the signal polarization between Vertical/Right (vertical and circular clockwise) and Horizontal/Left (horizontal and circular anti-clockwise), or disable it (OFF). In tuning mode the Polarization option can not be changed.

► **Sat Band** (only available for satellite band)

It allows the user to select the High or Low band frequency for satellite channel tuning. In channel tuning mode the Band Sat can not be changed.

► **LNB Low Osc.** (only available for satellite band)


It defines the local oscillator frequency for the LNB low band. When a channel plan is selected but LNB oscillator values are not properly selected, a warning is issued.

► **LNB High Osc.** (only available for satellite band)

It defines the local oscillator frequency for the LNB high band (up to 25 GHz). When a channel plan is selected but LNB oscillator values are not properly selected, a warning is issued.



2.9.2 Video & Audio settings

Press the Settings key  for one second to access the Video & Audio settings menu.

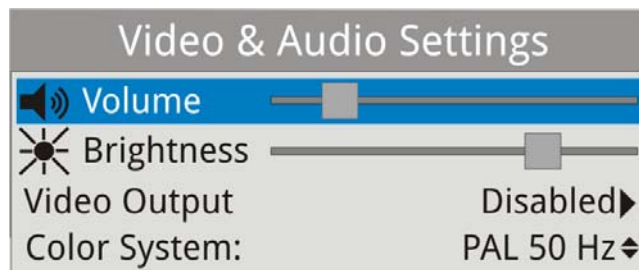


Figure 37.

A brief explanation of each option available on the menu:

► **Volume**

It increases or decreases the volume of the speaker audio output by moving the joystick to the right (+ volume) or left (- volume).

► **Brightness**

It increases or decreases the screen brightness by moving the joystick to the right (+ brightness) or left (- brightness).


► **Video Output**

It enables or disables the video output through the audio/video connector (see chapter "CONNECTING TO EXTERNAL DEVICES").

► **Color System**

The coding system used in analogue transmissions. Available options are: PAL 50 Hz, PAL 60 Hz, NTSC and SECAM.

2.9.3 Preferences Menu

You access the **Preferences** menu by pressing the **Installations Management** key  for one second. The options are grouped in tabs as follows:

► **Equipment:** Equipment information.

► **Appearance:** Equipment customization options.

► **Date & Time:** It allows the user to change date and time zone.



- **Measures:** It allows the user to choose between several units of measure among other parameters.
- **Tools:** It allows to edit some parameters for different tools.
- **StealthID:** It allows the user to select the set of signal types being used while auto identifying any modulation type.
- **Network:** Network parameters settings.
- **Security:** It allows to edit the PIN code.

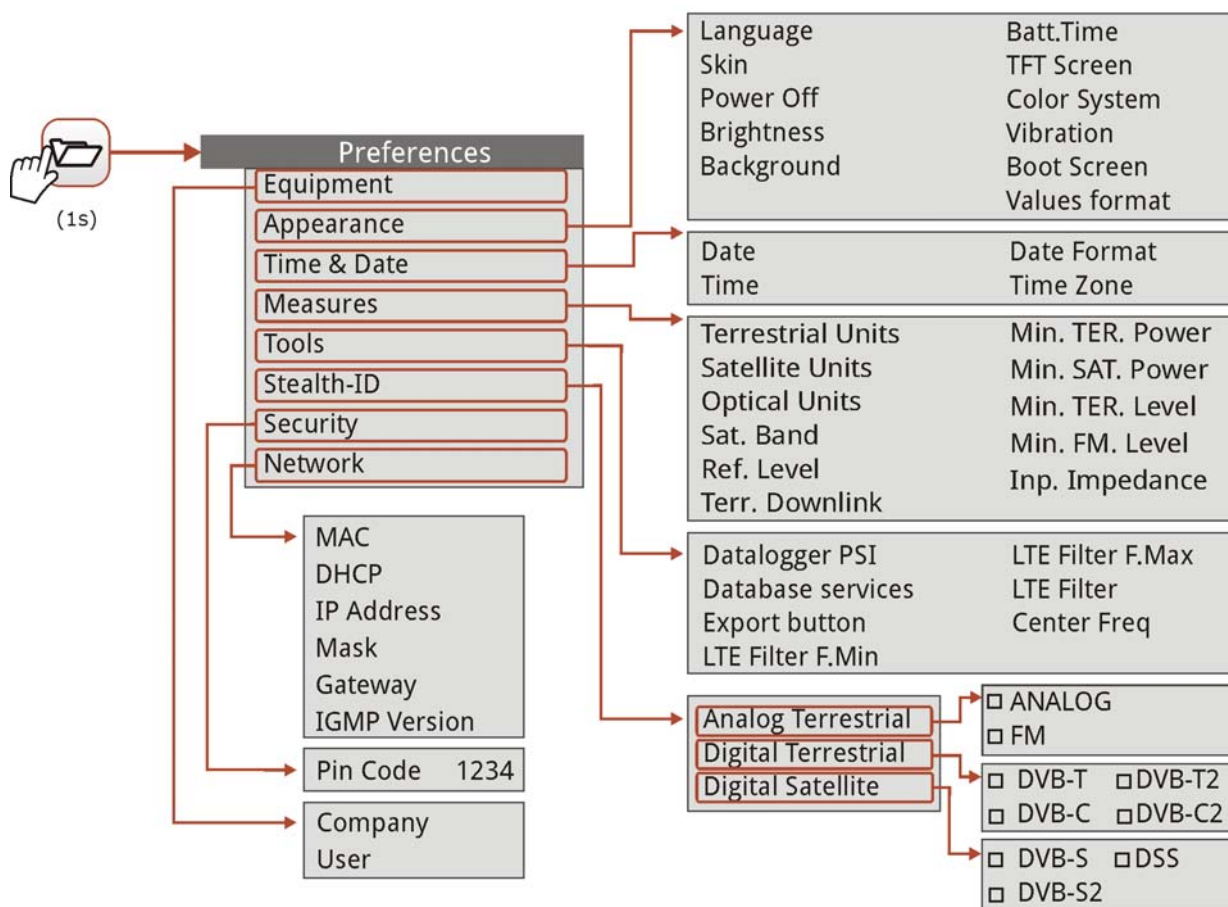


Figure 38.

To navigate between tabs move the joystick left or right. To navigate between the options within the tab move the joystick up or down.

Press **F1** **Exit** to exit Preferences.

Press **F2** **Save** to save changes.

A brief explanation of the options available in each tab:



► **Equipment information:**


- **Provider:** Provider's name.
- **Name:** Equipment's name.
- **Serial number:** Unique identification number for this equipment.
- NEW!** ■ **Release:** Version of the software and hardware installed on the equipment.
- **Date:** Date of the software installed on the equipment.
- **Free memory:** Free size of the flash memory installed on the equipment / Size of the flash memory installed on the equipment.
- **Company:** Name of the company which owns the equipment (editable by user; protected by PIN code). This field appears on the boot screen.
- **User:** Name of the equipment's user (editable by user; protected by PIN code). This field appears on the boot screen.

► **Appearance Options:**

- **Language:** Language used on menus, messages and screens. Available languages are: Spanish, Catalan, English, German, French, Czech, Italian, Norwegian, Polish, Russian and Slovak. Once the new language is selected, the equipment shows a warning message and re-starts in order to load the new language.
- **Skin:** Colours used on the screen.
- **Power Off:** It allows the user to select the time to power off, which is the time after which the equipment shuts down automatically unless user press any key.
- **Brightness:** User can select between two options:
 - Manual:** The display brightness is adjusted manually using the brightness setting (see section **Video and audio settings**).
 - Automatic:** The display brightness is automatically adjusted according to the light received by the sensor.
- **Background:** It allows the user to select the background colour on the display screen. Options available are: white, green, red, black and blue.



- **Battery Time:** It hides or shows the remaining battery time. Remaining battery time is displayed on the inside of the battery level icon.
 - **TFT Screen:** User can select a time after which the TFT screen turns off, but the equipment is still running normally. The screen turns on by pressing any key. Time options are: off, 1, 5, 10 or 30 minutes.
 - **Color System:** The coding system used in analogue transmissions. Available options are: PAL 50 Hz, PAL 60 Hz, NTSC and SECAM.
 - **Vibration:** User can turn the vibration on or off. When the vibration is ON the user feels a vibration when touching the screen.
 - **Boot Screen:** User can select the image that appears when the equipment is booting.
 - NEW!** ■ **Values Format:** It allows the user to select the format to show on fields PID, NID, ONID, TSID and SID in TV mode screen 3/3. Available formats are decimal or hexadecimal.
- **Time & Date Options:**
- **Date:** It allows the user to edit the date. Press the joystick for edit mode.
 - **Time:** It allows the user to edit the time. Press the joystick for edit mode.
 - **Date Format:** It allows the user to change the date format, which is the order in which is shown day (DD), month (MM) and year (YYYY or YY).
 - **Time Zone:** It allows the user to select the time zone where he is.
- **Measures Options:**
- **Terrestrial Units:** It allows the user to select the terrestrial measurement units for the signal level. Available options are: dBm dBmV and dBμV.
 - **Satellite Units:** It allows the user to select the satellite measurement units for the signal level. Available options are: dBm, dBmV and dBμV.

- **Optical Units:** It allows the user to select the optical measurement units for the signal level. Available options are: dBm.
 - **Satellite Band:** It allows the user to select the type of satellite band used between Ku/Ka band and C band.
 - **Reference Level:** It allows the user to select the type of reference level adjustment between manual (modified by the user) or automatic (selected by the equipment).
 - **TER. Downlink:** If this option is enabled it allows to work in terrestrial band with radio link down converters external units (from 1 to 11 GHz) and tune using the link frequency.
 - **Min. TER. Power:** It sets the minimum power for a terrestrial digital signal to be identified.
 - **Min. SAT. Power:** It sets the minimum power for a satellite digital signal to be identified.
 - **Min. TER. Level:** It sets the minimum level for a terrestrial analogue signal to be identified.
 - **Min. FM. Level:** It sets the minimum level for a terrestrial analogue signal to be identified.
 - **Inp. Impedance:** It allows to select the impedance for the RF input signal between 50 Ω and 75 Ω .
- **Tools Options:**
- **Datalogger PSI:** If you select the option "**Capture**", when datalogger is working it captures the service list of each channel. This process slows the datalogger, but provides additional information that can be downloaded in XML files. To disable this option select "**Don't capture**".
 - **Database services:** When it is enabled, it saves all the services been detected in the current installation. There is a database for services in terrestrial band and another for services in satellital band. Services are included automatically when the signal is locked. If enabled, these services will be displayed on the "**View all services**" option in the **Tuning**  menu. When disabling the option all services in the database of the installation will be deleted.



- **Export button:** It allows the user to select the data to be exported when pressing the export key among the following options: screen only, data only or both. More info in the "Export key" chapter.
- **LTE Filter F.Min:** Select the minimum frequency for the external LTE filter.
- **LTE Filter F.Max:** Select the maximum frequency for the external LTE filter.
- **LTE Filter:** Select between "internal" to use internal filter or "external" to use external filter.
- **Center Freq:** User can set the center of frequency to **Manual** or **Auto** mode. In Manual mode the user sets the center of frequency and the equipment does not change it never, so the main cursor can be moved out of screen. In Auto mode the equipment changes the center of frequency to display always the main cursor on screen.

► **StealthID Options:**

It allows the user to select the set of signal types being used while auto identifying any modulation type. More information in the "StealthID function" chapter.

► **Network Options:**

Network parameters that user has to fill out in order to identify the equipment into a data network. This is necessary to receive IPTV signal (refer to IPTV chapter for more information). Network parameters are:

- **MAC:** Physical address of the equipment. It is unique and cannot be edited.
- **DHCP:** Enable this option to get the proper IP address when the unit is first connected to a network. That feature contributes to make things easier to installers when debugging network access. Enable the DHCP protocol for proper IP configuration.
- **IP Address:** IP Address of the equipment into the local network.
- **Mask:** Subnet mask of the equipment (by default 255.255.255.0).
- **Gateway:** IP Address of the router into the local network (by default 10.0.1.1).



■ **IGMP Version:**

Protocol for multicast transmissions used by the router. Available versions are 1, 2 and 3. To disable select Off.

- **IGMPv1:** IGMP version 1. Each time user selects a multicast address, meter asks for the new multicast stream.
- **IGMPv2:** IGMP version 2. Each time user selects a multicast address, meter stops receiving the current stream and asks for receiving the new one.
- **IGMPv3:** IGMP version 3. Each time user selects a multicast address, meter stops receiving the current stream and asks for receiving the new one, from the servers approved by the user.
- **Off:** Meter does not send any IGMP messages and discards the received ones.

► **Security Options**

It allows the user to change the PIN code that gives access to protected data fields. The default PIN code is "1234". To change the PIN, first enter the current PIN code, then enter the new PIN.


In case the user forgets the PIN, after the third attempt, a 12-digit code will appear on screen. Sending this 12 digit code to the PROMAX customer service, the user will recover the PIN.



3 MEASUREMENT MODE



3.1 Introduction

On the panel left side, the equipment has three functions keys, which give direct access to the three most important functions. One of them is the key **MEASUREMENT**  that measures the signal received through the RF input connector.

The user should connect a signal to the input and select the band, whether terrestrial or satellite. Then the auto-identification function (for more information refer to "StealthID function") locks the signal and demodulates it in real time, automatically detecting its characteristic parameters.

Having identified the signal, the equipment measures according to the signal type. All information about transponders or multiplex is automatically displayed without introducing any additional parameter identification.




Next there is a list of signals that the equipment can automatically detect. For more information about characteristics of each signal type refer to Annex 1: Signals description.

- Digital Terrestrial Television First Generation (DVB-T)
- Digital Terrestrial Television Second Generation (DVB-T2: T2-Base and T2-Lite profiles)
- Digital Satellite Television First Generation (DVB-S)
- Digital Satellite Television Second Generation (DVB-S2)
- Digital Satellite Television, exclusive for DirecTV (DSS)
- Digital Cable Television First Generation (DVB-C)
- Digital Cable Television Second Generation (DVB-C2)
- Analogue terrestrial TV
- Analogue Cable TV
- Analogue Satellite TV
- Analogue Terrestrial FM

"Signals description" annex describes in detail the measurement parameters for each type of signal.



3.2 Operation

- 1 Connect the **RF** input signal to the equipment.
- 2 Select through the "Settings" menu  the frequency band (terrestrial or satellite).
- 3 Access the **MEASUREMENT** option by pressing the  key.
- 4 Press again  to display the next view.

3.3 Screen Description

Views for digital signals are:



MEASUREMENT 1/3: FULL MEASUREMENT

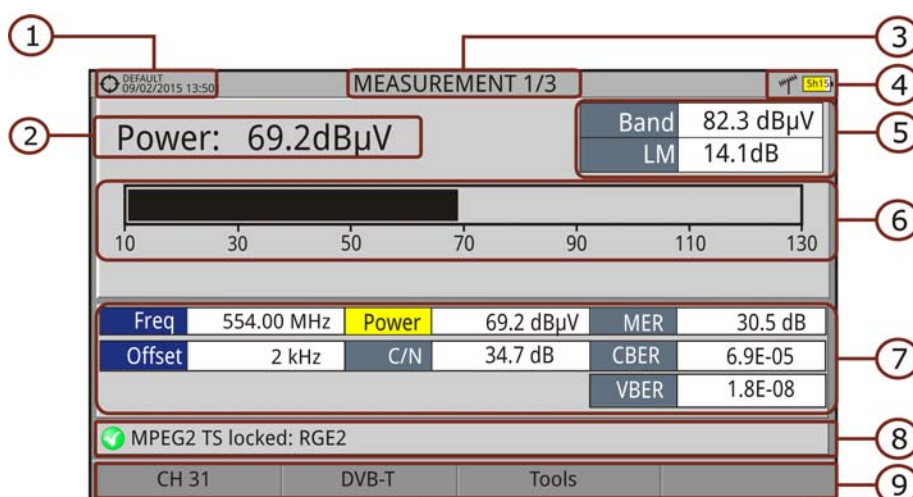


Figure 39.

- 1 Selected installation, date and time.
- 2 Measurement value of the selected parameter.
- 3 Number of view/total views.
- 4 Selected band, battery level.
- 5 Total power detected over the whole selected band (terrestrial or satellite). It also shows the link margin measurement. The total power can be used to know when it is close to saturation. The link margin is the margin of safety remaining for a good reception.
- 6 Graphical measurement of the selected parameter.
- 7 Measurement values for the type of locked signal.
- 8 Signal status (searching/locked/multiplex name).
- 9 Softkeys menus.



- **Joystick up/down:** It changes selected parameter.
- **Joystick left/right:** It changes channel/frequency.



MEASUREMENT 2/3: MEASUREMENT + TV + SPECTRUM

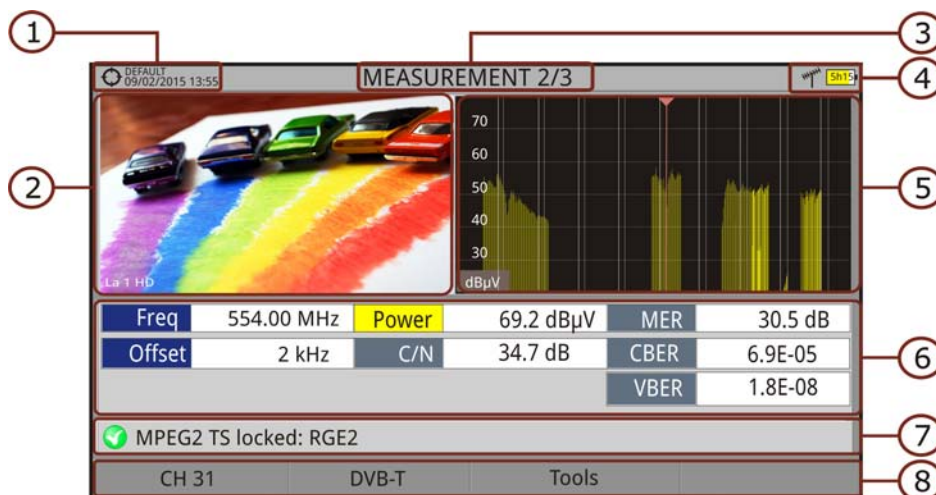


Figure 40.

- ① Selected installation, date and time.
- ② Image of the locked signal.
- ③ Number of view/total views.
- ④ Selected band, battery level.
- ⑤ Spectrum of the locked signal.
- ⑥ Measurement values for the type of locked signal.
- ⑦ Signal status (searching/locked/multiplex name).
- ⑧ Softkeys menus.

- **Joystick right/left:** It changes the selected channel/frequency.



MEASUREMENT 3/3: MEASUREMENT + PARAMETERS

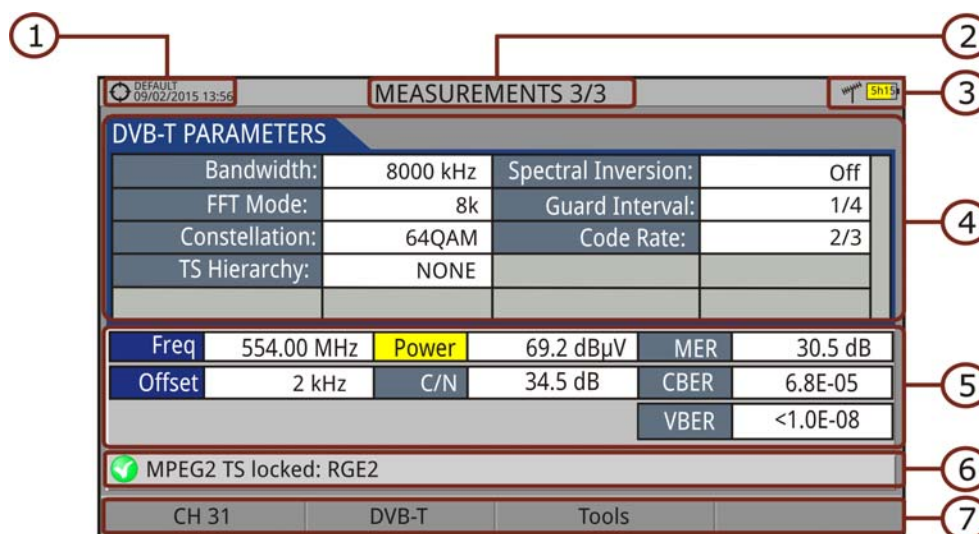


Figure 41.

- 1 Selected installation, date and time.
- 2 Number of view/total views.
- 3 Selected band, battery level.
- 4 Demodulation parameters of the locked signal.
- 5 Measurement values for the type of locked signal.
- 6 Signal status (searching/locked/multiplex name).
- 7 Softkeys menus.

► **Joystick right/left:** It changes the selected channel/frequency.

3.4 GENERIC Signal

This is a special digital signal that the equipment does not demodulate. It can be used for special signals as DAB/DAB + or COFDM modulation with narrow BW.

In this type of signal the user can select the signal bandwidth by accessing the "Signal Parameters" menu on the **F2** key.


The power measure and C/N ratio is calculated according to the bandwidth selected by the user.

The triple cursor shows on screen the BW selected by the user.



4 SPECTRUM ANALYSER MODE




4.1 Introduction

On the left side, the equipment has three function keys, which give direct access to the three most important functions. One of them is the **SPECTRUM ANALYSER** key  that displays the signal spectrum received through the RF input connector.

The Spectrum Analyser mode allows checking the signals on the frequency band, to visually identify any anomalies and to measure the signal and display the image tuned.

Thanks to the auto-identification or StealthID function, the system is constantly identifying the signal it receives (for more information refer to "StealthID" function). When it detects the signal type, it locks it and displays the information.

4.2 Operation

- 1 Connect the **RF** input signal to the equipment.
- 2 Select through the **Settings** menu  the frequency band (terrestrial or satellite).
- 3 Access the **SPECTRUM ANALYSER** option by pressing the  key.
- 4 Press again  to display the next view.



4.3 Screen Description

Available views are:



SPECTRUM 1/3: SPECTRUM + MEASUREMENT

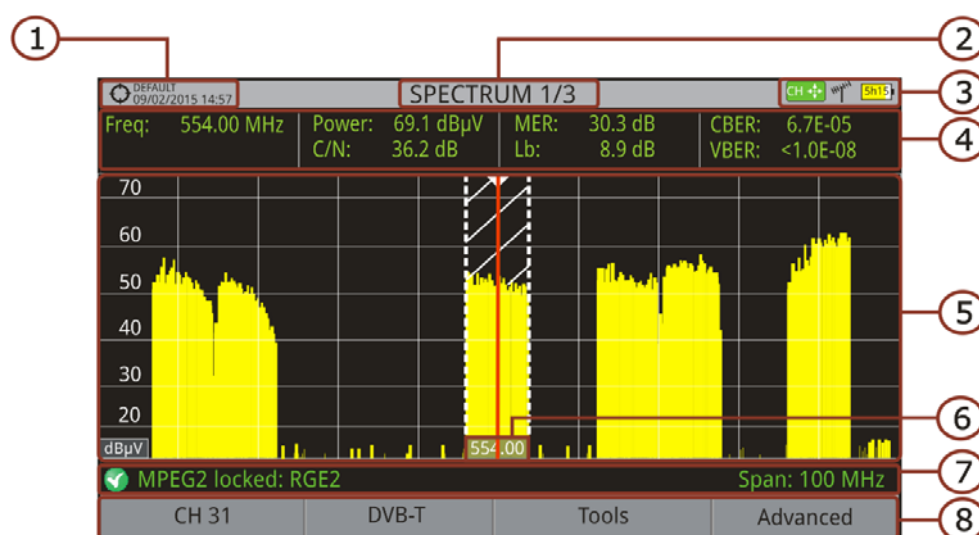


Figure 42.

- ① Selected installation, date and time.
- ② Number of view/total views.
- ③ Joystick active mode, selected band, battery level.
- ④ Measured values of the signal at the frequency/channel where is pointing the cursor.
- ⑤ Spectrum in the band with the selected span.
- ⑥ Centre frequency and cursor. It also shows the bandwidth of a digital locked signal.
- ⑦ Signal status (searching/locked/multiplex name/selected span).
- ⑧ Softkeys menus.

► **Joystick up/down:** It changes the reference level.

► **Joystick left/right** (depending on the joystick active mode):

SP: SPAN change.

FR or **CH:** Frequency change or channel change.

MK: Marker change (if marker is ON).



SPECTRUM 2/3: SPECTRUM + MEASUREMENT + TV

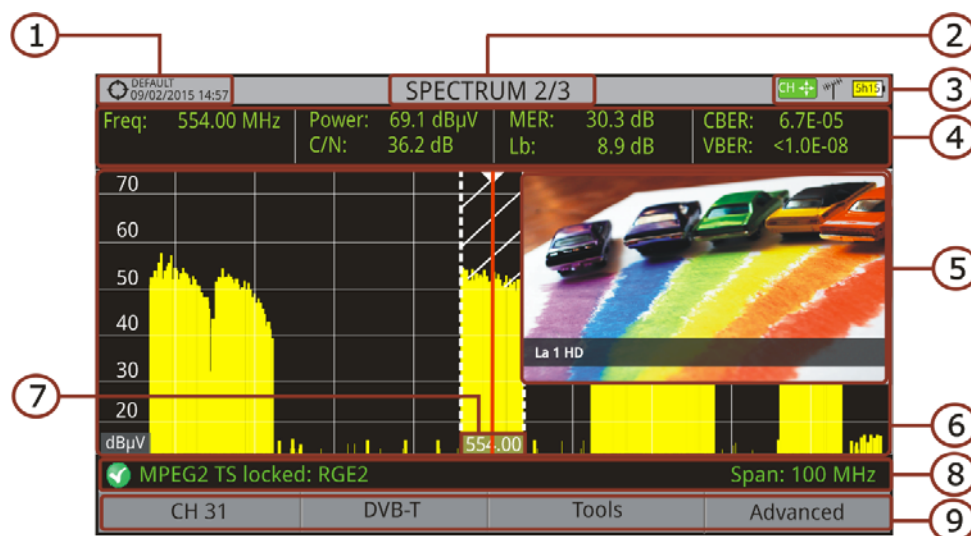


Figure 43.

- 1 Selected installation, date and time.
- 2 Number of view/total views.
- 3 Joystick active mode, selected band, battery level.
- 4 Measured values of the signal at the frequency/channel where is pointing the cursor.
- 5 Image of the tuned signal.
- 6 Spectrum in the band with the selected span.
- 7 Centre frequency and cursor. It also shows the bandwidth of a digital locked signal.
- 8 Signal status (searching/locked/multiplex name/selected span).
- 9 Softkeys menus.


► **Joystick up/down:** It changes the reference level.

► **Joystick left/right** (depending on the joystick active mode):

SP: SPAN change.

FR or **CH:** Frequency change or channel change.

MK: Marker change (if marker is ON).

*  Only available for **digital channels**.



SPECTRUM 3/3: FULL SPECTRUM

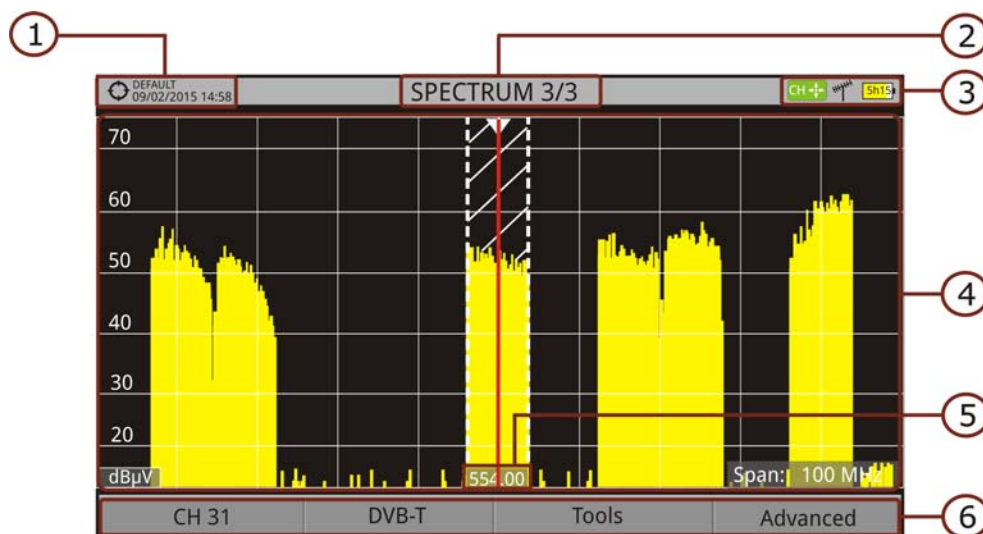


Figure 44.

- ① Selected installation, date and time.
- ② Number of view/total views.
- ③ Joystick active mode, selected band, battery level.
- ④ Spectrum in the band with the selected span.
- ⑤ Centre frequency and cursor. It also shows the bandwidth of a digital locked signal.
- ⑥ Softkeys menus.

► **Joystick up/down:** It changes the reference level.

► **Joystick left/right** (depending on the joystick active mode):

SP: SPAN change.

FR or **CH:** Frequency change or channel change.

MK: Marker change (if marker is ON).

► Full Spectrum screen description

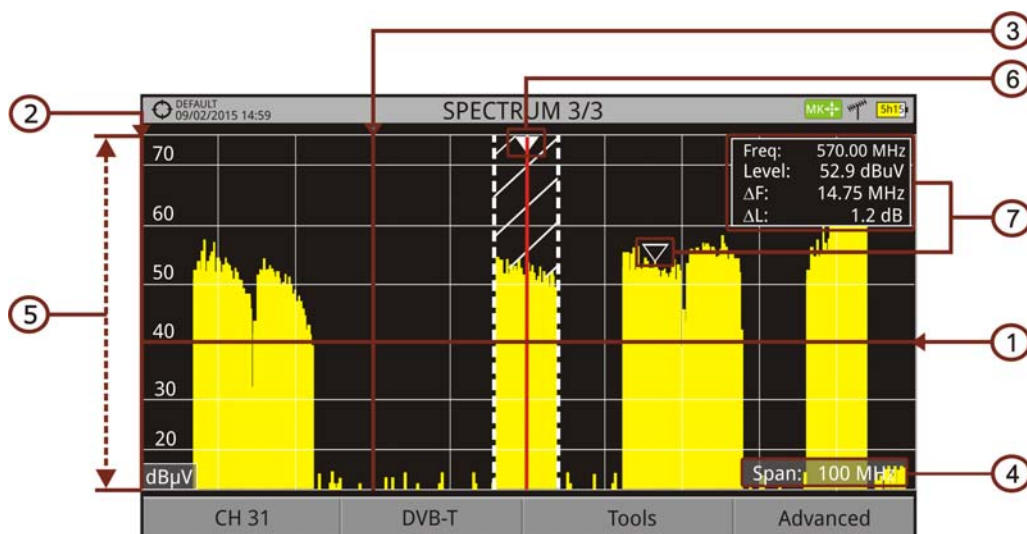


Figure 45.

1 Horizontal reference line

It indicates the signal level.

2 Vertical axis

It indicates the signal level.

3 Vertical reference line

It indicates the frequency.

4 SPAN

It is the frequency range displayed on the horizontal axis.

The current span value appears at the bottom right of the screen. To change use the joystick (left, right) in span mode (SP) or change it by the "span" option in the Tuning menu (F1 key).

Using the *joystick*, span values available are: Full (full band), 500 MHz, 200 MHz, 100 MHz, 50 MHz, 20 MHz and 10 MHz.

Using the "span" option in the Tuning menu it is possible to use any span value between 10 Hz and FULL.

Tune by frequency works in 50 kHz steps or by frequency selection.

5 Reference Level

It is the power range represented on the vertical axis.

To change use the joystick (up, down; 5 dB steps).

This equipment has an option to activate the automatic adjustment of the reference level, so it detects the optimal reference level for each situation. This option can be enabled or disabled through the **PREFERENCES** menu and **Measures** tab.



6 **Cursor**

Red vertical line that indicates position during the channel or frequency tuning.

When a digital signal is detected, there is a triple cursor that shows the frequency for the signal locked and two vertical lines that shows the bandwidth of the digital carrier.

In the case of a GENERIC signal, the bandwidth shown is the one selected by the user on the "Signal Parameters" menu when pressing the **F2** key.

To change frequency/channel use the joystick (left, right) in FR mode (tuning by frequency) or CH mode (tuning by channel).

7 **Marker**

It is a special cursor that can be placed on a given frequency to check the power in this point.

This option can be enabled using the "Marker" option from the Advanced menu (**F4** key). To change use the joystick (left, right) in MARKER (MK) mode.

The window Marker shows the following data:

Freq: Frequency where is placed the marker.

Level: Power level at the frequency where is placed the marker.

ΔF : Difference of frequency between the marker and the main cursor.

ΔL : Difference of power level between the marker and the main cursor.

8 **Centre frequency**

Frequency at which the screen is centered. This frequency can be set through the **Tuning** **F1** menu. It also changes when moving the cursor out of the screen.

4.4 **Joystick Operation**

In the **SPECTRUM ANALYSER** mode, the joystick can make different actions depending on its active mode.

The active mode of the joystick appears as an icon at the top right of the screen. Available modes are:

- **Frequency tuning.**
- **Channel tuning.**
- **SPAN change.**
- **Marker moving.**

To change the active mode press the joystick.

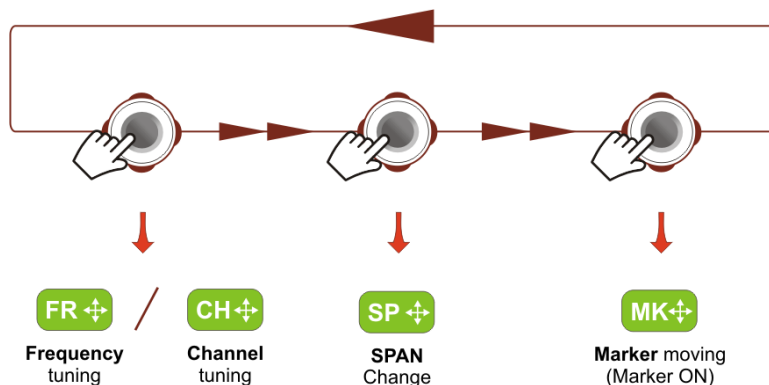


Figure 46.

Pressing left or right will take appropriate action according to the active mode.

Pressing up or down will change the reference level regardless the active mode.

The frequency or channel tuning mode will appear depending on the selected tuning type. Access the TUNE BY **F1** menu to select the type of tuning.

To show the **Marker** mode, it must be ON. Access the **ADVANCED** menu **F4** to activate the **Marker**.

Pressing the joystick for 1 second, a box appears explaining the joystick modes available. From here user can also select the active mode.

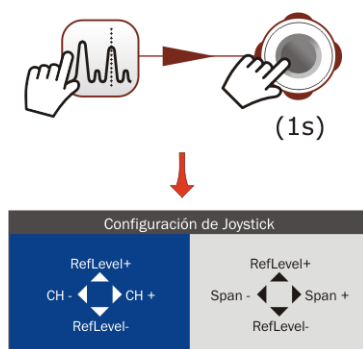



Figure 47.



4.5 Specific Options

Access by the  function key. It allows selecting among several parameters to display the spectrum.

The advanced menu consists of the following options:

- ▶ **Average:** The user can select the amount of signal values to be used to set the average signal value to be displayed on screen. The larger the average value, the more stable the displayed signal appears.
- ▶ **Spectrum Line:** It defines the spectrum display. Outline option displays the spectrum outline. The Solid option displays the contour of the spectrum with solid background. The **Transparence** option shows the outline in yellow and the background in a softer yellow.
- ▶ **Tone Level:** This option produces a tone that changes according to the input level of the signal so the tone is sharper if the level increases and deeper if the level decreases.
- ▶ **Marker:** It allows enabling/disabling the marker. This marker is displayed on screen with the shape of an arrowhead, showing on screen some information about the frequency and power level where it points. You can move left/right by the joystick in **MK** mode (press the joystick until the icon **MK** appears).
When the Marker is ON at the top right corner a window pops up with the following data:
 - Freq:** Frequency where is placed the marker.
 - NEW! Level:** Power level at the frequency where is placed the marker (in case of working with FSM tool, it shows FSM level).
 - ΔF:** Difference of frequency between the marker and the main cursor.
 - ΔL:** Difference of power level between the marker and the main cursor.
- ▶ **Marker Trace:** It allows the user to place the marker on a specific trace:
 - Normal:** Marker is placed on the spectrum trace in real time.
 - Reference:** Marker is placed on the spectrum reference, captured by the **Reference** function.
 - Max. Hold:** Marker is placed on the spectrum trace by the **Max. Hold** function.
 - Min. Hold:** Marker is placed on the spectrum trace by the **Min. Hold** function.



- ▶ **Max. Hold:** (Off/Permanent/Curtain). It allows the user to display the current signal with the maximum values measured for each frequency. The **OFF** option disables this function. The **Curtain** option displays the maximum values in blue for a moment with the current signal. The **Permanent** option maintains maximum signal on the screen. This option is especially useful for detecting sporadic noises.
- ▶ **Min. Hold:** (Off/Permanent/Curtain). It allows the user to display the current signal with the minimum values measured for each frequency. The **OFF** option disables this function. The **Curtain** option displays the minimum values in green for a moment with the current signal. The **Permanent** option maintains minimum signal on the screen. This option is useful for detecting interferences in TV cable or identify deterministic interference in analogue and digital channels.
- ▶ **Persistence:** When active, the signal is displayed on a coloured background. The signal prior to current signal persists for a while before disappearing so the user can see how the signal changes easily.
- ▶ **Detector Type:** (PEAK / RMS). It allows the user to select between maximum PEAK detector or RMS detector. The maximum peak detector is mainly used for analogue modulated signals, while the RMS option is the right choice for digital modulated signals. The MAX peak detector is mostly used for analogue modulated signals, while the RMS is the proper choice for digital modulations. The maximum peak detector causes the noise floor to rise, according to the RMS to peak ratio. That same effect causes digital signals to apparently grow in level when maximum peak detector is used.
- NEW!** ▶ **Resolution Bandwidth:** Resolution filters available. For terrestrial: 2, 10, 20, 40, 100, 200 and 1000 kHz. For satellite: 10, 20, 40, 100, 200 and 1000 kHz. According to the filter being selected, that maximum and minimum span allowed is modified.
- ▶ **Vertical Range:** It allows to adjust the vertical scale on screen. Available values are 1, 2, 5 and 10 dB per division.
- ▶ **Dashed BW:** When it is ON the channel bandwidth area is hatched by lines.
- ▶ **Reference:** (Set / Clear). It memorizes the current trace on screen, which can be used as a reference for further comparison. It may be also very helpful for visually measure the gain or attenuation in a TV distribution network. To delete the reference, select the "clear" option. It can also be activated by a short press on the export key in the Spectrum Analyzer mode. Pressing short again on the export key it clears the reference.



4.6 **Select and edit parameters**

To edit or select any parameters of these described above, follow these instructions:

- 1 Place over and press on the option.
- 2 The data field gets into the edit mode, indicated by the yellow background.
- 3 A menu is displayed at the right with some options or if it is numeric, a number gets a black background.
- 4 Move up/down to select one option. To move between figures press right/left and to change it press up/down.
- 5 When finished press again or any function key to exit.

4.7 **Locking a signal**

- 1 Connect the cable with the input signal to the **RF** input connector.
- 2 Press the **SPECTRUM** key. The spectrum of the signal is displayed.
- 3 Adjust the span (recommended value for a terrestrial signal 50 MHz and for a satellite signal 100 MHz). The current value of the span is at the right bottom of the screen.
- 4 Find the frequency of the signal by moving the joystick left or right to move sweeping the entire band.
- 5 If you know the channel change the tuning by frequency to tuning by channel. The channel mode allows you to navigate from channel to channel, using the selected channel plan.
- 6 When the channel is locked information appears at the bottom left of the screen. A triple cursor shows the detected BW for a digital carrier.
- 7 The equipment automatically detects transmission parameters of the signal and makes the corresponding measurements.

4.8 **Satellite Identification**

The spectrum analyser makes easier the fieldwork for engineers when working with SNG mobile units and VSAT communications, since it allows adjusting transmission-reception systems. It also has several functions to identify satellites that avoid any possibility of error. When the signal is locked it identifies the satellite and shows on screen its name.



Often satellite operators request to look for the "Beacon" signal, as a method of satellite identification. This signal is easily identified by the equipment, because it has high resolution, high sensitivity and short sweep times.

Below are two BEACON screenshots signals, with a little span and a bandwidth of 100 kHz resolution, all with a sweep time of 90 ms.

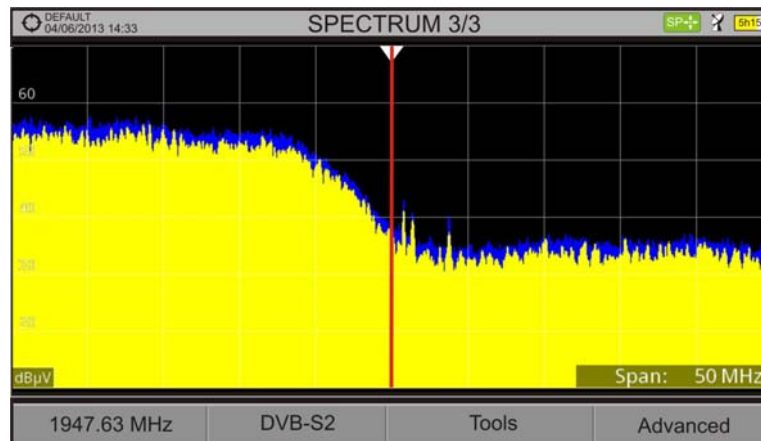


Figure 48.

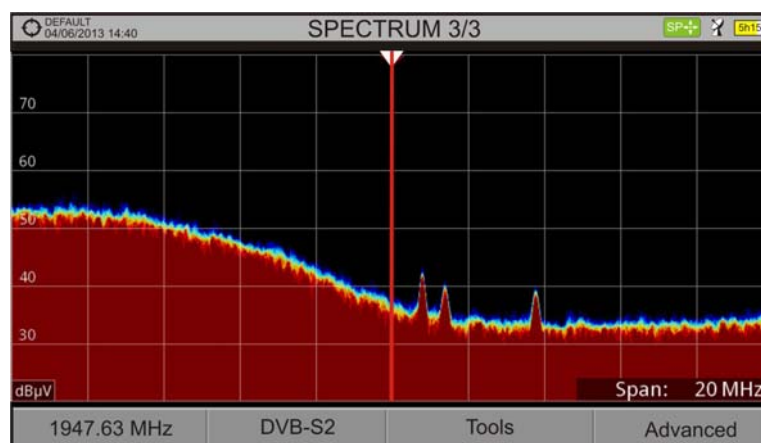


Figure 49.


More data for installations with satellite signals in annex "How to point a dish antenna."



5 TV MODE





5.1 Introduction

On the left side of the front panel there are three functions keys, which give direct access to the three most important functions. One is the **TV MODE** key  which displays the resulting image from decoding received RF signal.

TV MODE, thanks to the StealthID function of automatic identification, automatically identifies and demodulates the signal received by the RF input, so the user can check the signal on the screen. It shows information about the channel and its services.

5.2 Operation

- 1 To access the **TV MODE** option, press the  key.
- 2 If it locks the signal, the screen shows the tuned signal demodulated. For digital carriers, the first service of the terrestrial multiplex or satellite transponder appears. In case the signal is scrambled the image will not appear and it shows the icon for scrambled signal. In the case of an analogue signal, tuned signal will appear.
- 3 To access the next view (if digital signal) of the **TV MODE**, press the  again. At the last view it will return back to the first.



5.3 Screen Description

5.3.1 TV MODE: TV views

Views for TV mode are:



TV 1/3: FULL TV

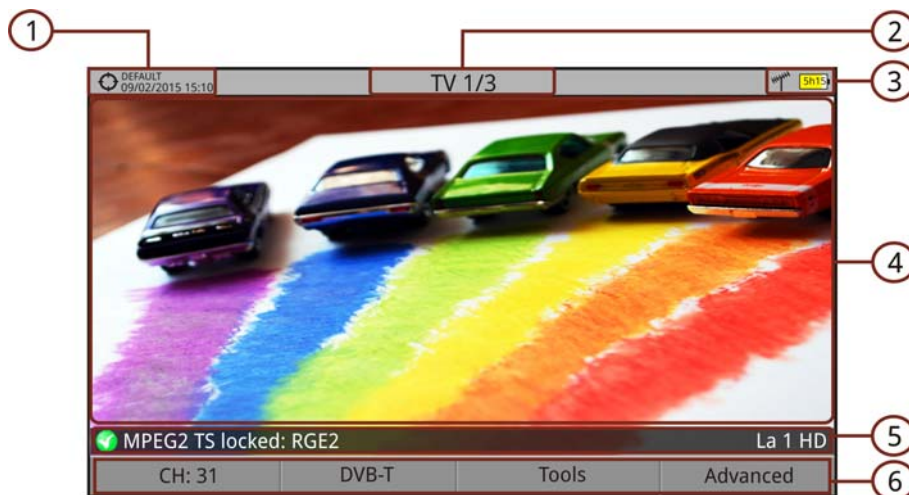


Figure 50.

- 1 Selected installation; date and time.
- 2 Number of view/total views.
- 3 Selected band, battery level.
- 4 Tuned service image.
- 5 Signal status (searching/locked/multiplex name) and name of the selected service.
- 6 Softkeys menus.

► **Joystick up/down:** It changes service.

► **Joystick left/right:** It changes channel/frequency (depending on the tuning mode).



TV 2/3: TV + SPECTRUM + MEASUREMENT

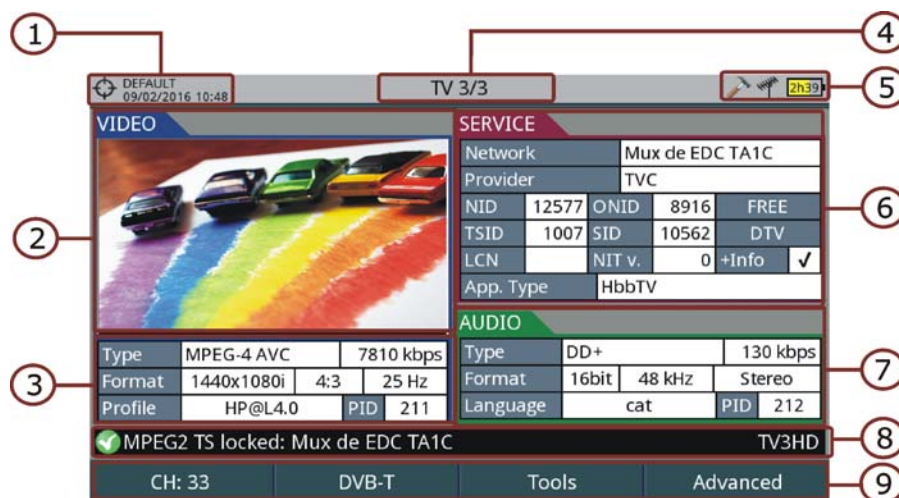


Figure 51.

- 1 Selected installation; date and time.
- 2 Number of view/total views.
- 3 Selected band, battery level.
- 4 Tuned service image.
- 5 Spectrum.
- 6 Measured values of the signal in the frequency/channel the cursor is pointing.
- 7 Signal status (searching/locked/multiplex name) and name of the selected service.
- 8 Softkeys menus.

► **Joystick up/down:** It changes service.

► **Joystick left/right:** It changes channel/frequency (depending on the tuning mode).



TV 3/3: SCREEN TV + SERVICE DATA

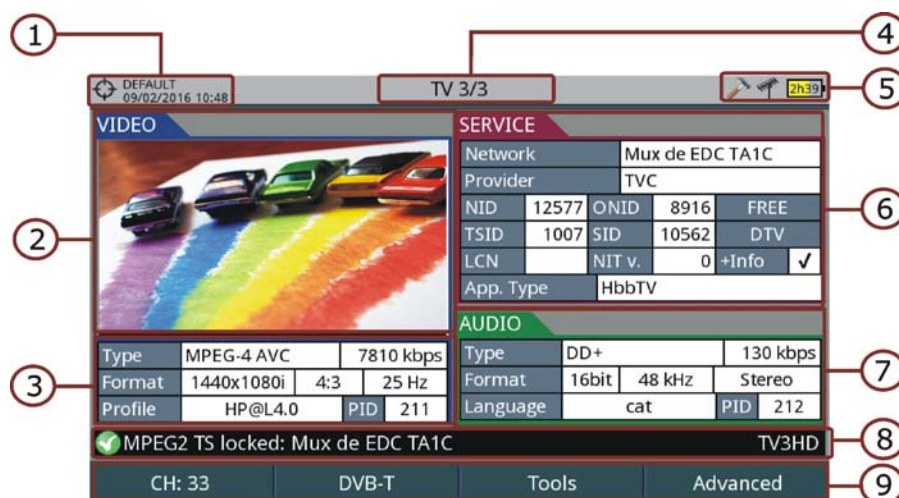


Figure 52.

- 1 Selected installation; date and time.
- 2 Tuned service image.
- 3 Tuned service information.
 - ▶ **TYPE:** Encoding type and video transmission rate.
 - ▶ **FORMAT:** Resolution (horizontal x vertical), aspect ratio and frequency.
 - ▶ **PROFILE:** Profile level.
 - ▶ **PID:** Video program identifier.
- 4 Number of view/total views.
- 5 Selected band; battery level.
- 6 Tuned service information.
 - ▶ **NETWORK:** Television distribution network (Terrestrial). Orbital position (Satellite).
 - ▶ **PROVIDER:** Program provider name.
 - ▶ **NID:** Network identifier where the signal is distributed.
 - ▶ **ONID:** Identifier of the original network where the signal originates.
 - ▶ **TSID:** Transport stream identifier.
 - ▶ **SID:** Service Identifier.
 - ▶ **App. Type:** Type of detected interactive service such as HbbTV, MHP and MHEG-5. It also shows the URL related to the interactive service in F4: Advanced - Discovered URLs.
 - ▶ **LCN:** Logic Channel Number. It is the first logic number assigned to the first channel in the receiver.
 - ▶ **+Info:** Additional service information.
 - NEW!** ▶ **NIT v.:** Network Information Table version.



- ▶ **FREE/SCRAMBLED:** Free/scrambled transmission.
 - ▶ **DTV/DS:** Standard type of transmission.
- 7 Tuned audio information.
- ▶ **TYPE:** Type of audio encoding and transmission speed
 - ▶ **FORMAT:** Service audio format. Bit depth; sampling frequency; sound reproduction.
 - ▶ **LANGUAGE:** Broadcasting language.
 - ▶ **PID:** ID of the audio program.
- 8 Signal status (searching/locked/multiplex name) and name of the selected service.
- 9 Softkeys menu.
- ▶ **Joystick up/down:** It changes service.
 - ▶ **Joystick left/right:** It changes channel/frequency (depending on the tuning mode).

NOTE: The equipment can identify the HEVC (H.265) signaling and display its transmission data such as the video type, profile, format, aspect ratio and bit rate. However HEVC cannot be decoded so no image on screen will be displayed.

NOTE: PID, NID, ONID, TSID and SID fields can be shown in decimal or hexadecimal format. To select this parameter go to "Values Format" in **NEW!** "Preferences" - "Appearance".



5.3.2 TV MODE: Radio views

Radio views are:



RADIO 1/3: AUDIO RADIO



Figure 53.



RADIO 2/3: AUDIO RADIO + SPECTRUM + MEASUREMENTS

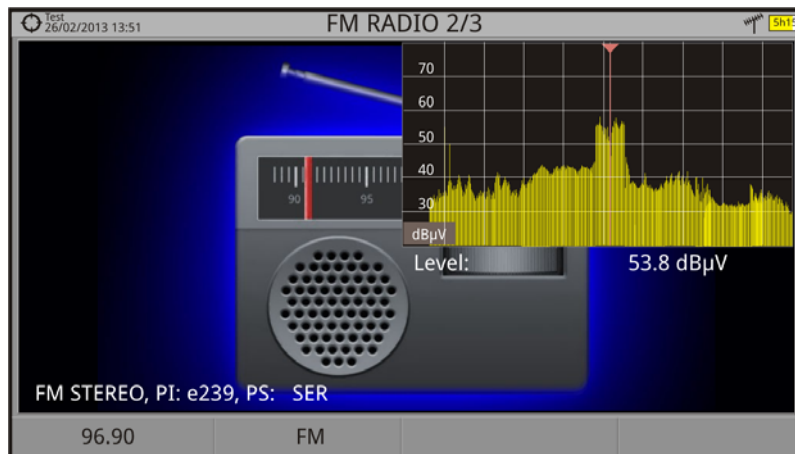
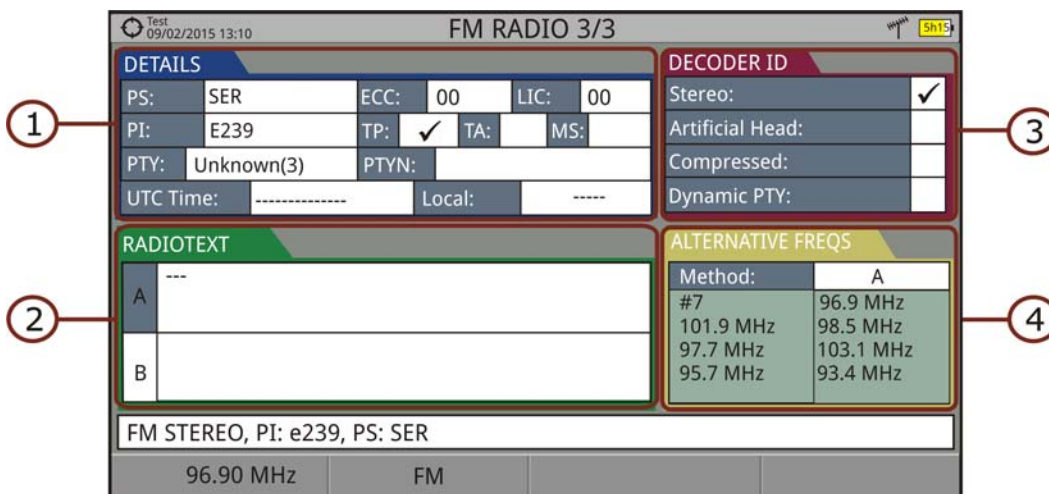


Figure 54.


RADIO 3/3: AUDIO RADIO + RDS DATA


Test 09/02/2015 13:10 FM RADIO 3/3

DETAILS

PS: SER ECC: 00 LIC: 00
 PI: E239 TP: ☒ TA: MS:
 PTY: Unknown(3) PTYN:
 UTC Time: Local: ----

RADIOTEXT

A
 B

DECODER ID

Stereo: ☒
 Artificial Head:
 Compressed:
 Dynamic PTY:

ALTERNATIVE FREQS

Method: A
 #7 96.9 MHz
 101.9 MHz 98.5 MHz
 97.7 MHz 103.1 MHz
 95.7 MHz 93.4 MHz

FM STEREO, PI: e239, PS: SER

96.90 MHz FM

Figure 55.

It shows the most representative RDS data. RDS data are:


- 1 **Details:** It has the following fields:
 - ▶ **PS:** Programme service.
 - ▶ **PI:** Programme Identification.
 - ▶ **PTY:** Program type.
 - ▶ **UTC Time:** Universal time.
 - ▶ **Local:** Local time.
 - ▶ **ECC:** Extended country code.
 - ▶ **LIC:** Language Identification Code.
 - ▶ **TP:** Traffic program.
 - ▶ **TA:** Traffic announcement.
 - ▶ **MS:** Music switcher.
- 2 **Radiotext:** Extra text information.
- 3 **Decoder ID** (decoder identifier): It identifies different operation modes of the decoder.
- 4 **Alternative freqs:** It shows alternative frequencies and total number.



5.4 Specific Options

► Analogue Signal

This option is available only if the detected or selected signal is ANALOGUE.

Pressing the  key it allows selecting the type of analogue input, between antenna (via RF connector) and external (via V/A input connector).

To get an external analogue signal use the A/V input (see [figure 5](#)).

► Aspect Ratio

This option is available only if the detected or selected signal is ANALOGUE.

It allows the user to select the image aspect ratio (4:3; 16:9). It remembers this selection even after switch off.

► Advanced

This option is available only if the detected or selected signal is DIGITAL.

It gives access to these options:

- **Audio:** It allows the user to select among the audio tracks available.
- **TS Data:** It shows the IRG data descriptor. If the signal contains this carrier identifier, this option will be enabled. If the signal does not contain this identifier, the option will be disabled (for more information refer to section "IRG descriptor").
- **Discovered URLs:** If shows the URL related to the interactive service.


5.5 IRG Descriptor

The analyser is compatible with IRG recommendations and it can extract the Carrier ID information and display it conveniently showing all the details.

This information is useful to identify the interference, thanks to the carrier ID. This identifier provides enough information to detect the interference source (customer name, contact data, geo coordinates, etc.) and allows the operators to communicate directly with the RFI source to resolve the incident.



IRG descriptor function is available only for signals containing the carrier identifier. To access this feature:

- 1 Connect the **RF** input signal to the equipment.
- 2 Tune the channel that produces interferences.
- 3 Access to **TV** mode.
- 4 Press the **Advanced** menu .
- 5 Select the **TS Data** option. If the signal has a carrier identifier, this option is enabled. If the signal does not contain this identifier, this option is disabled.
- 6 The **IRG descriptor** window is displayed with the data about the provider (see figure below).

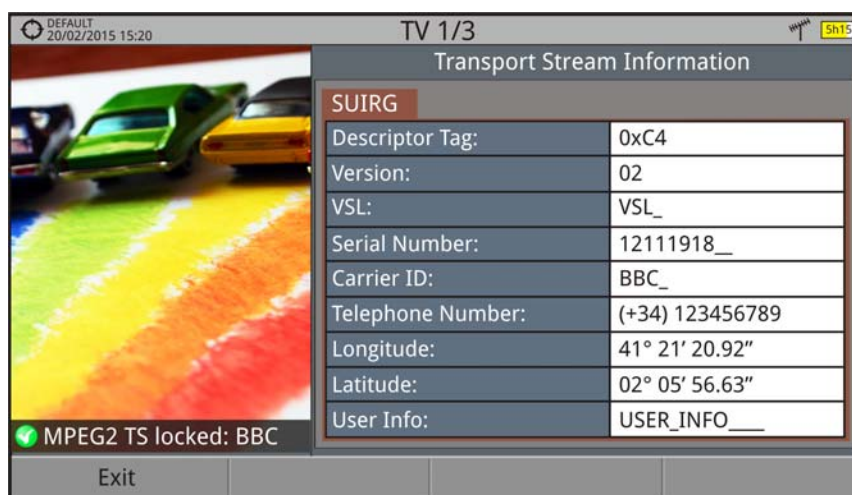


Figure 56.



6 GENERAL MENU OPTIONS

At the bottom of the screen four menus are accessible via the softkeys or programmable keys.



It displays the channel where is pointing the cursor and gives access to the tuning menu.



It displays the selected transmission standard and gives access to the signal parameters menu.




It displays the Tools menu.



It displays the Advanced menu.

In general, these options are the same for all modes (Measure, Spectrum Analyser and TV).

The specific options for a mode are placed in the menu "Advanced" pressing the  key. For more details about these options go to section "Specific Options" in the chapter.

Next each one of these menus is described.


6.1 **F1: Tuning**

Access by the function  key. It contains the options to tune a channel.

The tuning menu consists of the following options:

- ▶ **Channel/Frequency:** It displays the channel/frequency pointed by the cursor. Tuning type (channel/frequency) is selected by means of the "Tune by" option.
- ▶ **Channel Plan:** This option allows the user to select a channel plan from the ones available for the current installation.
- ▶ **Tune by:** It allows the user to select between tuning by channel (selecting a channel or channel by channel with the joystick) and tuning by frequency (selecting a frequency or step by step with the joystick).



- In case of **tuning by channel**, it allows selecting a channel from the active channel plan:
 - 1 Place over the **Channel** option and press the joystick.
 - 2 A box appears with all channels of the active channel plan and its frequency.
 - 3 Move the joystick on the box to select a channel.
 - 4 When finished press joystick to save the selected value or any function key to exit without saving.
 - 5 The cursor will place on the selected channel and it will appear on the  option.
- The channel can be changed directly with the joystick in CH mode.

NOTE: When using tune by channel on satellite, the polarity parameters (horizontal/vertical and left/right) and satellite band (high/low) are selected automatically by the equipment, according to the channel plan enabled and cannot be changed by the user. To change these parameters, the user may switch to frequency tuning. But the user can change the voltage output while in a channel plan, as long as none has been defined in that same channel plan. For instance, if a standard channel plan is being used like the CCIR, there is now need for switching to frequency tuning mode or make special channel plans for using active antennas.

- In case of **tuning by frequency**, the frequency can be edited:
 - 1 Place over the **Frequency** option and press the joystick.
 - 2 The option is highlighted in yellow to indicate it is in edit mode.
 - 3 Move the joystick left/right to move between the figures and up/down to change the figure.
 - 4 When finished press joystick to save the selected value or any function key to exit without saving.
- The frequency can be changed directly with the joystick in **FR** mode in 50 kHz steps.



[Click here to watch this video: Manual input of frequencies](#)



- ▶ **Center Frequency:** This option is available only for the Spectrum Analyser mode. It allows to edit the center frequency. The center frequency is the frequency at which the screen is centered. To edit:
 - 1 Place over the **Frequency option** and press the joystick.
 - 2 The option is highlighted in yellow to indicate it is in edit mode.
 - 3 Move the joystick left/right to move between the figures and up/down to change the figure.
 - 4 When finished press joystick to save the selected value or any function key to exit without saving.

- ▶ **Reference level:** This option is available only for the Spectrum Analyser mode. It allows to edit the reference level. The reference level is the power range represented on the vertical axis. To edit:
 - 1 Place over the **Reference Level** option and press joystick.
 - 2 The option is highlighted in yellow to indicate it is in edit mode.
 - 3 Move the joystick left/right to move between the figures and up/down to change the figure.
 - 4 When finished press joystick to save the selected value or any function key to exit without saving.

- The **Reference Level** can be changed directly pushing the joystick up or down.

- ▶ **Span:** This option is available only for the Spectrum Analyser mode. It allows to edit the span, which is the frequency range displayed on screen. To edit:
 - 1 Place over the span option and press the joystick.
 - 2 The option is highlighted in yellow to indicate it is in edit mode.
 - 3 Move the joystick left/right to move between the figures and up/down to change the figure.
 - 4 When finished press joystick to save the selected value or any function key to exit without saving.

- The span can be changed directly with the joystick in **SP** mode.



► **Center tuned frequency:**

This option is only available for the Spectrum Analyser mode. When selecting this option, the frequency tuning (where the main cursor is pointing) is placed at the center of the screen. Even if changing span or mode (TV or MEASURES), frequency will keep at the screen center. This option does not work with FULL span.

► **Downlink:**

This option is available only if the option **Ter. Downlink** in **Preferences** menu has been enabled. It allows user to work in terrestrial band with radio link down converters external units (from 1 to 11 GHz) and tune using the link frequency.

► **View all services:**

This option only appears if the **Database services** option is enabled in the **Preferences** menu.

This option displays a window with a list of services that have been detected in the current installation.

The list shows service name, provider, SID (stream identifier) and an icon that shows its type (radio, tv) and if it is scrambled. When hovering on the service for one second it displays a hint window with more information.

If user presses the joystick on a service, it will access that service.

When disabling the **Database services** option, all services in the installation will be deleted from the list. At the bottom of this option are shown the softkeys with these functions:



Cancel: It exits the option.



Filter List: It shows several options to filter the list of services: By access (Free Only, Scrambled Only, All); By type (All, TV, Radio); Search by name (filtered by the name); Reset list (it restarts the list as at first) Service filtering is persistent until resetting.




Page Up: It jumps one page up.



Page Down: It jumps one page down.



6.2 F2: Signal Parameters

Access by the  function key. It allows selecting the standard transmission and displays the parameters for signal transmission.

This menu allows selecting the transmission standard:

► **Type of signal:** It displays the selected standard. It allows selecting another standard in the same band (terrestrial or satellite):

- 1 Place over the **Signal Type** option and press the joystick.
- 2 It displays a menu at the right with the transmission standards.
- 3 Move the joystick up / down to select a standard.
- 4 Press joystick to select the standard or any function key to exit without selecting.

► View Advanced Parameters:

It shows the TPS parameters (Transmission Parameters Signalling) for the locked signal according to the modulation standard. This option is available only when these parameters are detected.

- The remaining transmission parameters are detected demodulating the locked signal.
- In case of a DVB-S/S2 signal, the symbol-rate parameter can be set manually.
- In case of a DVB-S2 signal, there will be some special settings for this type of signal. They are:

Physical Layer Scrambling or PLS is used in DVB-S2 as a way to improve data integrity. A number called the "scrambling sequence index" is used by the modulator as a master key to generate the uplink signal. This same number must be known by the receiver so that demodulation is possible.

Most satellite transponders use PLS 0 as a default value but there are some transponders that use other values.

If it is a multistream signal (MSI), it will appear an option that enables filtering by the input stream identifier (ISI) and to select the stream to demodulate.

When a satellite transponder is working with a non-zero PLS code plus MSI (multiple streams), system will lock that signal in a quite automatic way.




[Click here to watch this video: DVB-S2 multi stream decoding](#)



- In case of a Generic signal, the menu shows an option to select the signal bandwidth.

6.3 F3: Tools

Access by the  key. It shows the Tools menu. Tools that are not available for the current locked signal are disabled. Tools are:

- **Select Service:** It displays the list of services available in the multiplex tuned, with the service name, icons that identify the service type, SID (stream identifier) and LCN (logic channel number).

Icons that appear next to the service name identify the features of the service. The meaning is given in the following table:

	Digital TV service		High Definition TV service
	Digital radio		Data
	Scrambled service		

- **TS Analyser:** This tool allows the user to make a comprehensive analysis of the Transport Stream (TS) contained in a tuned signal.
- **TS Recording:** This tool can capture in real time the received transport stream (TS) contained in the received signal.
- **Signal monitoring:** This tool allows the user to monitor a signal by measuring its power, MER and C/N. All this data, can be downloaded to a PC and exported to a file for later analysis. In this file are saved all characteristics measurements for each type of signal.
- **Explore channel plan:** It explores the selected channel plan. Tune by channel must be selected.
- **Constellation:** It displays the constellation of the locked signal.
- NEW!** ► **Service Recording:** The equipment records in real-time one digital service from the transport-stream received that is shown on screen. This service is saved directly on the USB flash drive memory connected to the equipment.
- **LTE Ingress Test:** It enables the detection of signal interferences coming from mobile phones.



- ▶ **Attenuation test:** This feature allows the user to easily check the response of the telecommunications installations before antennas and headers are working.
- ▶ **Echoes:** It detects the echoes that may appear due to the simultaneous reception of the same signal from several transmitters.
- ▶ **MER by carrier:** This function analyses continuously the measure of the MER value for each one of the carriers forming the selected channel and they are displayed in a graphic on screen.
- ▶ **MEROGRAM:** This function shows a graphical representation of the MER level for each carrier of the locked signal, which is superimposed over time.
- ▶ **Datalogger:** It creates a file in which are stored measurements. This file belongs to the selected current installation.
- ▶ **Spectrogram:** This function shows a graphical representation of the spectrum superimposed over time of a channel or frequency selected by the user.
- ▶ **Discover FM Stations:** This function scans the FM band and creates a FM channel plan from scratch. Scanned frequency range is from 87 to 108 MHz.
- ▶ **Field strength:** This tool allows the equipment to measure as a field strength meter.
- ▶ **Task Planner:** It allows the user to schedule specific tasks.

For more information about these features, see the "**Tools**" chapter.



7 TOOLS

7.1 Transport Stream Analyser

7.1.1 Description

This tool allows the user to make a comprehensive analysis of the Transport Stream (TS) contained in a tuned signal. The signal can be received through any of the equipment inputs: TS -IN, RF, IP, CAM module and terrestrial and satellite demodulators. This feature gives a great flexibility to process the signal in multiple ways, so the equipment becomes a portable laboratory for the analysis of digital signal.


This tool can be of great interest to research centres, broadcasting operators, universities or training centres as well as to installers that want to expand their technical knowledge or training in analysing the smallest unit of a digital signal transmission.

This tool has these main functions:

- ▶ **Tables:** It shows all the metadata carried in the corresponding PSI/SI tables in a tree diagram so user can deploy its content to the detail.
- ▶ **Bitrates:** It shows the bitrate information for each program in real time, in a graphical way and also shows the percentage contribution of each one to the total TS.
- ▶ **Alarms:** It shows a list of alarms that warn about any possible failure in the TS layer according to the three priority levels described in the TR 101 290 measurement guidelines by the DVB group.
- ▶ **PID list:** It shows an ordered PID list with a short explanation of its contents. PID bitrate is refreshed continuously to help in understand bandwidth usage.

7.1.2 Operation

The Transport Streams (TS) Analyser tool is available for all DIGITAL signals.

- 1 Connect the digital signal to any input of the equipment.
- 2 Select the channel or frequency and tune the signal.
- 3 Press the **Tools** key .
- 4 Select the **TS Analyser** option.



- 5 A drop down menu appears with three options: **Tables**, **Bitrates**, **Alarms** and **PID list**. Select your option.
- 6 While starting, the TS Analyser takes few seconds to detect and identify the TS signal (it shows the table capture process on screen), and then the results appear.
- 7 An error message pops up if the signal does not contain any TS or if the TS cannot be found. In this case, check the signal.

The following describes in detail each one of these functions.

7.1.3 Table Analyser

► Description:

This function displays the TS tables. When system starts it shows the table capture process. When it finishes tables are shown in a tree diagram for easy browsing with the joystick. All components and contents of tables can be consulted by deploying the nodes. So the user can analyse the tables and see in detail what is being transmitted and if the information is properly encapsulated. This tool requires detailed knowledge about the contents of these tables.

► Screen Description:

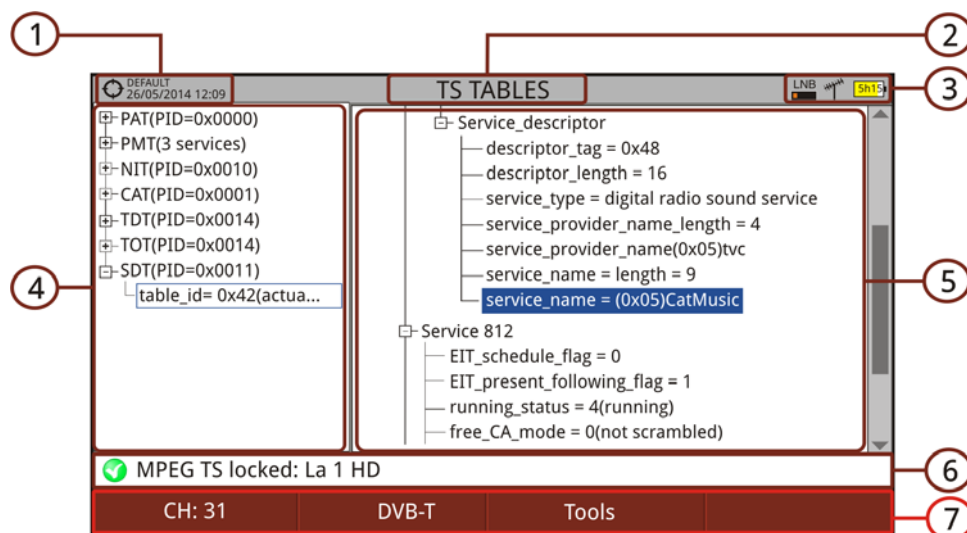





Figure 57.

- 1 Selected installation; date and time.
- 2 Selected function.
- 3 Selected band; battery level.
- 4 Main Table Tree.



- 5 Detail Table Tree.
 - 6 Signal status (searching/locked/multiplex name).
 - 7 Softkey menus.
- Joystick **left/right**: It changes between Main menu tree and Detail menu tree.
 - Joystick **up/down**: It moves along the tables in the tree.
 - Joystick: Pressing on a node with the symbol  it deploys the tree. Pressing on a node with the symbol  it closes the tree.
 - **Advanced** : It shows the "**Restart Analysis**" option which makes a new detection and updating of the TS tables.

► Tables Description:

Below is a brief explanation of the main tables that can appear in the detection of a TS. For more details we recommend to consult the these guidelines [ETSI TR 101 211](#).

There are two generic groups of tables:

- **PSI** (Program Specific Information) **Tables**: These tables are specified by the MPEG-2 standard worldwide. They are used by all the digital transmission standards. The TS analyzer detects all the PSI tables.
- **SI** (Service Information) **Tables**: These tables are specified by the standard used in the area or country (in this case DVB). These tables are more detailed and imply a higher level of information relating to the PSI tables. The TS analyzer detects the most important SI tables.

The PID (Packet Identification) code next to the name of the table is a 13-bit code that identifies each packet type and therefore to what kind of table corresponds.

► PSI Tables:

PSI tables are:

- **PAT** (Program Association Table): It is a master table that lists all services found in the TS being transmitted. It also points the table where are specified each one of the services.
- **PMT** (Program Map Table): It is a table that identifies all the components within a service (video, audio and/or data).



- **NIT** (Network Information Table): Optional table with information about TS and multiplex of a given network. The content in detail is described in the tables used by the digital standard (DVB in this case).
- **CAT** (Conditional Access Table): Table that controls the scrambling of a service.

► **SI Tables:**

Most important SI tables are:

- **NIT** (Network Information Table): It is a master table used by the broadcasting network to manage the services. It provides logic network info by grouping several TS together and adding tuning information for all network services. In the case of a satellite provides information about its channels. It also contains the LCN descriptor that provides information to order the services.
- **BAT** (Bouquet Association Table): It is a table containing information required to group a set of services or content, which is related for commercial reasons (packs of a particular distribution platform, packs of a particular film genre or sport, etc.).
- **SDT** (Service Description Table): It is a table with a description of each service, providing a service name and other related information such as head-end and service details, if it is scrambled or not, if it is radio or tv, the provider, etc.
- **EIT** (Event Information Table): Table that provides information on events (program or programs being broadcasted) in a given service. It is the basis for building an EPG (Electronic Program Name), the program guide shown on TV.
- **TDT** (Time and Date Table): Table that provides UTC (Universal Time Coordinated) coded as MJD (Modified Julian Date) that means, time and date at the current moment and universal.
- **TOT** (Time Offset Table): Table that provides the time offset related to UTC in order to calculate the local time. It also provides information on daylight saving time changes.



7.1.4 Bitrate Analyser

► Description:

This function shows the TS bitrate in a graphical way, and also by numbers and percentage. A pie graph, which is updated in real time, shows the evolution of the bitrate distribution for each one of the services in the tuned multiplex. It also allows selecting any of the services to check its composition, which is also shown in bar graph.

This function allows the user to compare between television services and to check the bitrate used by each one. User can observe dynamically the variation that when changing the transmission content. Another use may be to identify the amount of null packets and therefore to know the amount of available payload by the multiplex.

► Screen Description:

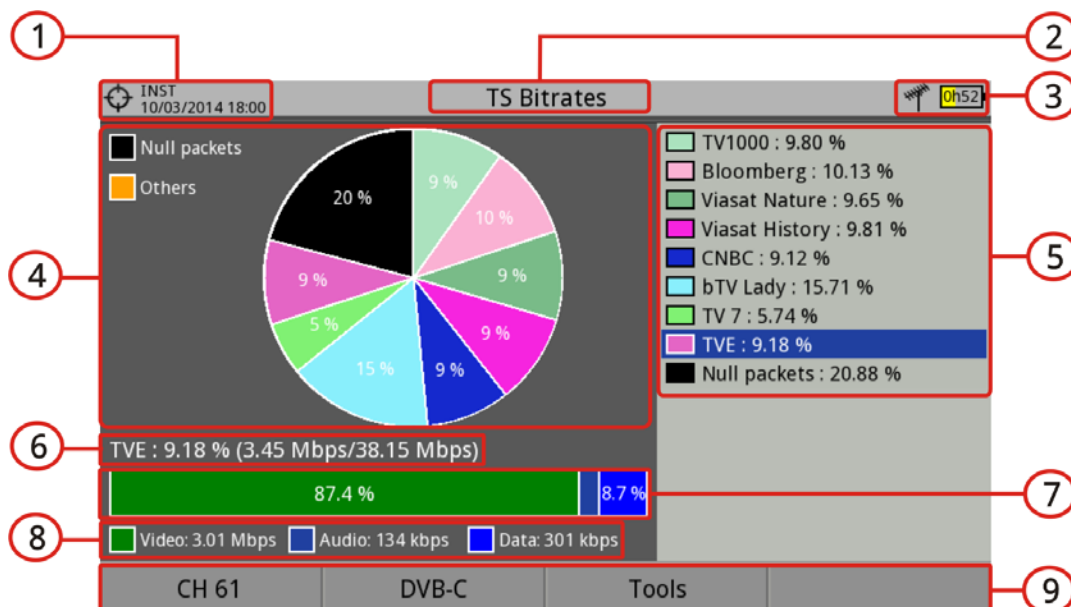



Figure 58.

- 1 Selected installation; date and time.
- 2 Selected function.
- 3 Selected band; Battery level.
- 4 Pie Chart. The graph represents and shows the percentage of each service on the total bitrate for the tuned channel. The colours of the graph correspond to the services detected. They are shown on the right side of the screen. Services with a very low percentage are grouped with the legend "Others".
- 5 Detected services. It shows all the services identified in the tuned multiplex and the percentage of each service relating to the total bitrate.

- 6 Detail of the Selected Service: Service name and percentage related to the total bitrate (bitrate/total bitrate).
 - 7 Bar graph representing the bitrate percentage for each component (video, audio, data).
 - 8 Video bitrate, audio and data.
 - 9 Softkey menus.
- ▶ Joystick **up/down**: It moves among detected services.
 - ▶ Joystick: Pressing on a service it will show details of the selected service.
 - ▶ **Advanced** : It shows the "**Restart Analysis**" option which makes a new detection and updating of the TS tables.

7.1.5 Alarms

▶ Description:

This tool monitors the TS. It is a dynamic tool as it displays in real time the evolution of the TS and the alarms that may occur. The priority levels of alarms are set according to the recommendations by technical standards TR 101 290.

Each alarm has a log where events are stored. These data can be exported.

▶ Screen Description

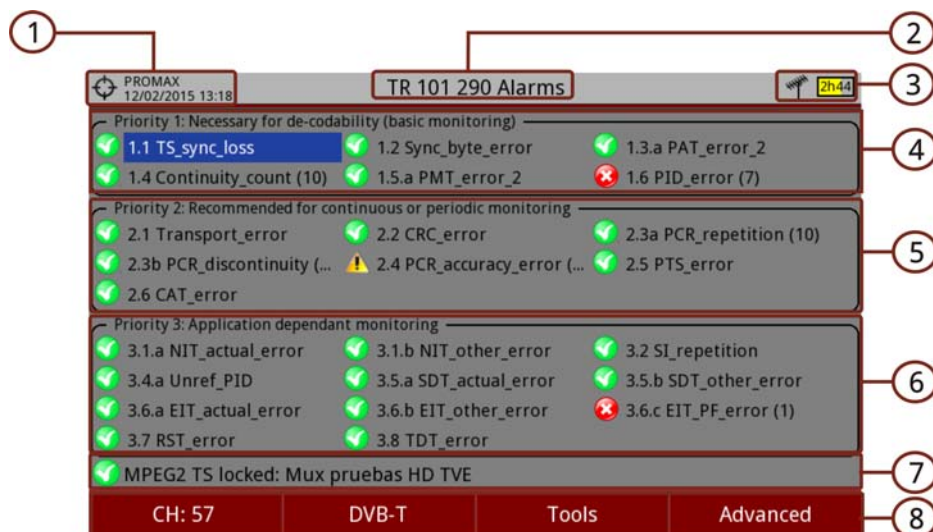



Figure 59.



- 1 Selected installation; date and time.
- 2 Selected function.
- 3 Selected band; Battery level.
- 4 **Priority 1:** High level security parameters. These are alarms that make the TS vulnerable and avoid them to be received. The parameters at this level must be correct for the TS to be decoded. If any of these parameters fails the information cannot be recovered and therefore the signal cannot be decoded.
- 5 **Priority 2:** Medium level security parameters. These are alarms recommended by DVB for continuous or periodic monitoring of TS and ensure quality of transmission parameters. The alarm in any of these parameters does not prevent the receiving but it is indicative of a possible problem.
- 6 **Priority 3:** Low level security parameters. These are parameters that are not harmful but are required for getting the most from the receiver capabilities. They ensure that the receiver can extract in the best conditions the TS information especially when there are additional features such as the program guide or the services list.
- 7 Signal status (searching/locked/multiplex name).
- 8 Softkey menus.

Advanced : It shows the "Restart Analysis" option which makes a new detection and updating of the TS tables.

- **Joystick up/down:** It moves among alarms and highlights one on blue background.
- **Joystick press:** When you press on an alarm, it gives access to the alarm log.
- Icons that appear according to the alarm type are:



OK.



Warning.



Error.

- ▶ **Alarm Log description:** To access the alarm log screen, press on the alarm to access its log screen.
 - The "Log" tab shows the alarm log data.
 - The "Description" tab shows a description of the alarm.
 - The "Settings" tab shows the following settings options:
 - ▶ **Enable this alarm:** When this box is checked the alarm is enabled.
 - ▶ **Notify on error:** It enables or disables the alarm warnings. If it is enabled it will notify the alarm status on screen.
 - ▶ **Log Size:** It allows the user to select the number of events stored (10, 25 or 50).
 - ▶ **Order of events:** Select the order for keeping the events between keeping the first or the last ones.

To export the alarm log connect an USB memory to the equipment and press **F2**: **Export**. The data is exported into a plain text file.

7.1.6 PID list

▶ Description:

This tool shows an ordered PID list with a short explanation of each PID and its bitrate. Bitrate is refreshed continuously to help in understand bandwidth usage.

▶ Screen Description:

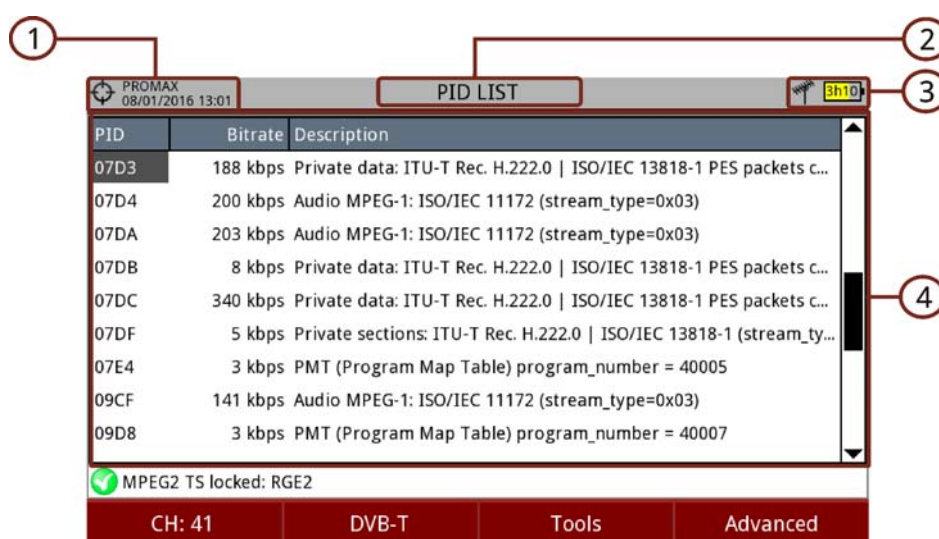


Figure 60.



- 1 Selected installation; date and time.
- 2 Selected function.
- 3 Selected band; Battery level.
- 4 PID, real-time bitrate and description.

7.2 Transport Stream Recording








7.2.1 Description

This tool captures in real-time transport streams received by any input (RF, ASI or IP) such as a DTT channel. The recording is stored in an internal dedicated memory of 1 GB. After recording, it can be played on the equipment itself as if it were a live received signal. The recording time depends on the bit rate of the transport stream, but by reference to a DVB-T signal of 19.9 Mbps, six minutes of transmission can be stored.

7.2.2 Operation

Transport Stream recording is available for all **DIGITAL** signals.

To access the **Transport Stream recording** tool:

- 1 Connect the signal to any of the equipment inputs.
- 2 Access the **SETTINGS** menu  and in the **Source Signal** option select between IPTV or RF.
- 3 Access the **SETTINGS** menu  and in the **Decoder TS Input** select from where comes the transport stream: RF, IPTV or ASI Input.
- 4 Press : Tools and select the option **TS Recording**.
- 5 It shows the screen for TS recording / playback.
- 6 Start recording by pressing the **RECORD** key .
- 7 End recording by pressing the **STOP** key .
- 8 To play the recorded transport stream press the **PLAY** key .
- 9 During the playback of the transport stream it can be analysed by the **TS Analyser** tool as if it was received live. All services encapsulated in the transport stream are also available in the TV mode.
- 10 When playback ends verify that the **Decoder TS Input** option in the **Settings** menu  is properly set in order to receive the corresponding type of signal.

- Only one transport stream can be recorded, regardless of size.
- When a new transport stream is recorded, the previous one, if any, is deleted.

► Screen Description



Figure 61.

- 1 Selected installation; date and time.
- 2 Selected band; Battery level.
- 3 Recording / playback image.
- 4 Recording / Playback time elapsed.
- 5 Control Keys:
 - : Recording.
 - : Rewind.
 - : Stop.
 - : Forward.
 - : Play.
- 6 File information window that reports about file duration, the recording date and maximum bit rate.
- 7 This window reports about the recording source.



- 8 This window reports about available space and total space.
- 9 Softkey menus.

► **Joystick Left / Right:** Navigation through the control keys.

7.2.3 Menu options

In the bottom of the screen are two options accessible via the softkeys.



Exit: It exits the tool.



Erase File: It erases the internal memory dedicated to record transport stream, prior a confirmation message.



Export to USB: It copies the captured TS to an external USB memory. It displays a menu with two options:

Start copy: It starts to copy if a USB is connected.

Start at: The user can set an offset in seconds from the capture start.

While copying the following data are indicated: percentage completed, amount of data and seconds copied. The copy can be interrupted at any time by pressing **Cancel**. The piece of copy after the cancellation is fully functional.



Advanced: It allows to enable the "Play Loop" option for playing the recorded stream in an endless loop.

ATTENTION:

Please note that due to the huge size of such files and the slow transfer speed, the total time for a copy of TS can take several hours. For this reason it is recommended to use this option only when the internal TS capabilities are not enough. In that case, a 15 seconds TS capture is enough to detect tables issues.



7.3 Constellation

7.3.1 Description

The constellation diagram is a graphic representation of the digital symbols received over a period of time. There are different types of constellation diagrams according to the modulation type.

In the case of an ideal transmission channel without noise or interference, all symbols are recognized by the demodulator without errors. In this case, they are represented in the constellation diagram as well defined points hitting in the same area forming a very concentrated dot.

Noise and interferences cause the demodulator to not always read the symbols correctly. In this case hits are dispersed and create different forms which can visually determine the type of problem in the signal.


Each type of modulation is represented differently. A 16-QAM signal is shown on screen by a diagram of a total of 16 different zones and a 64-QAM signal is represented by a diagram of 64 different zones and so on.

The constellation diagram shows in different colours the density of hits and includes features to zoom, move and delete the display on screen.

7.3.2 Operation

The constellation is available to all **DIGITAL** signals, both **TERRESTRIAL** and **SATELLITE**.

To access the **CONSTELLATION** tool:

- 1 Connect the **RF** input signal to the equipment.
- 2 Tune to a digital signal from satellite or terrestrial band.
- 3 Press the  key (Tools).
- 4 Select **CONSTELLATION**.
- 5 The **CONSTELLATION** of the tuned signal appears.



► **Screen description:**

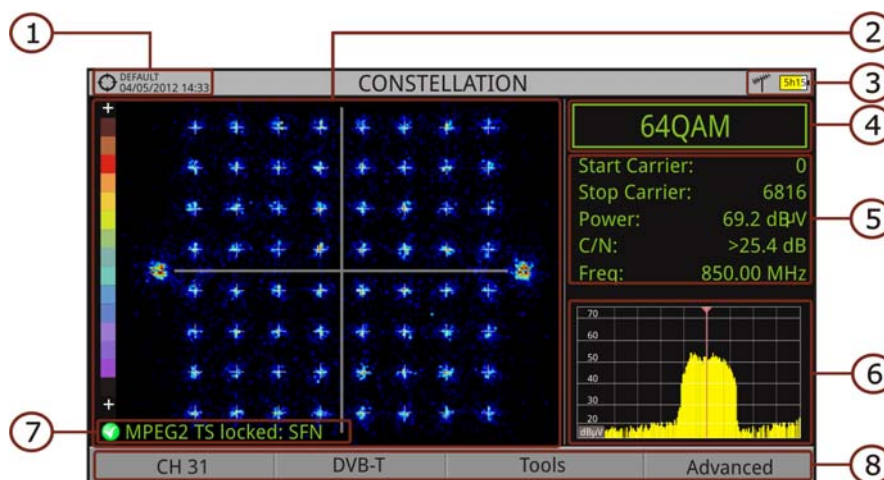


Figure 62.

- 1 Selected installation; date and time.
- 2 Constellation window.
 The colour scale placed at the left side indicates the signal quality in a qualitative way by a gradation of colours proportional to the density of symbols concentrated in a given area. The colour scale ranges from black (no symbols) to red (highest density).
 Greater dispersion of the symbols indicates higher noise level or worse signal quality signal. If there is symbols concentration with respect to the full grid (see advanced menu for types of grid) this is indicative of good ratio signal/noise or absence of problems.
- 3 Selected band, battery level.
- 4 Constellation modulation.
- 5 Data Window.
 The data shown are: Start Carrier, Stop Carrier, Power, C/N and frequency/channel.
- 6 Spectrum of the tuned signal.
 Spectrum is displayed with the span selected at the **SPECTRUM** mode.
- 7 Signal status (searching/locked/multiplex name).
- 8 Softkeys menus.

► Joystick **Left/Right**: Frequency/Channel change (depending on the tuning mode).



7.3.3 Menu options

On the bottom of the screen there are four menus accessible via the function keys.



It displays the channel / frequency where is pointing the cursor, accesses the tuning menu and allows selecting the channel plan.



It displays the selected transmission standard menu and accesses the signal parameters.



It displays the Tools menu.



It displays the Advanced menu.

In the **Advanced** menu there are some options to set the constellation tool. They are:

► Grid type:

- **Full Grid:** The grid where the constellation is displayed is a complete grid.
- **Cross Grid:** The grid where the constellation is displayed is made of crosses.

► Persistence:

It allows the user to set the level of persistence, which is the lapse of time the signal stays on the screen before disappearing. Available options according to the persistence level are: low, medium, high or permanent.

► Zoom:

It allows the user to select a quarter (I, II, III or IV) where apply the zoom in. To come back to normal view select **All**.

► Start Carrier/Stop Carrier:

This option allows selecting the range of carriers to be displayed between the first and last.

► Clear:

This options clears all symbols in the whole constellation window.



7.4 **LTE Ingress test**

7.4.1 **Description**

Long Term Evolution is a new standard for mobile networks. This mobile communication standard uses a frequency band close to the bands used by television. For this reason it can cause interferences.

The equipment has a built-in filter to reject the LTE band that can be activated with this tool. This filter can be enabled to check if the quality of the TV signal reception improves, when much of the LTE band has been attenuated by the filter. With this tool you can measure the MER of a DTT channel, presumably affected by an LTE signal, and evaluate the effects of enabling an LTE filter.

To be clarified that these filters, internal or external, cannot completely remove the LTE band signals. Especially for the TV channels close to 790 MHz, where is the end for the current UHF. If we are close to a LTE station with low downlink channels, a filter cannot be a sufficient solution.



Other options to better mitigate the LTE signals can be considered, such as a change in the location of the TV antenna or a passive shield in the way between the two antennas (TV and LTE).

For more information, refer to annex "digital dividend".

7.4.2 **Operation**



The **LTE Ingress Test** is available to all **DIGITAL TERRESTRIAL** signals.

► **Setting:**







- 1 Press the "**Installation manager**" key for one second to access "**Preferences**" settings.
- 2 Go to "**Tools**" tab and edit the LTE filter settings.
 - **LTE Filter:** Select external or internal filter.
 - **LTE Filter F.Min:** In case of use, select the minimum frequency for the external LTE filter.
 - **LTE Filter F.Max:** In case of use, select the maximum frequency for the external LTE filter.
- 3 Once selected, press  to save changes and  to exit "Preferences".



► **Operation with LTE internal filter:**

- 1 Connect the **RF** input signal to the equipment.
- 2 Tune the channel that is possibly affected by a LTE interference.
- 3 Press the  key: Tools.
- 4 Select the **LTE Ingress Test** mode.
- 5 Enable/disable the **LTE** filter pressing the  key: Filter ON/OFF.
- 6 The Lte icon on the screen upper right corner means the filter is enabled.
- 7 Check how to enable and disable the filter affects the installation, by comparing the MER measure and the LTE band power.

► **Operation with LTE external filter:**

- 1 Connect the external **LTE** filter between the signal and the **RF** input.
- 2 Tune the channel that is possibly affected by a LTE interference.
- 3 Press the  key: Tools.
- 4 Select the **LTE Ingress Test** mode.
- 5 Screen shows a confirmation message. Press on : "Yes" if filter is connected or : "No" if filter is not connected.
- 6 It starts to measure.
- 7 To change filter status (ON / OFF), press again the  key and will appear a confirmation message. Connect / disconnect the LTE filter at the RF input and then press  key: Ok to start measuring.
- 8 The user can enable / disable the LTE measure by pressing the : **ON/OFF**. Remember to connect / disconnect the LTE filter to the RF input. Each time a LTE measure starts, the time counter will reset.
- 9 Check how to connect and disconnect the LTE filter affects the installation, by comparing the MER measure and the LTE band power.



[Click here to watch this video: What is LTE](#)



► Screen description

The following describes the **LTE** display:

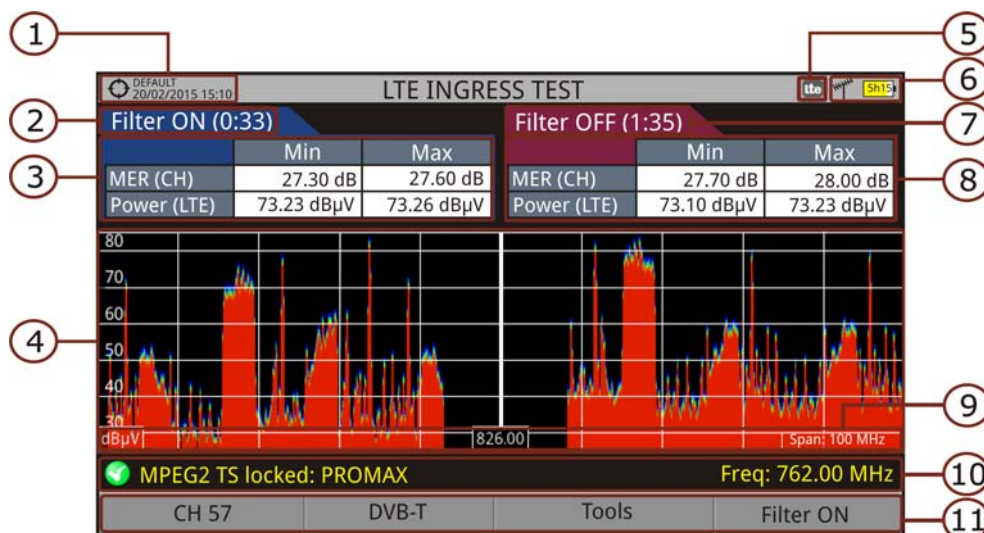


Figure 63.

- 1 Selected installation; date and time.
- 2 Elapsed time with filter enabled (ON).
- 3 Measurement with LTE filter enabled:
 - **MER:** Maximum and minimum MER for the TV channel tuned (the one probably affected by the LTE interference signal).
 - **LTE Power:** Maximum and minimum power for the complete band, between minimum and maximum filter frequencies (internal filter between 776 and 876 MHz).
- 4 Spectrum band, frequencies between minimum and maximum filter frequencies (internal filter between 776 and 876 MHz).
- 5 Identifier icon of the **LTE** filter ON (only when using internal LTE filter).
- 6 Selected band; battery level.
- 7 Time elapsed with filter disabled (OFF).
- 8 Measurement with LTE filter disabled:
 - **MER:** Maximum and minimum MER for the TV channel tuned (the one probably affected by the LTE interference signal).
 - **LTE Power:** Maximum and minimum power for the complete band, frequencies between minimum and maximum filter frequencies (internal filter between 776 and 876 MHz).



- 9 Measurement units/centre frequency/span (span: 10 MHz/division).
- 10 Signal status (searching/locked/multiplex name).
- 11 Softkeys menus.

7.4.3 Menu options

On the bottom of the screen there are four menus accessible via the function keys.

- F1** It displays channel/frequency and access the tuning menu. It allows selecting the channel plan and the channel where apply the LTE ingress test.
- F2** It displays the selected transmission standard menu and accesses the signal parameters.
- F3** It displays the Tools menu.
- F4** It enables (ON) / disables (OFF) the LTE filter.

7.5 Echoes

7.5.1 Description

The **Echoes** function shows the response in time of a digital terrestrial channel and therefore it can detect echoes that can occur due to the simultaneous reception of the same signal from several transmitters with different delays and amplitudes.

Another cause that may cause echoes is reflection of the signal on large objects, as buildings or mountains. This may be the explanation that having a good C/N and a good signal, the BER does not reach the minimum value.

With the **Echoes** function is possible to know the distance from where the equipment is to the transmitter or the object that caused the echo. Thus, the installer can minimise the effect that the echo may cause on the installation, reorienting the antenna and reducing the effect of received echoes.

This function is only available for **DVB-T**, **DVB-T2** and **DVB-C2**. Therefore, previously have to configure the equipment for the reception of such signals.



7.5.2 Operation

Echoes function is available for **DVB-T**, **DVB-T2** and **DVB-C2** signals.

- 1 Connect the **RF** input signal to the equipment.
- 2 Tune a **DVB-T**, **DVB-T2** or **DVB-C2** digital signal at the terrestrial band.
- 3 Press the **F3** key (Tools).
- 4 Select **ECHOES**.
- 5 The **ECHOES** function of the tuned signal appears on screen.

► Screen description

The following describes the **ECHOES** screen:

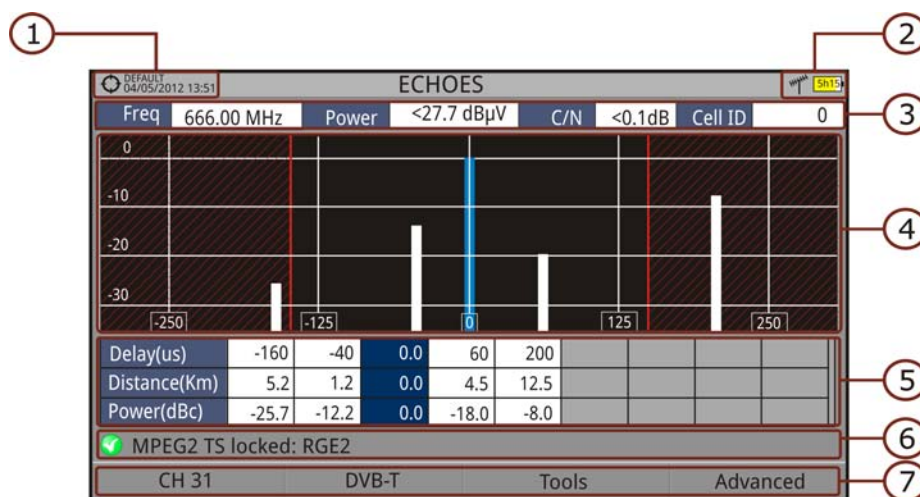


Figure 64.



- 1 Selected installation; date and time.
- 2 Selected band, battery level.
- 3 Main signal data: Frequency, Power, C/N and Cell ID (it shows the main signal transmitter, if available).
- 4 **ECHOES** Diagram.

The display shows a graphical representation of the echoes. The horizontal axis of the graph corresponds to the delay in receiving the echo on the main path (the stronger signal). The vertical axis represents the attenuation of the echo in dB on the main path.

- 5 Data box with main data regarding echoes.

In the list of echoes it shows the power, the delay in microseconds and the distance in kilometres to the echoes.

- 6 Signal status (searching/locked/multiplex name).
- 7 Softkeys menus.

- **Joystick left/right (CHANNEL/FREQUENCY active mode):** It changes the channel/frequency (according to the tuning type selected).
- **Joystick up/down (ECHOES mode):** It changes Zoom.

Remember to press the joystick to change the **ECHOES** mode to **CHANNEL** mode.

7.5.3 Menu options

At the bottom of the screen there are four menus available via the function keys.



It displays the channel/frequency where is pointing the cursor, it allows the user to select a channel or frequency, a channel plan and access the tuning menu.



It displays the selected transmission standard menu and accesses the signal parameters.



It displays the Tools menu.



It displays the Advanced menu. The ZOOM option changes the zoom on the echoes windows. Zooms are 1x, 2x, 4x and 8x.




7.6 MER by carrier

7.6.1 Description

This function analyses continuously the measure of the MER value for each one of the carriers forming the selected channel and they are displayed in a graphic on screen. This tool is especially useful for the analysis of systems in which signals of different type and origin interfere with each other, as may occur during the transition from analogue to digital TV.

7.6.2 Operation

The **MER by carrier** tool is available for signals with carriers: **DVB-T**, **DVB-T2** and **DVB-C2**.

- 1 Connect the **RF** input signal to the equipment.
- 2 Select terrestrial band and tune a **DVB-T**, **DVB-T2** or **DVB-C2** digital signal.
- 3 Press the **Tools** key .
- 4 Select **MER by carrier** option.
- 5 It appears the **MER by carrier** screen.
- 6 To exit this tool press any key of mode (TV mode, Spectrum mode or Measurement mode).

► Screen description

The following describes the **MER by carrier** screen:

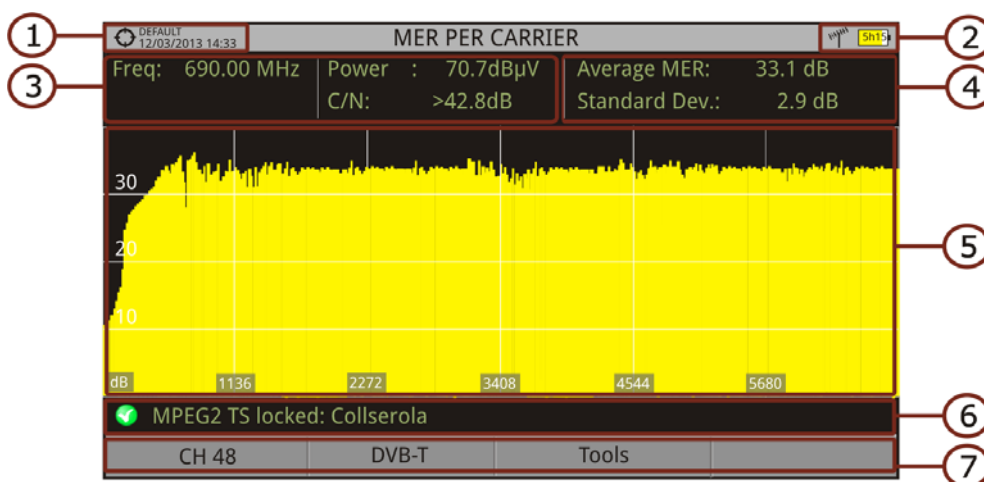


Figure 65.



- 1 Selected installation; date and time.
- 2 Joystick active mode; Selected band, battery level.
- 3 Measurement values for the signal tuned at the frequency/channel selected.
- 4 Average measurement value and standard deviation value of MER.
- 5 **MER by carrier** graphic.
- 6 Signal status (searching/locked/multiplex name).
- 7 Softkeys menus.

Axis X: Carriers

Axis Y: Power

- **Joystick left/right:** Channel/frequency change (according to the tuning mode).

7.6.3 Menu options

At the bottom of the screen there are three menus available via the function keys.



It displays the channel/frequency where is pointing the cursor, it allows selecting channel plan and channel and access the tuning menu.



It displays the selected transmission standard menu and accesses the signal parameters.



It displays the Tools menu.

7.7 MEROGRAM


7.7.1 Description

This function shows a graphical representation of the MER level for each carrier of the locked signal, which is superimposed over time. During the MEROGRAM function, maximum and minimum of some parameters and the time when they are reached are stored. This tool is especially useful for detecting sporadic problems over time.



7.7.2 Operation

The **MEROGRAM** tool is available for signals with carriers: **DVB-T**, **DVB-T2** and **DVB-C2**.

- 1 Connect the **RF** input signal to the equipment.
- 2 Select the terrestrial band and tune a **DVB-T**, **DVB-T2** or **DVB-C2** channel or frequency.
- 3 Press the **Tools** key .
- 4 Select the **MEROGRAM** function.
- 5 It shows the **MEROGRAM** function of the signal.
- 6 To exit this function press any key of mode (TV mode, Spectrum mode or Measurement mode). All data registered is cleaned after leaving.

► Screen description

The following describes the **MEROGRAM** function screen:

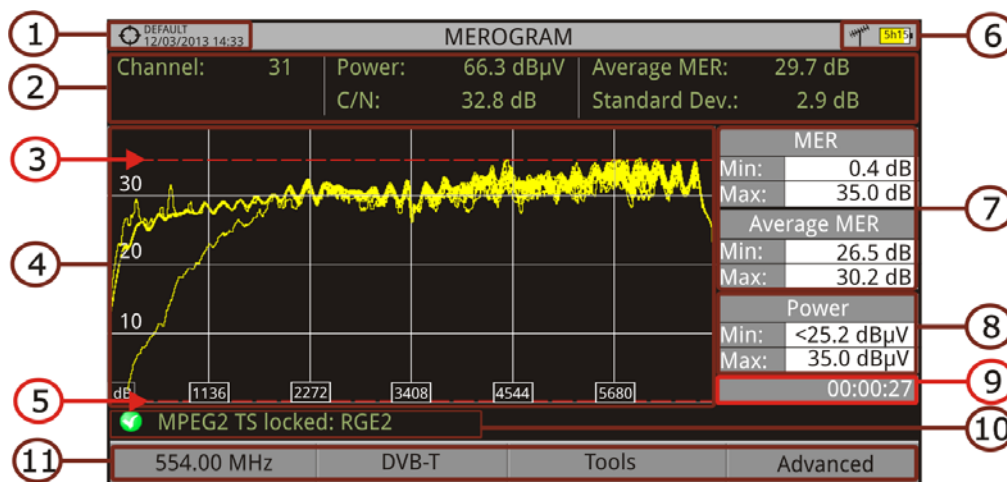


Figure 66.

- 1 Selected installation; date and time.
- 2 Measurement values for the signal tuned at the frequency/channel selected.
- 3 Maximum level of MER.
- 4 **MEROGRAM** graphic.



- 5 Minimum level of MER.
- 6 Selected band, battery level.
- 7 Maximum and minimum MER value and MER average over time.
- 8 Maximum and minimum value of the measure selected by the user in the option "User measure".
- 9 Elapsed time after starting the **MEROGRAM** function.
- 10 Signal status (searching/locked/multiplex name).
- 11 Softkeys menus.





X Axis: Carriers

Y Axis: Power

- Joystick does not have any function in this tool.

7.7.3 Menu options

At the bottom of the screen there are four menus available via the function keys.


-  It displays the channel/frequency where is pointing the cursor, it allows selecting channel plan and channel and access the tuning menu.
-  It displays the selected transmission standard menu and accesses the signal parameters.
-  It displays the Tools menu.
-  It displays the Advanced menu.

In the Advanced menu there are some options for the **MEROGRAM** function configuration. They are:

► User measure:

It allows the user to select the measure to view on screen among the several available for each type of signal.

► Details:

It allows the user to view on screen the date and time when maximum and minimum measures were reached. To quit this view press the key .



► **Clear measures:**

It cleans the measurement of the **MEROGRAM** function and it restarts the timer.


7.8 Spectrogram

7.8.1 Description

This function shows a graphical representation of the spectrum superimposed over time of a channel or frequency selected by the user. During the Spectrogram, maximum and minimum of several measures and time are registered. This tool is especially useful to analyse the behaviour of a spectrum over time, because sporadic and indeterminate anomalies can be detected.

7.8.2 Operation

The Spectrogram tool is available for all signals.

- 1 Connect the **RF** input signal to the equipment.
- 2 Select a channel or frequency.
- 3 Select the **SPAN** within the spectrogram will be displayed.
- 4 Press the **Tools** key .
- 5 Select the **Spectrogram** option.
- 6 It shows the **Spectrogram** of the signal.
- 7 To exit this function press any key of mode (**TV** mode, **Spectrum** mode or **Measurement** mode). All data registered is cleaned after leaving.

While using the Spectrogram function, if the signal unlocks, timer and measurement registered will clean and they will start to register when the signal is locked again.

► Screen description

The following describes the **SPECTROGRAM** screen:

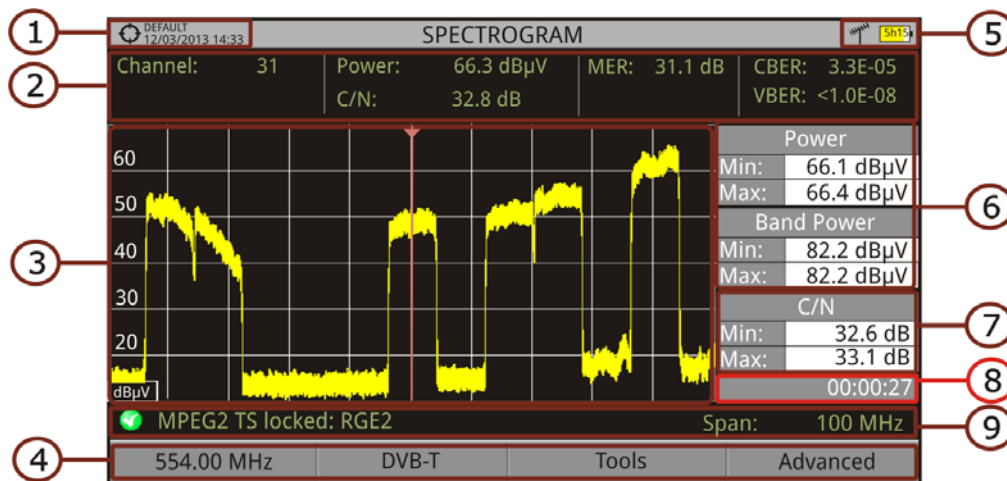


Figure 67.

- 1** Selected installation; date and time.
- 2** Measurement values for the signal tuned at the frequency/channel selected.
- 3** Spectrum over time at the selected span.
- 4** Softkeys menus.
- 5** Selected band, battery level.
- 6** Maximum and minimum values of signal power and band power over time.
- 7** Maximum and minimum value of the measure selected by the user in the option "User measure".
- 8** Elapsed time.
- 9** Signal status (searching / locked / multiplex name / selected span).

X Axis: Span (MHz)

Y Axis: Power

- Joystick does not have any function in this tool.



7.8.3 Menu options

At the bottom of the screen there are four menus available via the function keys.



It displays the channel/frequency where is pointing the cursor and access the tuning menu.



It displays the selected transmission standard menu and accesses the signal parameters.



It displays the Tools menu.




It displays the Advanced menu.

In the Advanced menu there are some options for the spectrogram configuration. They are:

► **User measure:**

It allows the user to select the measure to view on screen among the several available for each type of signal.

► **Details:**

It allows the user to view on screen the date and time when maximum and minimum measures were reached. To quit this view press the key .

► **Clear measures:**

It cleans the spectrogram and measures and it restarts the timer.

7.9 Attenuation Test







7.9.1 Description

This feature allows the user to easily check the response of the telecommunications installations before antennas and headers are working. It allows the user to evaluate the response along the complete range of frequencies by measuring the losses (attenuation) in the distribution of TV signals, comparing reference levels at headend output and at each house antenna plugs.



7.9.2 Operation

Attenuation test function is available for all signals.

- 1 In **Settings**  select the terrestrial or satellite band.
- 2 Press the **Tools** key .
- 3 Select the **Attenuation Test** option.
- 4 The **Attenuation Test** function for the signal appears on screen.
- 5 First, set the parameters before the test, pressing the **Advanced**  key: Frequencies of pilot signals (pilot 0, pilot 1 and pilot 2), maximum attenuation and threshold attenuation (see more details in the next section).
- 6 Then it is necessary to **Set References**. This requires a signal generator. We recommend to use of one of the PROMAX signal generators: **RP-050**, **RP-080**, **RP-110** or **RP-250** (depending on the frequency band).
- 7 Connect the signal generator and the field strength meter where the origin of the signal distribution is in the installation (antenna, headend, etc.) or connect the signal generator directly to the RF input of the equipment. If necessary, the equipment can feed the generator using the "**Supply Output**" option from the **Settings** menu .
- 8 Active the signal generator and in the equipment, press the **Set Reference** key .
- 9 Once are set the references for the pilot signals, let the signal generator connected to the source point of the distribution system and take measurements in each user access point with the equipment.
- 10 In each measurement a message over each pilot signal indicates whether the measure "Pass" or "Fail" according to the parameters set.
- 11 The measurement data from the **Attenuation Test** can be saved through the **Datalogger** tool. To do this, when creating a new datalogger, in the option "**Include Attenuation Tests**", select Terrestrial and/or Satellite. Then, the user must perform a datalogger from the test point where he is performing the attenuation test. Another quick option it is to select the "Test & Go" function in the "Datalogger" menu. This option creates automatically one channel plan (TER ICT or SAT ICT according to the current band) and starts to save measurements. The data will be saved and can be checked and transferred to a PC. For more information, see "Datalogger" section under the "Tools" chapter. Also measurement data or screen image can be exported by pressing the **Export**  key (see more details in section "Export key") and after that display the images or download the data files (in XML format).



Note: In both satellite and terrestrial band, the system saves the LNB state every time the user sets a reference and uses this value always that the equipment is working in this mode.

► **Screen Description:**

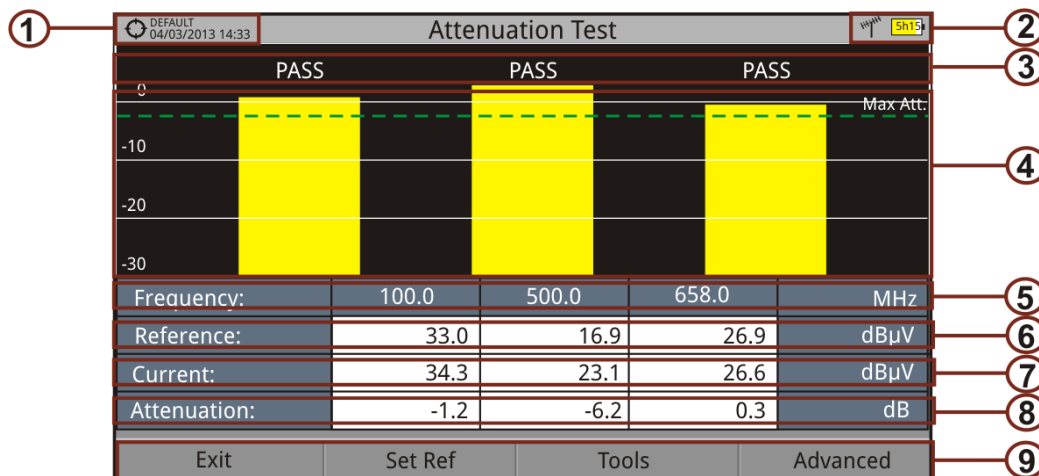


Figure 68.

- 1 Installation selected, date and time.
- 2 Selected band; battery level.
- 3 Status message depending on the attenuation level.
- 4 Power level of the signal.
- 5 Signal Frequency (MHz).
- 6 Power level of the reference signal obtained when setting the reference and used to calculate the attenuation level (dBμV).
- 7 Power level of the test signal at the user access point (dBμV).
- 8 Attenuation level (dB); $\text{Attenuation} = \text{Reference} - \text{Current}$.
- 9 Softkeys.

X-axis: Pilot signals

Y-axis: Power

► **Joystick:** The joystick does not have any function in this tool.



7.9.3 Menu options

In the bottom of the screen are four menu accessible via the softkeys.



Exit: Exits the tool.



Set Reference: Pressing this option the current power values are captured and they are assigned as reference values.



Tools: It access the Tools main menu.



Advanced: It access the Advanced menu.

In the **Advanced** menu there are five parameters to set the attenuation test. They are:

► **Threshold Attenuation:**

It defines the maximum difference that may exist between the pilot signal of higher level and the pilot signal of lower level. All pilot signals out of this range will be removed and not used as a pilot signal during the measurement process.

► **Maximum Attenuation:**

It sets the attenuation level used by the equipment to show on screen if the signal passes or fails. When the attenuation level is below this value the message on screen is "**PASS**" and when it is above this value is "**FAIL**".

► **Pilot 0:**

It defines the frequency of the pilot signal 0 (MHz).

► **Pilot 1:**

It defines the frequency of the pilot signal 1 (MHz).

► **Pilot 2:**

It defines the frequency of the pilot signal 2 (MHz).










7.10 Signal Monitoring


7.10.1 Description

This tool allows the user to monitor a locked signal over time, measuring its power, MER and C/N. All this data can be downloaded to a PC and exported to a file for later analysis.

7.10.2 Operation

The Signal Monitoring tool is available for all signals.

- 1 In **Settings** menu  select the band.
- 2 Access the **SPECTRUM** mode and tune the signal for monitoring.
In case of tuning a **DVB-T2** signal, in the **Signal Parameters** menu  select the Profile (Base or Lite) and in the  key select the PLP identifier. User has to choose one profile and one PLP identifier per each monitoring.
- 3 Press the **Tools** key .
- 4 Select the **Signal Monitoring** option.
- 5 The **Signal Monitoring** function appears on screen.
- 6 Before starting the monitoring, access the **Configuration** option in the **Advanced** menu  for settings (more details in next section).
- 7 After settings, access the **Advanced** menu  and press on **Start** to start the signal monitoring.
In **Continuous** mode, the equipment takes samples automatically according to sample time (see next). In **Manual** mode each time the user presses the joystick the equipment takes a sample.
- 8 Access the **Advanced** menu  and press on **Stop** to finish the signal monitoring. Data obtained is automatically stored.
- 9 After stopped, it opens the signal monitoring viewer that allows the user to watch the final results (more details in chapter "Data viewer").

- 10 Access the data by pressing the **Installation List** key  to check that the monitoring data file has been saved. This file is a "Signal monitoring" type. To manage the data, see below the section "Data File Processing".

► Screen Description:

The following describes the **Signal Monitoring** screen:

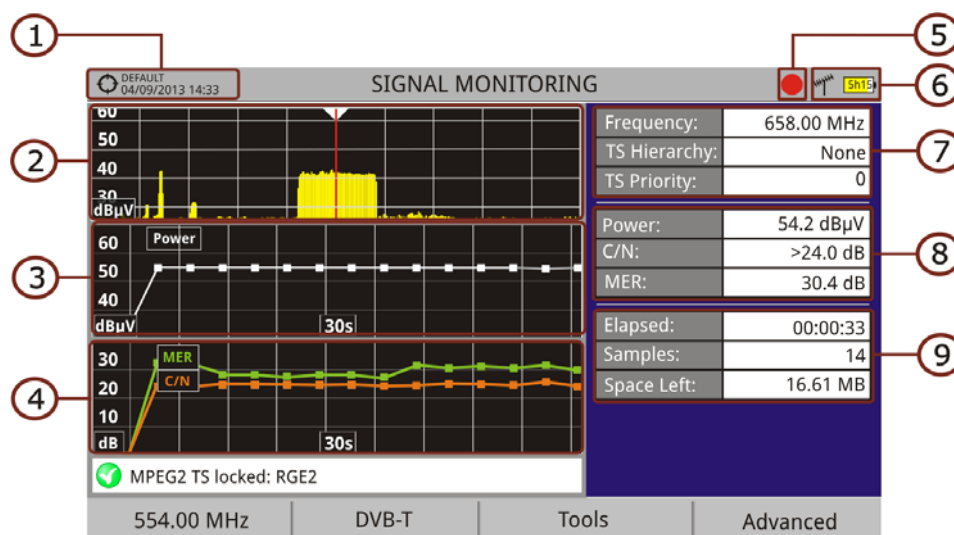


Figure 69.

- 1 Selected installation; date and time.
- 2 Spectrum.
- 3 Power measurement over time (shows span time).
- 4 MER and C/N measurement over time (shows span time).
- 5 Indicator of signal monitoring started.
- 6 LNB, Selected band; battery level.
- 7 Signal information window 1:

Frequency: frequency at which signal is locked; **Profile** (only for DVB-T2 signals): Base or Lite; **PLP identifier** (only for DVB-T2 signals): identifier of the layer being measured, **TS Hierarchy** (table hierarchy at the transport stream) **TS Priority** (packet priority at the transport stream).

- 8 Signal information window 2:

Power, C/N, MER measurements of the signal over time. It shows on screen only the span time selected in settings.



9 Signal information window 3:

Elapsed: Time elapsed since the beginning of the monitoring.

Samples: Samples taken since the beginning of the monitoring.

Space left: Space left in the memory to save data.

7.10.3 Menu options

At the bottom of the screen there are four menus available via the function keys.



It displays the channel/frequency where is pointing the cursor and access the tuning menu.



It displays the selected transmission standard menu and accesses the signal parameters.



It displays the Tools menu.



It displays the Advanced menu.

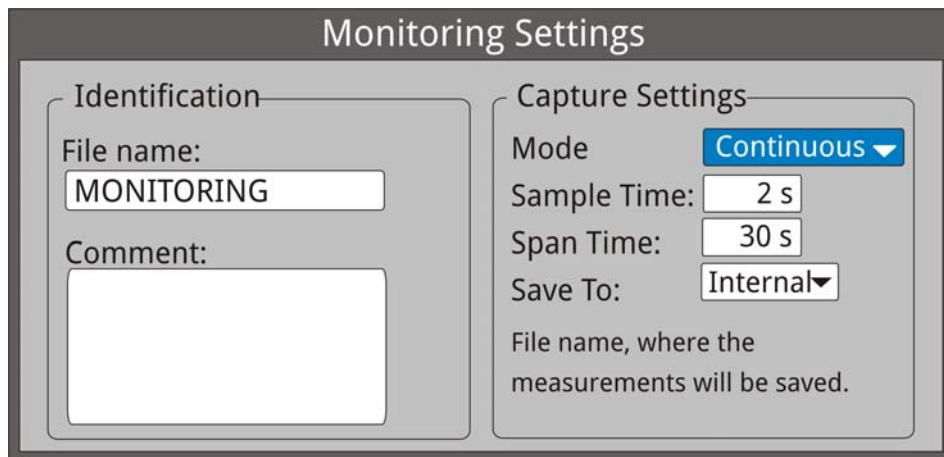
In the **Advanced** menu there are some options for the **Signal Monitoring**. They are:

- ▶ **Start:** It starts the signal monitoring.
- ▶ **Stop:** It stops the signal monitoring.
- ▶ **Pause:** It stops the signal monitoring for a while until resuming.
- ▶ **Configuration:** It shows the settings window with some parameters (see the "Settings" section for more details).
- ▶ **Audio:** It allows disable or disable audio. When this option is enabled, the user can listen to any service in the monitored signal, knowing about signal reception while driving or doing other tasks.
- ▶ **GPS Status:** It shows a list and a graph with satellites detected to locate the GPS signal. It is also provided additional data such as longitude, latitude, date and universal time, visible satellites and GPS status (locked or not) (this option is available only for equipment with GPS, see annex OP-002-GPS).



7.10.4 Settings

User can adjust some parameters on the Monitoring Configuration:



The image shows a 'Monitoring Settings' dialog box with two main sections: 'Identification' and 'Capture Settings'.

- Identification:**
 - File name:** A text input field containing 'MONITORING'.
 - Comment:** A large empty text area for additional notes.
- Capture Settings:**
 - Mode:** A dropdown menu currently set to 'Continuous'.
 - Sample Time:** A text input field containing '2 s'.
 - Span Time:** A text input field containing '30 s'.
 - Save To:** A dropdown menu currently set to 'Internal'.
 - File name, where the measurements will be saved.** A note below the 'Save To' dropdown.

Figure 70.

► **File name:**

User can give a name to the file where data is saved. All measurement that can be seen in the MEASUREMENT 1/3 screen (frequency, power/level, C/N, PLP identifier, MER, CBER, LBER and LM) will be stored on the data file. Be sure to change the file name when starting a new signal monitoring. If not, new data file will be saved on the last one.

► **Comment:**

User can write some comments about the monitoring.

► **Mode:**

There are **two** options: **Continuous** or **Manual**. In continuous mode a sample is taken automatically every sample time. In manual mode a sample is taken every time that user presses the joystick.

► **Sample Time:**

Time between acquisitions. Only when working in continuous mode. Minimum time is 1 second.

► **Span time:**

It is the width, in time, shown on screen for the X axis.

► **Save to:**

There are **two** options: **Internal** or **USB**. For Internal option it saves the file with all data in the internal memory of the equipment. For USB option it saves the file with all data in a USB flashdrive connected to the micro-USB port of the equipment.



7.10.5 Data viewer

The data viewer allows the user to browse along the final results. It opens directly after saving the data or by opening the associated data file (that is located in the installation manager).

► Screen description:

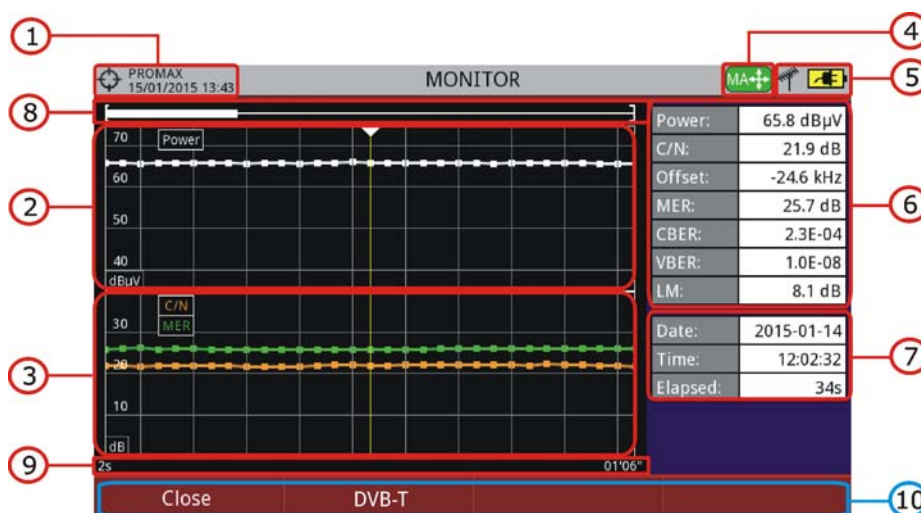


Figure 71.

- 1 Selected installation; date and time.
- 2 Power measurement over time.
- 3 MER and C/N measurement over time.
- 4 Joystick mode selected: PA mode (panoramic) or MA mode (cursor movement).
- 5 LNB, selected band; battery level.
- 6 Signal information window 1:
Measurement of power, C/N, Offset, MER, CBER, VBER and Link Margin where the cursor is.
- 7 Signal information window 2:
Date, time and elapsed time.
- 8 Scrollbar: it shows position and size of the data displayed related to total data.
- 9 Time span of displayed data.
- 10 Menu Options:
 - F1: Exits the data viewer.
 - F2: It shows transmission parameters of the monitored signal.



- ▶ **Joystick up/down:** It increases / decreases zoom.
- ▶ **Joystick left/right:** In PA mode it moves time span along the total time.
In MA mode it moves the cursor along the samples of the time span.
- ▶ **Joystick pressing:** It switches between panoramic (PA) and movement (MA) mode.

7.10.6 Data file processing

▶ **Description:**

This document is an explanation about the process that is needed to be done in order to obtain a more comfortable view of the XML data obtained with **HD RANGER** family equipment, when performing a Signal Monitoring.

Once you got the monitoring data, copy the XML data file from the equipment to a USB memory using the Installation Manager. See the equipment's documentation in how to get files from an Installation.

▶ **Obtaining an excel file:**

For this section, you must have at least Excel 2003 or newer version. Excel 2007 (or later) is highly recommended to avoid macro problems.

- 1** First of all we need to locate the XML data file in the folder from which we want to work. There are no requirements needed to be satisfied. A file named COVERAGE.XSL must be placed in the same data file folder. That second file allows proper data formatting when processed by Excel.
- 2** Select the XML data file and then right click with the mouse button on the file name.
- 3** Choose the option "**Open with**" and then select Excel 2007 (or the available version).

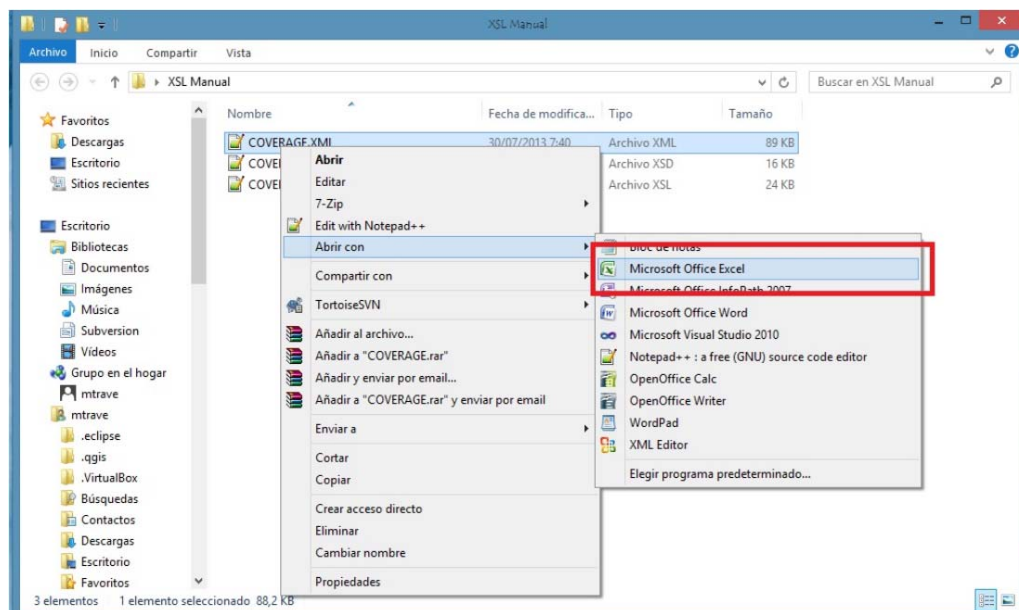


Figure 72.

- 4 When Excel tries to open the file it will ask you the import method to open the XML data file by this way:

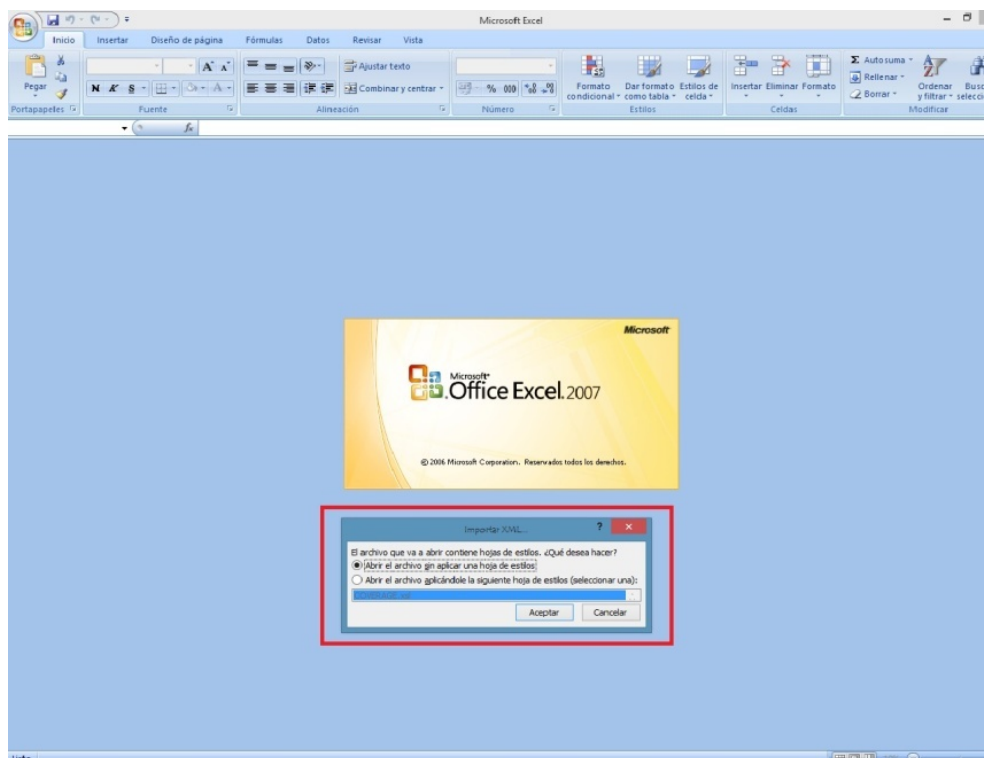


Figure 73.

- 5 You must choose the option in which a stylesheet is asked. It will appear as an option the "COVERAGE.xsl" file.

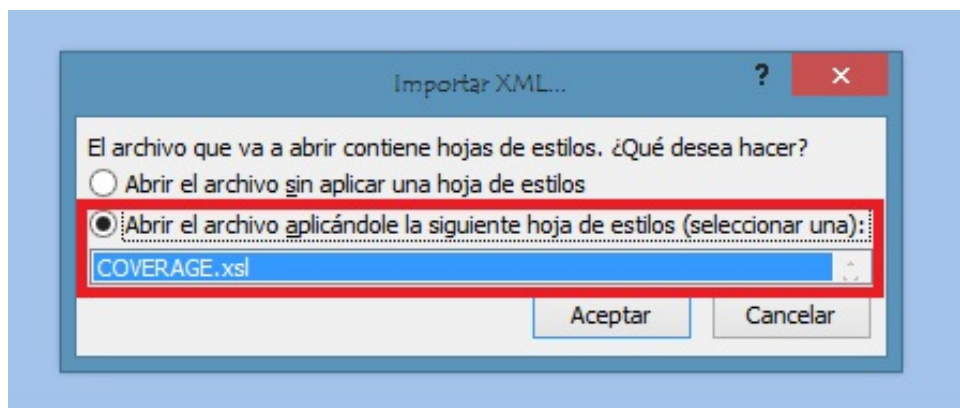


Figure 74.

- 6 Now Excel is opening the XML data file using the format that the XSL file is providing. This step could take few seconds depending on the size of the XML data file.
- 7 At this point, you should have an excel file with three different sheets. Each sheet corresponds to a different view of the same data:
 - ✓ The first one will show you the generic signal information and the different coverage measures for each point acquired.
 - ✓ In the second one, you will find the same data but presented in a table format, more user friendly for working with graphs based on each measured parameter.
 - ✓ The third one provides data in a format adapted for geolocation. This is available only for users with GPS option (refer to annex OP-001-GPS).
- 8 Now save the data as a true excel file. No specific name or path is required, but you must remember the path.

7.11 Datalogger







7.11.1 Description

The Datalogger function stores automatically measurements in a file set by the user (name, channel plan). User can store for each datalogger measurements taken at different test points of the selected installation. Measurements are made for all channels in the active channel plan, both analogue and digital. Each installation has its own datalogger files.



7.11.2 Operation

► To create a new datalogger:

- 1 First select one installation of the list of installations  and load it pressing the "Load" key . An installation contains the channel plans and DiSEqC commands selected by the user and it stores dataloggers and screenshots made while it is selected (more information in chapter "Installations management").
- 2 Check the installation is selected. The name of the installation should appear on the upper left corner of the screen.
- 3 Press the : Tools key.
- 4 Press on the "Datalogger" option.
- NEW!** 5 It displays a menu with the "New ...", "Test & Go" option and a list of all dataloggers at the selected installation.
- 6 Select "New ..." to create a new datalogger, select "Test & Go" to create a quick datalogger (see next) or select the file name of an existing datalogger if the user want to save data on a specific datalogger already existing.
- 7 If "New ..." is selected, a installation wizard shows how to create a new datalogger. Follow its instructions (: Next to move to the next screen, : Previous to move to the previous screen or : Cancel to cancel).
- 8 When creating a new datalogger through the wizard, the user can give a name to the datalogger.

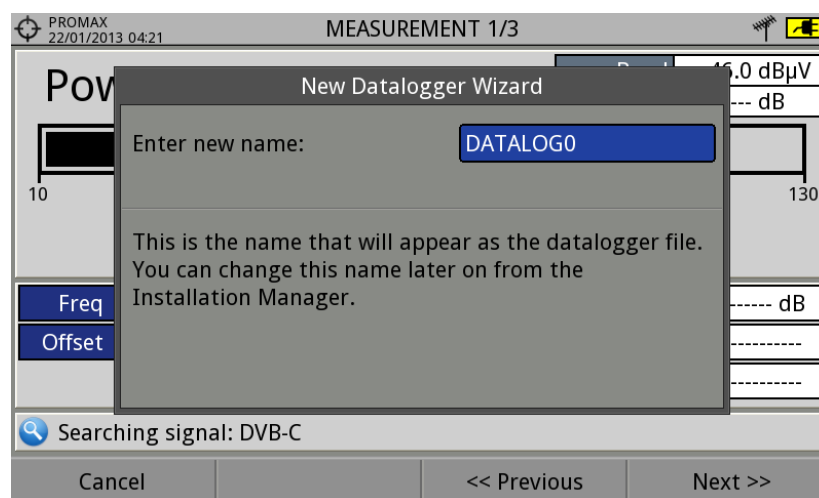


Figure 75.

- 9 Next, the user can select the terrestrial and/or satellite channel plan to use in the datalogger. The channel plans that are shown depends on the channel plans available for the current installation.



Figure 76.

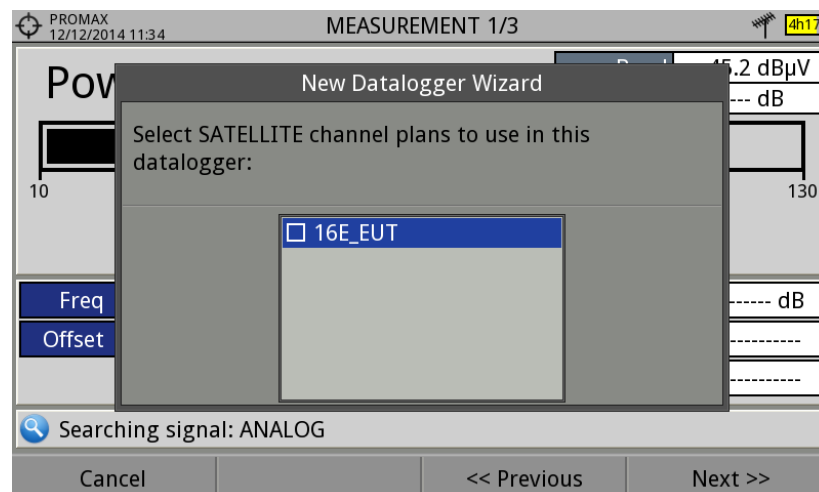


Figure 77.

- 10 In the next window, the user can select an option to capture de service list when performing the datalogger (this option slows down the process but provides more information). Another option allows the user to enable a pause between channel plans (the process stops until the user wants to carry on). There is also the option to perform a datalogger on the attenuation test, terrestrial or satellite (see section "Attenuation Test" under "Tools" for more information).

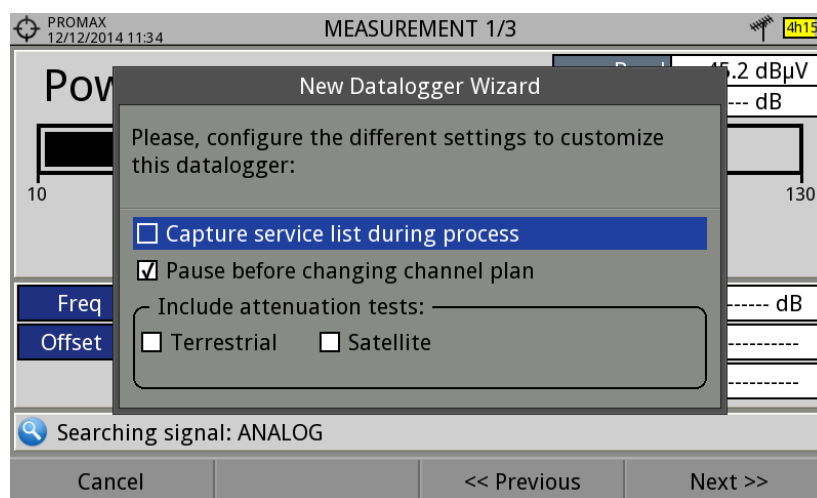



Figure 78.

- 11** At the last step, user can select to open the just created new datalogger (by default, this option is selected).
- 12** Once a new datalogger is created or selected an already existing one, it shows the datalogger viewer screen and measurements of test points can start.
- 13** If it is a new datalogger, in first place before starting the datalogger, the system will create a new test point.



[Click here to watch this video: Datalogger](#)

► To start the datalogger:

- 1** After creating a new datalogger file or selecting an existing one, the user can start the datalogging process.
- 2** From the datalogger viewer screen, press the "Test point" key  and from the menu select an existing test point using the "Jump to ..." option or "Create new ..." to create a new test point. If a new test point is created, user has to give it a name.

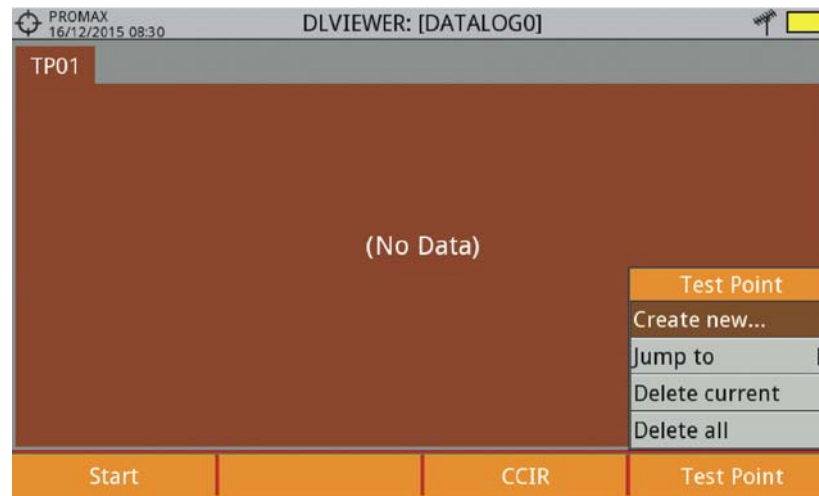


Figure 79.

- 3 Now datalogger is ready to start. Press the key **F1** "Start". The datalogger process starts, during which all the measurements of all channels that are part of the datalogger and also the attenuation test are saved.
- 4 During datalogger, it catches the list of available services of all channels in the channel plan that are part of the datalogger (if this option was selected when creating the datalogger or if the "Datalogger PSI" option is enabled in the Preferences menu). If there is a change of channel plan during datalogger there will be a pause (if this option was selected when creating the datalogger). User can pause and resume the datalogger process at any time by pressing on the key "Pause" **F3**. If the "Attenuation Test" option was included when creating the datalogger, these measures will also saved.
- 5 At the end it saves the data and allows watching the results on screen by channel plan / attenuation test. To change the view of channel plan or attenuation test data press on the **F3** key. Data about terrestrial and satellite attenuation will appears as the option TER ICT and SAT ICT respectively.
- 6 It is also possible to download Datalogger files to a PC by the NetUpdate software (free download on the PROMAX website). Once downloaded, the program can generate reports with these files. This is not possible with the datalogger files exported directly to a USB (without using NetUpdate). Information of Service lists are in the XML files downloaded to the PC.

Note: To make a datalogger with the Field Strength tool, in first place user has to enable the field strength tool, and then to create a new datalogger file. The field strength data will be stored in this datalogger.



► Datalogger screen description

The following describes the datalogger screen:

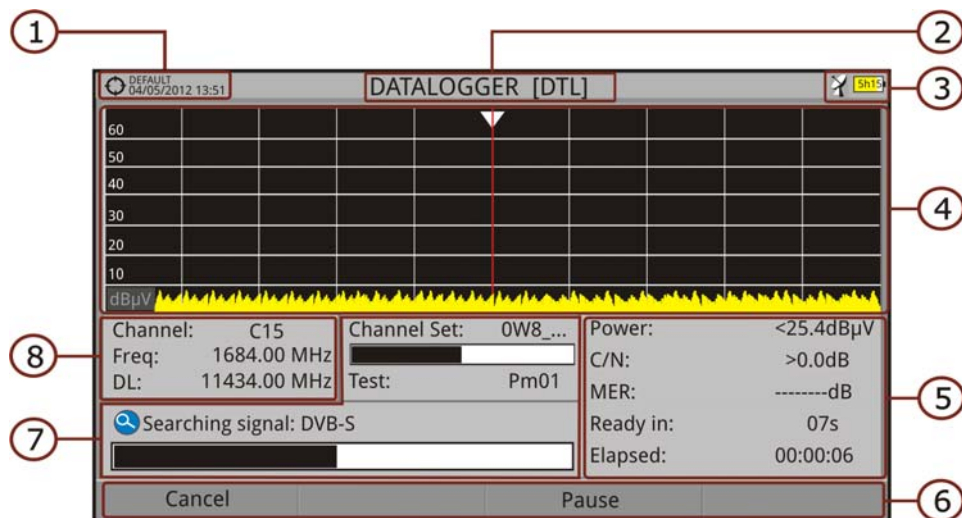


Figure 80.

- ① Selected installation; date and time.
- ② Current datalogger name.
- ③ Selected band; battery level.
- ④ Exploring the spectrum in real time.
- ⑤ Level/Power, C/N ratio, MER, time remaining to identify a channel, elapsed time since the start of the channel identification.
- ⑥ Softkey menus.
- ⑦ Current channel plan, progress bar in the current channel plan, selected test point.
- ⑧ Channel, frequency and Downlink.

► Datalogger viewer screen description

The following describes the display of data acquired:

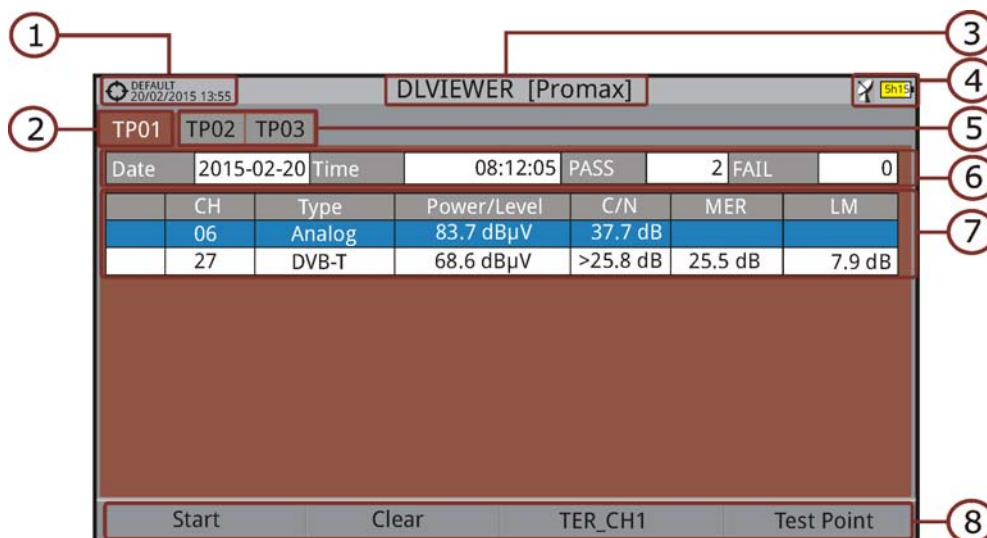


Figure 81. Channel Plan Datalogger viewer.

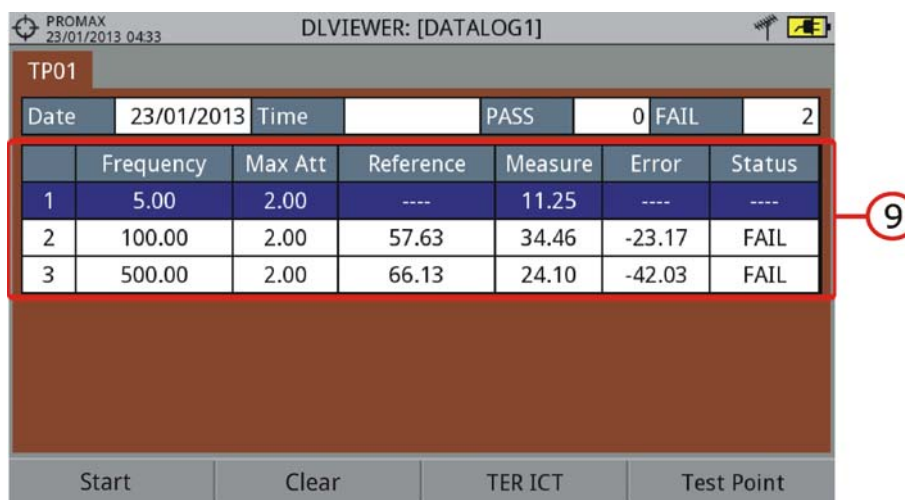


Figure 82. Attenuation test Datalogger viewer.

- 1 Selected installation; date and time.
- 2 Tab identifying the displayed test point.
- 3 Current datalogger name.
- 4 Selected band; battery level.
- 5 Tab identifying each test point.
- 6 Date and time when the datalogger was created. Number of channels locked (PASS) or not locked (FAIL).



- 7 Data table with measurement data for each channel. In order from left to right: Colour identifying if the channel has been locked (WHITE) or not locked (RED) channel; signal type; power/level; Carrier/Noise (C/N) rate; MER; Link Margin. Move the joystick up or down to navigate along the measurement data. Press the joystick on a channel to display the signal parameters.
- 8 Softkey menus.
- 9 Table with the measurement data for each pilot signal in the attenuation test. In order from left to right: number of pilot signal, pilot signal frequency, maximum attenuation allowed, reference level value, level value at the test point, error and signal status.

7.11.3 Menu options

► Datalogger viewer menu options



Start:

It starts the datalogger in the selected test point.



Clear:

It clears all the acquired data.



Channel plan

It displays a menu with the available channel plans to select the channel plan whose data want to be displayed. Channel plans available are those that have been selected during the creation of the datalogger.



Test Point

It contains four options:

Jump to: It allows selecting a test point.

Create New...: It creates a new test point.

Delete current: It deletes the current test point.

Delete all: It deletes all test points of the datalogger.



► Datalogger menu options



Cancel

It cancels the datalogger.



Pause

It pauses datalogger until the user resumes by pressing again.

7.11.4 Test & Go **NEW!**

"Test & Go" function inside the "Datalogger" tool allows the user to create a quick datalogger by creating automatically a new datalogger, a new test point and then starting it.

Datalogger parameters are set automatically based on:

- File name: DL [current band - terrestrial or satellite][consecutive number]
- Channel plan: Current channel plan selected in the equipment.
- Test point: PM01
- No capture of services list.

If "Test & Go" is performed when using the "Attenuation test" tool, then the datalogger created will be specific to save attenuation test data.

7.12 Screen and Data capture (Export key)

7.12.1 Description

It captures what is displaying on screen at time.

The capture can be an image, measurement data or both. This is set through the **Preferences** menu ("Export button" option).




Data capture is saved in a XML file with all data, measurements and text, that is on screen at this time. The image is saved in a PNG file.

Captures can be displayed on the equipment or also can be download and displayed through an external software.






7.12.2 **Operation**




► **Settings**

- 1 Press the "Management Installation"  key for one second to enter "Preferences" menu.
- 2 Go to the label "**Tools**" and select your option in "**Export button**". There are three options available: Screen Only, Data Only or Screen+Data. "Screen Only" saves the screen image in PNG format. "Data Only" saves measurement data on screen in a XML file format. "Screen + Data" saves both screen and data.
- 3 Once selected, press  to save changes and  to exit "Preferences".

► **Capture**

- 1 Press the **Export** key  for one second when on screen appears the screen to be captured. The LED next to key lights.
- 2 A progress bar shows the progress of the capture process. When finished, the screen is captured and the LED is OFF.
- 3 Then the virtual keyboard appears with the default name assigned to the file. The filename for the screen capture is automatically generated with the following code: capture mode (SP for Spectrum mode, TV for TV mode, ME for Measurement mode), capture channel (CHXX) and a consecutive number.
- 4 Edit the name if necessary (see section "Virtual keyboard"). Then press : OK to end the capture or : Cancel for cancellation.

► **Display**

- 1 To display the captured screen press the **Installations Management** key .
- 2 Select the installation where the capture was done and press : **Manage**.
- 3 Press : **Filter by type**. Select the "Screen Shots" or "Data Captures" option. This will limit the list to the selected.
- 4 It appears a list of all the captures.
- 5 Move up or down to find the file to be displayed.
- 6 Leave the cursor on the file to be displayed. It appears a progress bar that lasts a few seconds, depending on the size. Then the capture appears.



- 7 To see the capture in full screen just press the **F4**: **Options** key and then on the menu press "View in Full Screen". To exit the full screen view press any softkey.
- 8 To delete or copy the capture to a USB stick, select the capture by pressing the joystick, and then select the appropriate option from the menu **F2**: **File**.
- 9 Captures can also be viewed on a PC, by downloading the whole installation file using the NetUpdate software (see the NetUpdate manual for more information).

7.13 Explore Channel Plan

7.13.1 Description

This option performs a scan of the selected channel plan. It detects where active signals are in a channel plan and in which channels of the current channel plan signal is received. With this information it explores these channels with signal, looking for any broadcast and identifying them.

7.13.2 Operation

Explore Channel plan tool is available for all signals.

- 1 Connect the **RF** input signal to the equipment.
- 2 Press the **Tools** key **F3**.
- 3 Select the **Explore Channel Plan** option.
- 4 The first screen of **Explore Channel Plan** appears.

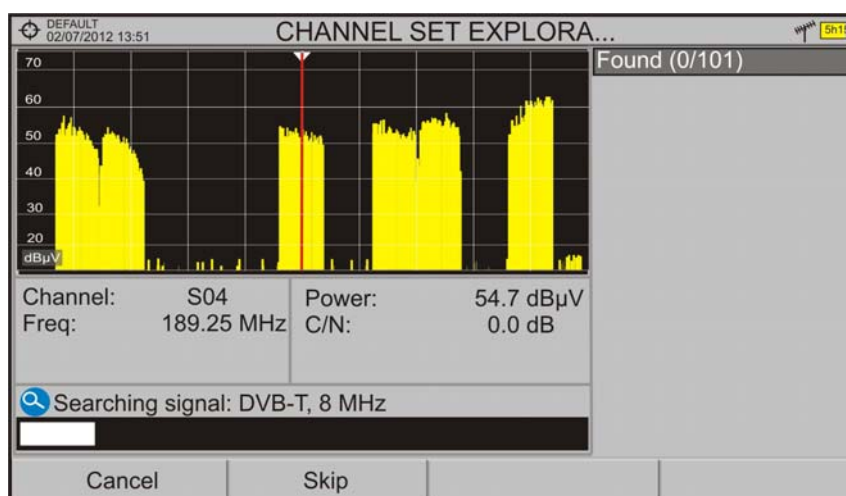


Figure 83.

- 5 After the exploration the following screen appears:



► Screen description

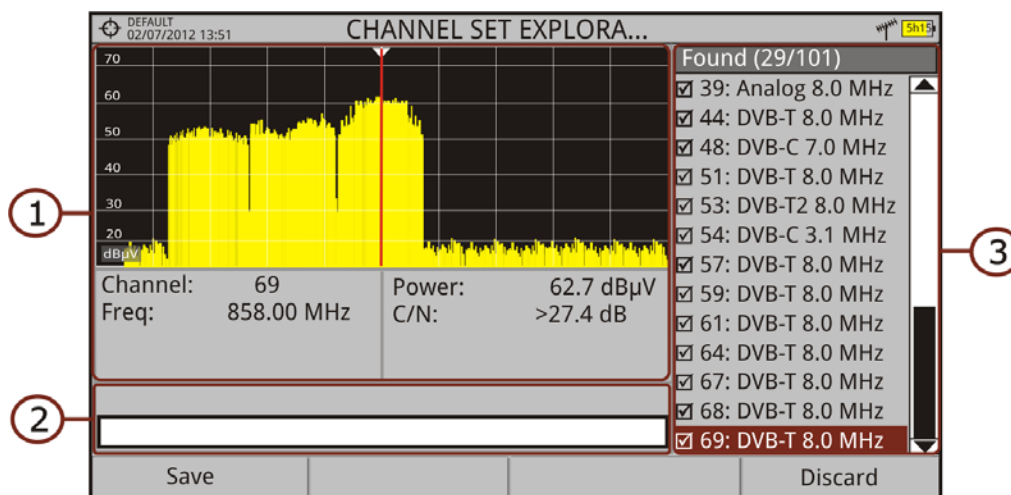


Figure 84.

The window is divided into three areas:

1 **Spectrum and Measurement**

It shows the cursor scrolling through each of the channels of the channel plan. On the bottom of the screen the channel and frequency appears next to the Power/Level and the C/N ratio.

2 **Progress Bar**

It shows the signal type detected and the scan progress in real time. At the end a box shows a message informing the exploration process has finished.

3 **Channel plan**

At the end of the process it shows the channels that have been detected during the channel plan exploration. In parentheses shows the number of detected channels to total channels of the channel plan. When moving the cursor through the channels, the spectrum and measurement windows are dynamically updated for the selected channel.



7.13.3 Menu options

At the bottom are the function keys. They are detailed below.



Cancel (during the process):

This option appears only while performing the exploration process. It cancels the exploration before finish. When pressing, a confirmation message appears before cancelling.



Save (at the end of the process):

This option appears at the end of the exploration process. It saves the results obtained during the exploration. The name of the original channel plan is assigned to the new one by default and the user can modify the name using the virtual keyboard that appears prior to saving. The new channel plan is now available in the list of channel plans in the installation and can be used as any other channel plan. After saving it becomes the selected channel plan to work with.



Skip (during the process):

This option allows skipping the current channel and explore the next one in the channel plan.



Discard (at the end of the process):

This option appears at the end of the exploration process. It discards the results obtained from the exploration.



[Click here to watch this video: Channel plan exploration](#)

7.14 Discover FM stations


7.14.1 Description

The **Discover FM Stations** tool scans the FM band and creates a FM channel plan from scratch. Scanned frequency range is from 87 to 108 MHz.



7.14.2 Operation

To scan the FM band:

- 1 Connect the **RF** input signal to the equipment.
- 2 Press the **Tools** key .
- 3 Select the **Discover FM Stations** option.
- 4 The first screen of **Channel Plan Exploration** appears and the exploration starts.

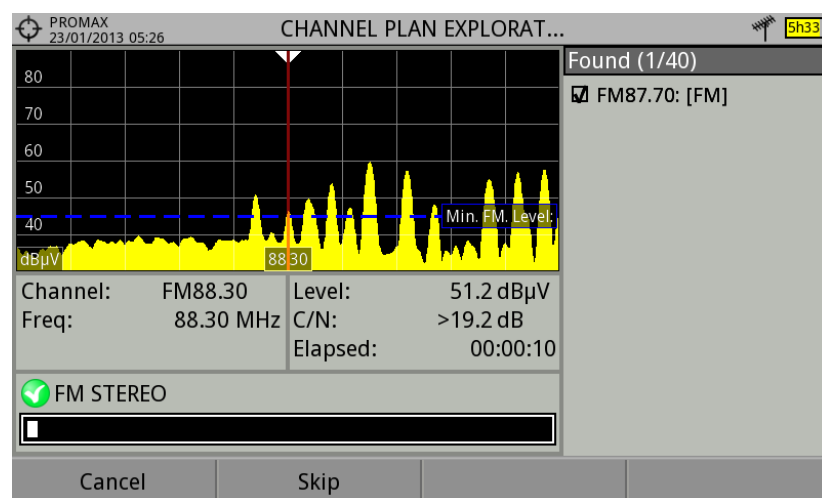


Figure 85.

- 5 After the exploration the following screen appears:

► Screen description

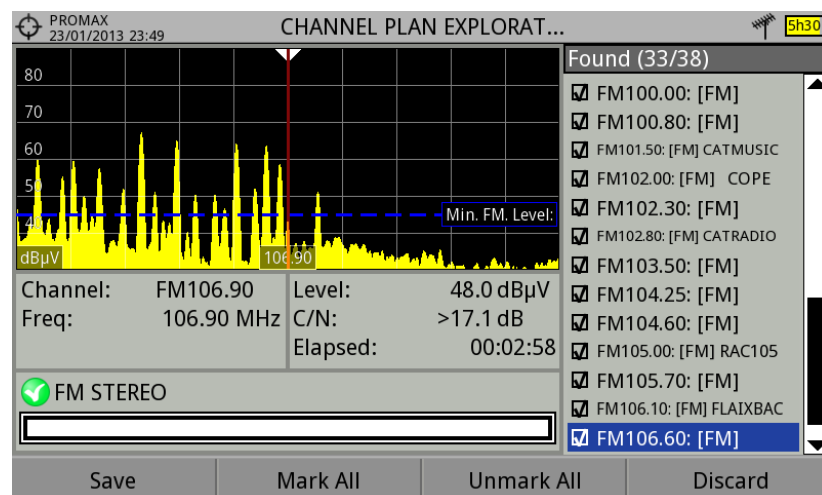



Figure 86.



The window is divided into three areas:

1 Spectrum and Measurement

It shows the cursor scrolling through each of the channels of the **FM** band. On the bottom of the screen the channel and frequency appears next to the Power/Level and the C/N ratio.

In the spectrum area there is the **Minimum FM Level**. This line is the minimum signal level required to identify the FM signal. The channels below that signal level will not be identified. It can be configured in the "Measures" tab in "Preferences" .

2 Progress Bar

It shows the signal type detected and the scan progress in real time. At the end a box shows a message informing the exploration process has finished.

3 Channel Plan

It shows a list with the channels being detected during the exploration of the FM band. At the top and between parentheses there is the number of detected channels to total channels. When moving the cursor through the channels, the spectrum and measurement windows are dynamically updated for the selected channel. User can mark / unmark the FM channels to save in the channel plan.



7.14.3 Menu options

At the bottom are the function keys. They are detailed below:



Cancel (during the process)

This option appears only while performing the exploration process. It cancels the exploration before finish. When pressing, a confirmation message appears before cancelling.



Save (at the end of the process)

This option appears at the end of the channel plan exploration process. This option saves the results obtained during the exploration if they are selected by the user. A name by default it is assigned to the channel plan but the user can modify the name using the virtual keyboard that appears prior to saving. The new channel plan is now available in the list of channel plans in the installation and can be used as any other channel plan. After saving it becomes the selected channel plan to work with.



Skip (during the process)

This option allows skipping the current channel and explore the next one.



Mark All (at the end of the process)

This option marks all the channels that appear on the channel list.



Unmark All (at the end of the process)

This option unmarks all the channels that appear on the channel list.



Discard (at the end of the process)

This option appears at the end of the exploration process. It discards the results obtained from the exploration.



7.15 **Field Strength**

7.15.1 **Description**

This function allows the equipment to work as a field strength meter, measuring dB μ V per meter. To perform this type of measurement is needed to enter the calibration parameters of the antenna being used to receive the signal.

7.15.2 **Operation**

The **Field Strength** tool is available for all signals received by the **RF** input.

- 1** Connect the antenna to the **RF** input of the equipment.
- 2** Select a channel or frequency.
- 3** Press the **Tools** key.
- 4** Select the **Field Strength** option and in the drop down menu select **On**.
- 5** Select again the **Field Strength** option, now select the new option that appears, called **Configuration**.
- 6** In the configuration window enter the antenna calibration parameters, by hand or selecting one of the available antenna types (data of different antenna types should be imported by the user. Refer to the following section).
- 7** Now access the **Spectrum Analyser** or **Measurement** mode to check the field strength measure shown as **FSM** (dB μ V/m). This measure replaces the power.

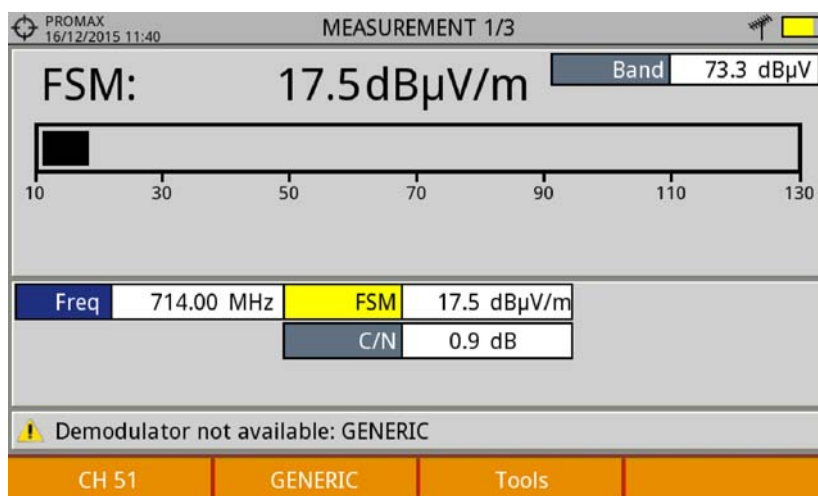



Figure 87.

- 8 To save FSM data, go to "Tools", select "Datalogger" and then "New" to create a new datalogger. Keep in mind that the "FSM" tool does not demodulate any signal, it only detects the transmitted energy, so it is identified as a GENERIC signal. For this reason only FSM data is saved for each channel (for more information refer to "Datalogger" chapter).
- 9 Once finished, return to the **Tools** menu and in the **Field Strength** option select **Off**.

WARNING: Some tools (Constellation, Echoes, MER by carrier, Merogram ...) are disabled when the **Field Strength** option is enabled. Remember to turn off "FSM" option if you want to use these other tools.

7.15.3 Settings

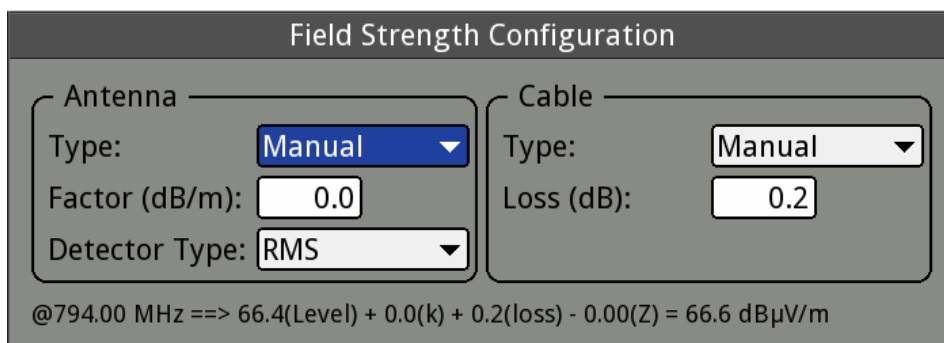The **Field Strength** configuration option allows the user to enter the correction factors for the antenna and cable used when measuring the field strength.



Field Strength Configuration

Antenna

Type: Manual

Factor (dB/m): 0.0

Detector Type: RMS

Cable

Type: Manual

Loss (dB): 0.2

@794.00 MHz ==> 66.4(Level) + 0.0(k) + 0.2(loss) - 0.00(Z) = 66.6 dBμV/m

Figure 88.



Data fields to be filled are:

► **Antenna:**

- **Type:** In this field the user can select the type of antenna between manual and any other type of antenna available. If you select the manual antenna, you must enter the correction factor by hand. If you select an antenna type then the correction factors associated with each frequency are applied. These data are defined in the antenna file imported by the user.
- **Factor:** This is the correction factor (K) for the antenna at the measurement frequency.
- **Detector Type:** (PEAK / RMS). It allows the user to select between maximum PEAK detector or RMS detector. The maximum peak detector is mainly used for analogue modulated signals, while the RMS option is the right choice for digital modulated signals.

► **Cable**

- **Type:** In this field contains the user can select the type of antenna between manual and any other type of cable available. If you select the manual cable, you must enter cable loss by hand.
- **Loss (dB):** In this field you must enter the estimated loss for the cable used to connect to the antenna.

In the bottom of the configuration window you can see the field strength in real time according to the current frequency and correction factors.



7.15.4 Creating and importing calibration tables

The user can import the antenna calibration data obtained from the manufacturer. There is a template (available on the download area at PROMAX website) that can be filled and imported into the equipment (this template has been created in an Excel file; the procedure explained below only works from the Excel 2007 version and above).

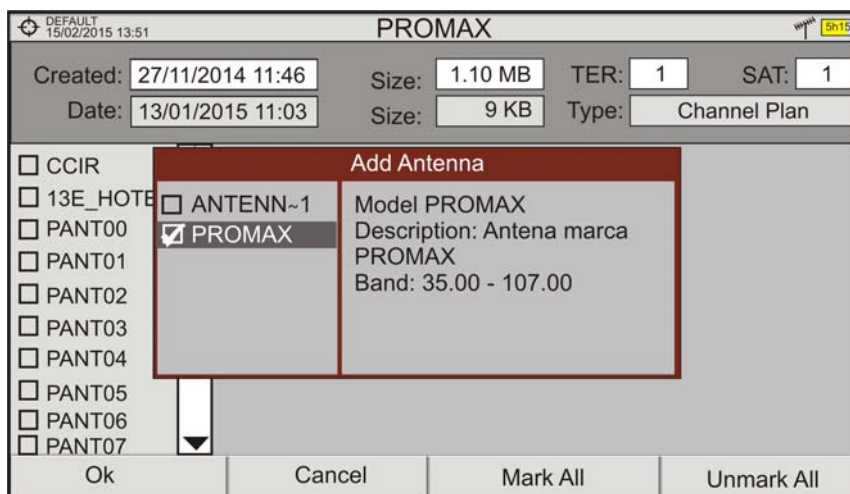


Figure 89.

Next are the steps to fill in the template data and import them to the equipment:







► Generation

- 1 Download the "Antenna XML Generator" template from the PROMAX website.
- 2 In the "Model" box enter the name by which the antenna will be identified (maximum 8 characters).
- 3 In the "Description" box, type a description to identify the antenna.
- 4 In the "Impedance" box select the impedance of the antenna between 50 and 75 ohms.
- 5 In the "Height" box enter the antenna height in meters.
- 6 Now fill the calibration table of the antenna with the K factor according to frequency.
- 7 When filling the table does not change the units.
- 8 Extend or contract the calibration table to the number of filled lines.
- 9 After filling the calibration table, go to option "Save As -> Other Formats."
- 10 In the window that appears, edit the file name in "File name".





- 11 In the drop down menu "Save as type" select the "XML Data" option. Then click "Save."
- 12 If a warning message shows up, click "Continue".
- 13 Now the file is already generated with the selected name and the extension ".xml".
- 14 Now just import it to your equipment and load the calibration table of the antenna in the installation.

► Import

- 1 Copy the generated file on a flash drive and connect it to the mini-USB port using the supplied cable.
- 2 Press the **Installation Manager** key .
- 3 Press the  "Tools" key.
- 4 Select "Import from USB" option.
- 5 The Import Files window appears. Select the generated file and press the  "Import" key.
- 6 Press the **Installation Manager** key , select the installation to which you want to add the antenna calibration table and press the  "Manage" key.
- 7 Press  key: "Installation" and select the "Add Antenna" option.
- 8 Select the antenna to be added and OK.
- 9 The antenna calibration table is now added to the installation.
- 10 Now this antenna will be available in the type of antenna field in the configuration menu of the "Field Strength" tool.

► Remove

- 1 Press the **Installation manager** key.
- 2 Press : **Tools** key.
- 3 Select "Installed Antennas" option.
- 4 Check the antenna to remove.
- 5 Press : **Remove** key.



7.16 Task Planner

7.16.1 Description

The **Task Planner** allows the user to set-up a task list, selecting when to start, a repetition rate and other parameters. The equipment can be switched off after setting all parameters and it will wake-up, at the required time, to perform the scheduled tasks.

7.16.2 Operation

The Task Planner tool is available to run screenshots and dataloggers with RF and IPTV source signals.

- 1 Press the **Utility** key.
- 2 Select the **Task Planner** option to access the Task Planner window that shows a list of scheduled tasks. In the right column and next to each task there is its status: if the date of the next execution appears then the task is pending; if "finished" appears then the task has been executed; if nothing appears then the task has not been scheduled.

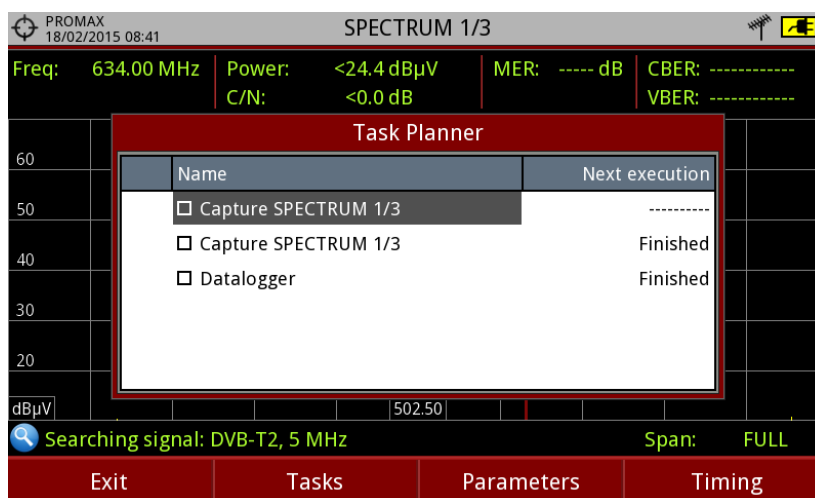


Figure 90.

- 3 To add a new task press **F2: Tasks** and select the **"Add"** option. It deploys a menu with two options: Capture and Datalogger.

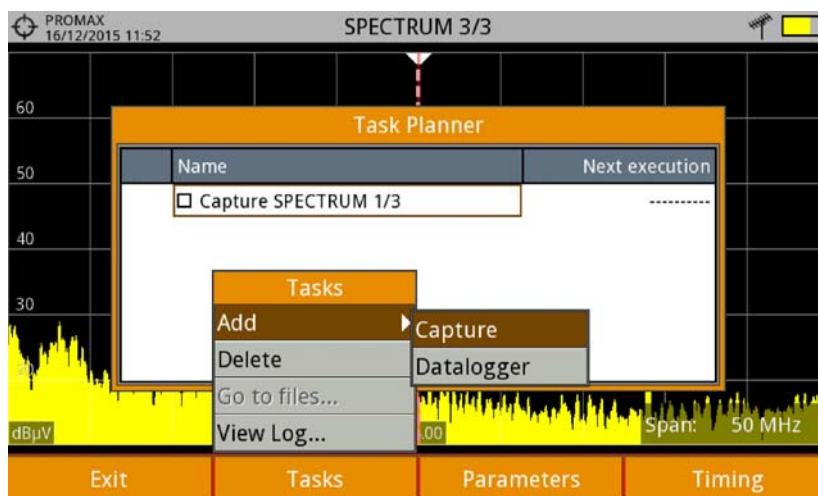


Figure 91.

- 4 The **"Capture"** option performs the capture task. The user can select the screen and type of capture. The screen options include any view in the three modes: Measurement, Spectrum or TV. The options for type of capture are: screen only, data only or screen+data (for details about capture refer to "Screen and data captures (Export button)" section).

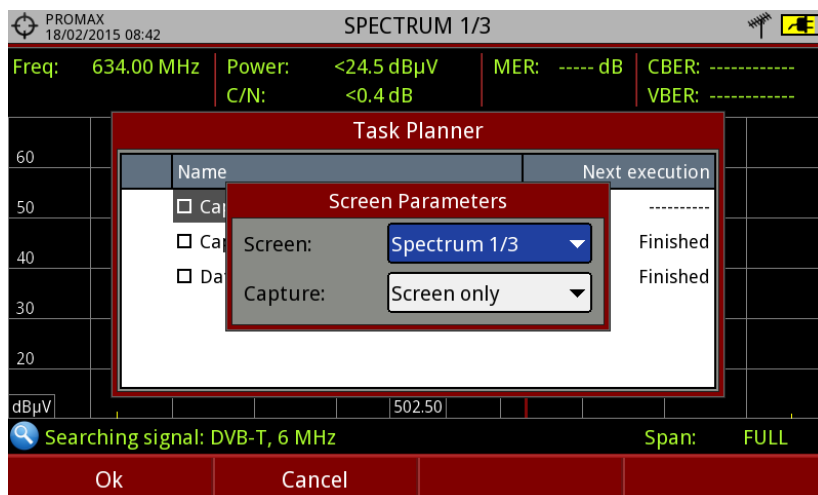



Figure 92.

- 5 The **"Datalogger"** option performs the datalogger task. The user must first select the datalogger from those available for the current installation (for details about datalogger read "Datalogger" section).
- 6 After selecting the type of task, check the box next to it and press **F4:Timer** to schedule the time to execute the task (see next section for details about the timer).



- 7 When saving the timer for the task, the upper right corner shows an icon of a clock  indicating that the equipment has tasks pending to execute.









Figure 93.

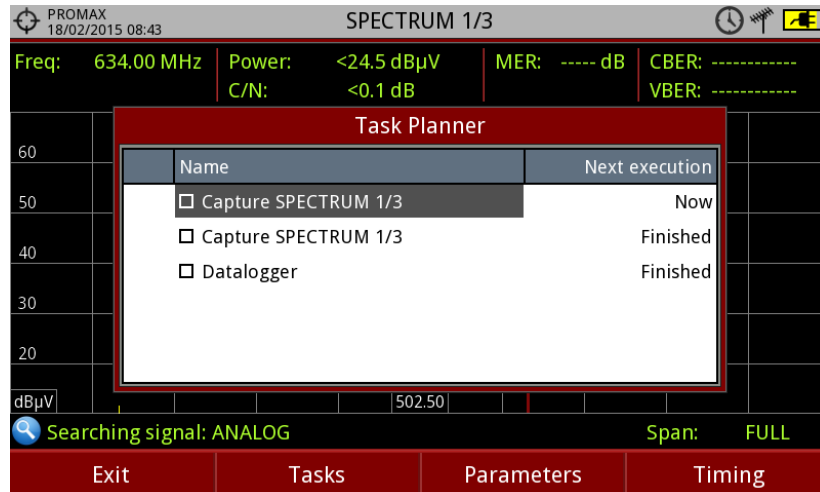- 8 To change any parameter of the task, check the box next to the task and press : **Parameters**.
- 9 To delete a task, check the box next to it and in : **Tasks**, press **Delete**.
- 10 After setting up the tasks press : **Exit**. Since this moment the timer for task execution starts.
- 11 When the task is finished, the user can access the data through **"Go to file ..."** option in : **Tasks**. It will take you directly to the management installation window where the data for each installation are stored.
- 12 Once the task is completed, user can access a short log for each programmed task, just to know if each task has been successfully completed or to indicate if something prevented its execution. To access this function, from **Task Manager**, press : **Task** and then **"View Log..."**.



NOTE:

- The equipment can be turned off after task planning as it will automatically turn on when the time to task execution comes.
- Two tasks cannot be executed simultaneously.
- It is recommended that the datalogger selected have not enabled the option to pause between channel plans, since in that case the process would stop during the execution of the task.
- The filename for the screen capture is automatically generated with the following code: capture mode (SP for Spectrum mode, TV for TV mode, ME for Measurement mode), capture channel (CHXX) and a consecutive number.

7.16.3 Timer

The timer window contains several options for task scheduling.

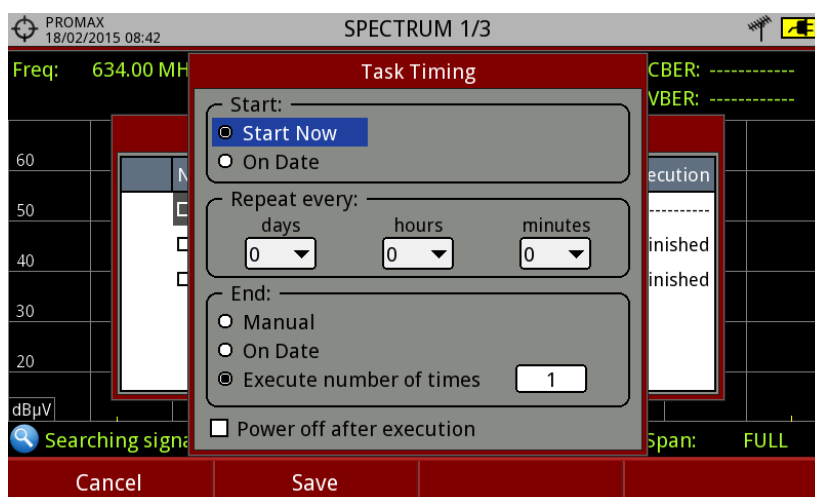


Figure 94.

► Start

Start Now: The task begins immediately after leaving the task planner.

On date: The user selects the start date for the task (day / month / year) and time (hour: minute).

► Repeat every

The task repeats each cycle of time (days, hours and minutes).



► **Stop**

Manual: The user finishes the task.

On date: The user selects the stop date for the task (day / month / year) and (hour: minute).

Repeat a number of times: The task execution ends after the number of times set.

► **Turn off after execution**

By checking this option, the equipment turns off after the execution of the task.

7.17 **Service Recording** **NEW!**



7.17.1 **Description**

The equipment records in real-time one digital service from the transport-stream received that is shown on screen. This service is saved directly on the USB flash drive memory connected to the equipment. Afterwards that record can be played on a PC with a video player.

7.17.2 **Operation**

The **Service Recording** tool is available for all **DIGITAL** signals (except for DAB digital radio services).

To access this tool:

- 1 Connect the signal to the equipment input.
- 2 Tune the channel and select the service to record.
- 3 Connect the adapter cable to the mini-USB port on the equipment and then connect a USB memory.
- 4 Press the F3 key: Tools and select the PVR option.
- 5 The screen to record the service appears.
- 6 Start the recording by pressing the **RECORD**  key.
- 7 End the recording by pressing the **STOP**  key.
- 8 The recording file is saved in the PVR folder created by the equipment in the USB memory.
- 9 The file name is PVR plus a consecutive number and the file extension is TS.
- 10 The file can be played in a computer with a media player like VLC. This file cannot be played from the meter itself.

► Screen description



Figure 96.

- 1 Installation selected; date and time.
- 2 Icons from left to right: recording; USB connected; selected band; battery level.
- 3 Recording Service.
- 4 Window with information about the record file like size and date creation.
- 5 Bar graph showing free memory space.
- 6 Size of the recording service.
- 7 Window with information about the service being recorded: recording length, maximum bit rate, channel service recorded and free available memory.
- 8 Control Keys:
 - : Recording
 - : Stop
- 9 Menu options:
 - : **Exit** Exits the tool.
 - : **Delete** Deletes the selected record file.

► **Joystick left / right:** Navigation between the control keys.

If no tuned service, the record button will be disabled.



8 IPTV




8.1 Introduction

IPTV stands for TV over IP networks. It actually means TV over any type of IP packet based distribution network. They can be referred to as LAN (Local Area Network), ethernet, computer networks, etc.. With the growth of LAN based TV distribution systems, having an IPTV input in your field strength meter becomes a handy feature.

The equipment allows you to receive television programmes coming from IPTV networks. Those programmes can be displayed on the screen together with other important service information.

Although some concepts are similar, signal quality assessment metrics is not the same in IPTV as it is in digital TV over RF. The equipment offers you the measurements you need to understand, identify and correct the new problems that can be found in this new type of television distribution networks.

8.2 Operation

- 1 Connect the IPTV input/output signal to the equipment through the Ethernet connector.
- 2 In the "Settings"  menu, in the option "Signal source" select IPTV. The IPTV icon  will appear at the screen corner.
- 3 Press the  **Multicast** key. Set the server IP address and server port. The equipment automatically detects if it is UDP or RTP protocol (for more details see next).
- 4 Now the signal should appear on screen.
- 5 Access the **MEASUREMENT, SPECTRUM ANALYSER** or **TV** mode by pressing the corresponding key to view measurement data and image. Press again to display the next view.

8.3 Screen Description

8.3.1 Measurement mode

IPTV views in **MEASUREMENT** mode are:

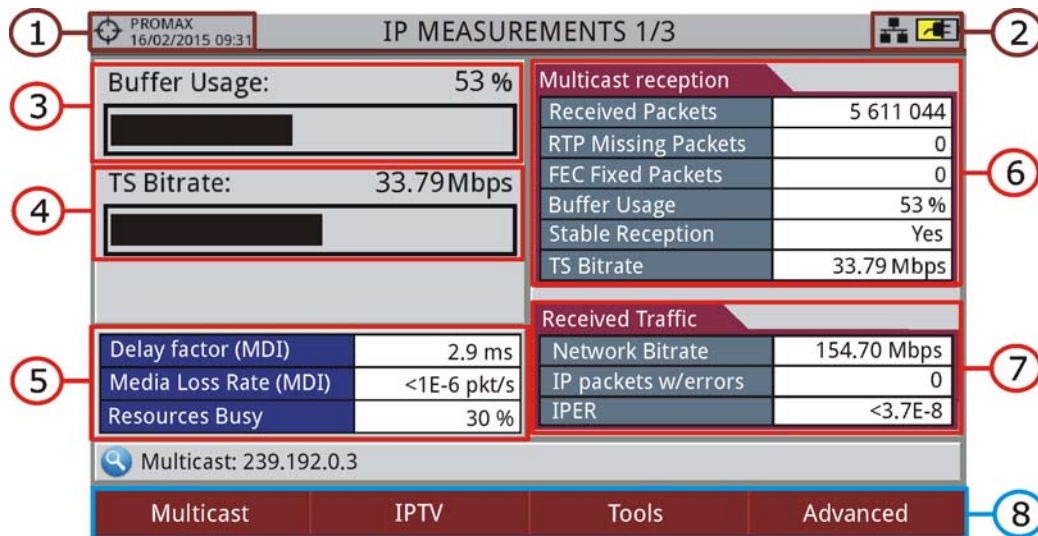


Figure 96. IP MEASUREMENTS 1/3.

- 1 Selected installation; date and time.
- 2 IPTV mode enabled; battery level.
- 3 Graphic bar "Buffer Usage" showing the internal multicast stream buffer usage.
- 4 Graphic bar "TS Bitrate" showing the recovered TS bitrate.
- 5 Measurements on the data network:

NEW! ■ **Delay Factor (MDI - Media Delivered Index):** Maximum time that one multicast packet stream is within the receiving buffer of the equipment (measurement done over the last second of data received) (recommended value < 100 ms).

NEW! ■ **Media Loss Rate (MDI):** Ratio of lost packets to received packets in one multicast stream (only for RTP protocol after FEC) (recommended value < 0.005 pkt/s).

- **Resources Busy:** Resources busy shows the "%" of equipment resources used for handling current IP traffic. Arriving at 100%, means the receiver can't handle all packets related to data and IP protocols other than Multicast stream. In that situation, data loss may happen.



- 6 Measurement on the multicast reception: received packets, RTP missing packets, FEC fixed packets, buffer usage, stable reception and TS bitrate (if TS input has many variations in packet reception a stable packet rate cannot be established).
- NEW!** 7 Measurements over all traffic data in the network: network bitrate, IP packets with errors and IPER (IP Packet Error Ratio; ratio of Ethernet packets with errors to Ethernet packets received).
- 8 Softkey menus (see next "Settings" chapter for more details).

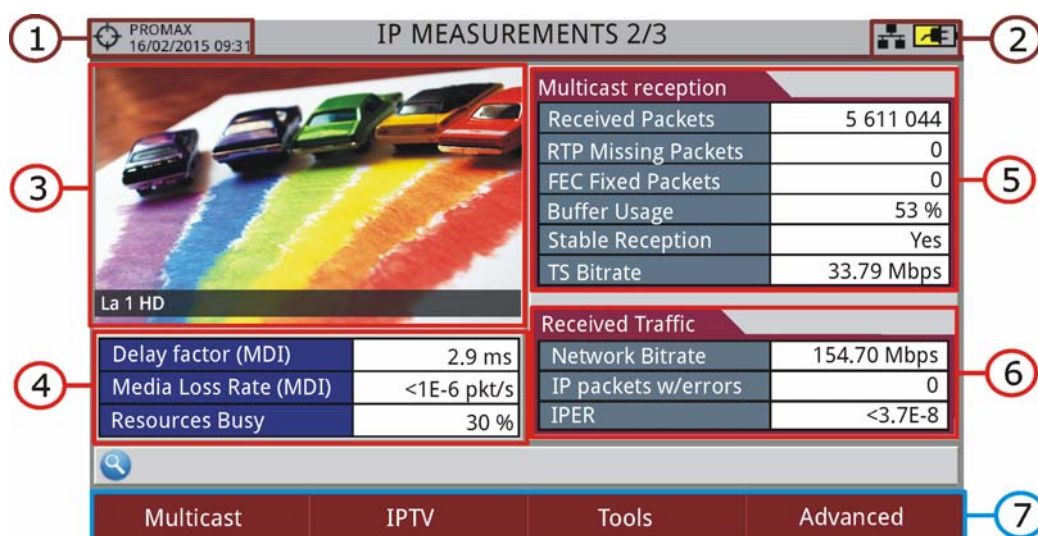


Figure 96. IP MEASUREMENTS 2/3.

- 1 Selected installation; date and time.
- 2 IPTV mode enabled; battery level.
- 3 Image of the tuned signal.
- 4 Measurements on the data network: Delay Factor, Media Loss Rate and Resources busy (see previous section for more details).
- 5 Measurement on the multicast reception: received packets, RTP missing packets, FEC fixed packets, buffer usage, stable reception and TS bitrate (if TS input has many variations in packet reception a stable packet rate cannot be established).
- 6 Measurements over all traffic data in the network: network bitrate, IP packets with errors and IPER (IP Packet Error Ratio; ratio of Ethernet packets with errors to Ethernet packets received).
- 7 Softkey menus (see next "Settings" chapter for more details).

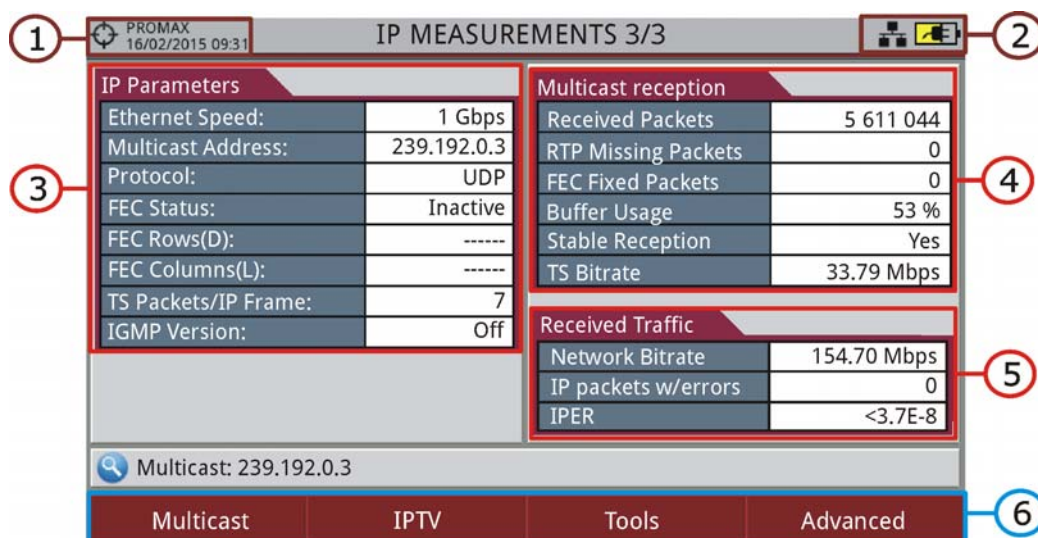


Figure 97. IP MEASUREMENTS 3/3.

- 1 Selected installation; date and time.
- 2 IPTV mode enabled; battery level.
- 3 Internet parameters:
Ethernet speed, IGMP protocol version, multicast server address, detected communication protocol (UDP/RTP), forward error correction (FEC) status, FEC rows, FEC columns and TS packets / IP frame.
- 4 Measurement on the multicast reception: received packets, RTP missing packets, FEC fixed packets, buffer usage, TS locked/unlocked and TS bitrate.
- 5 Measurements over all traffic data in the network: network bitrate, IP packets with errors and IPER (IP Packet Error Ratio; ratio of Ethernet packets with errors to Ethernet packets received).
- 6 Softkey menus (see next "Settings" chapter for more details).



8.3.2 Interarrival Packet Time / Packet Rate Over Time

IPTV view in **Spectrum Analyser** mode shows the "Interarrival packet time" or "Packet Rate Over Time" screen. To change between these two options press **F3**: **Tools** and select on **IPTV Graph** submenu.

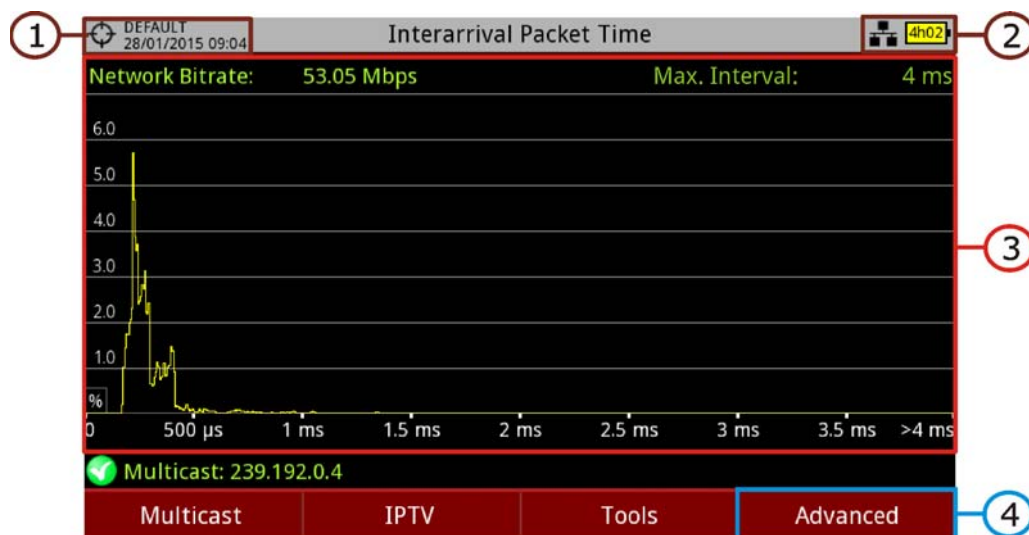


Figure 98. Interarrival packet time.

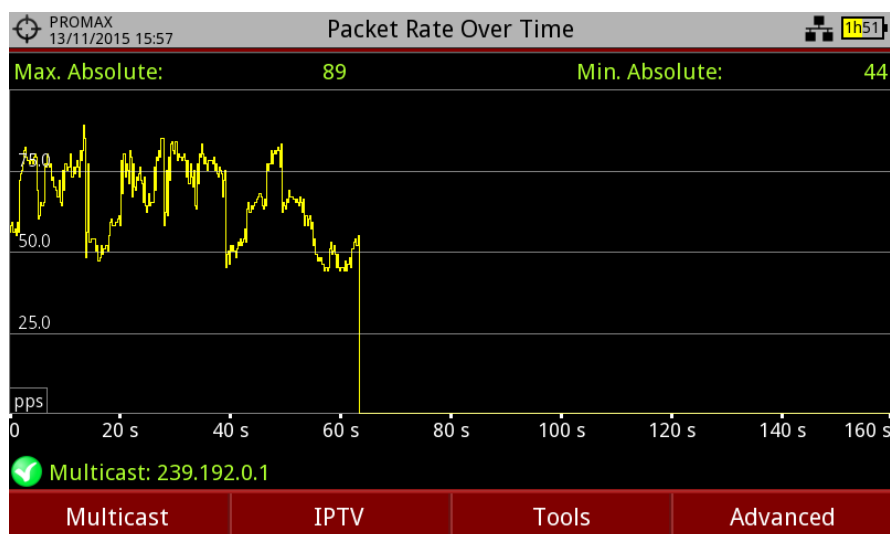


Figure 99. Packet rate over time.

- 1 Selected installation; date and time.
- 2 IPTV mode enabled; battery level.

- 3 **Interarrival packet time:** It shows the IP packet percentage as a function of time between packets. Its purpose is check for reception packet continuity, for the selected stream. Usually, the graph should concentrate around small time values. Spreading through the time axis may point to a network problem. Maximum interval measure shows the maximum time detected between consecutive IP packets.

Packet Rate Over Time: This graph shows the number of IP packets being received from the current streaming over time.

4 Advanced

For **Interarrival Packet Time** allows to change span (4, 8, 40, 200, 400 and 1920 ms) or restart analysis.

For **Packet Rate Over Time** allows change resolution (1, 5, 10, 50, 200 and 1000 ms) or restart analysis.

8.3.3 TV mode

IPTV views in TV mode are:

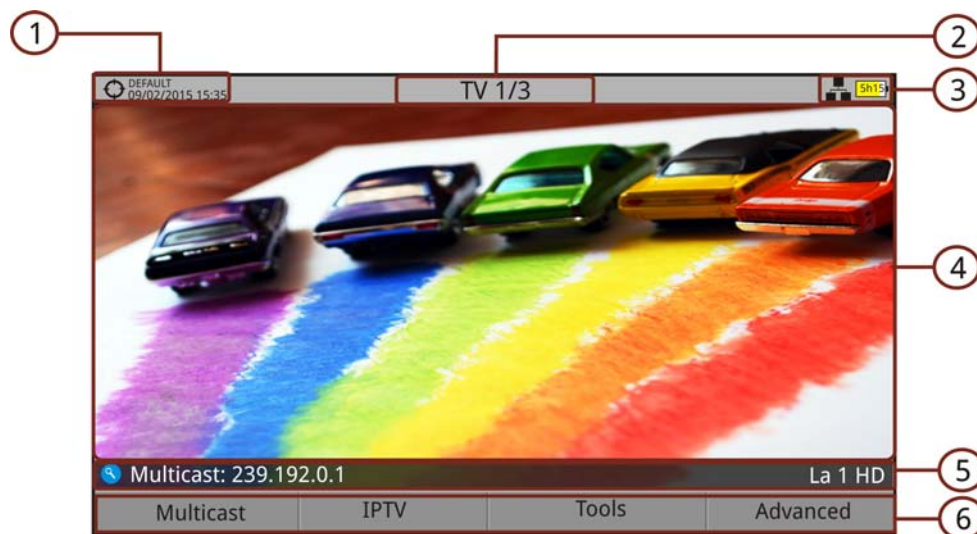


Figure 100. IP TV 1/3.

- 1 Selected installation; date and time.
- 2 Number of view/total views.
- 3 Selected band, battery level.
- 4 Tuned service image.
- 5 Multicast IP address and name of the selected service.
- 6 Softkeys menus.

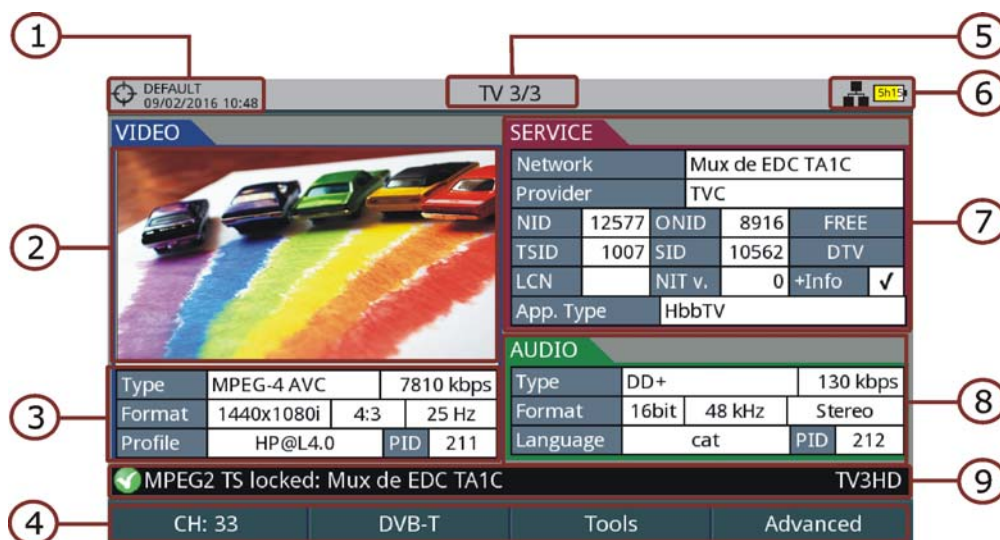


Figure 101. IP TV 3/3.

- 1 Selected installation; date and time.
- 2 Tuned service image.
- 3 Tuned service information.
 - ▶ **TYPE:** Encoding type and video transmission rate.
 - ▶ **FORMAT:** Resolution (horizontal x vertical), aspect ratio and frequency.
 - ▶ **PROFILE:** Profile level.
 - ▶ **PID:** Video program identifier.
- 4 Softkeys menu.
- 5 Number of view/total views.
- 6 Selected band; battery level.
- 7 Tuned service information.
 - ▶ **NETWORK:** Television distribution network (Terrestrial). Orbital position (Satellite).
 - ▶ **PROVIDER:** Program provider name.
 - ▶ **NID:** Network identifier where the signal is distributed.
 - ▶ **ONID:** Identifier of the original network where the signal originates.
 - ▶ **TSID:** Transport stream identifier.
 - ▶ **SID:** Service Identifier.
 - ▶ **App. Type:** Type of detected interactive service such as HbbTV, MHP and MHEG-5. It also shows the URL related to the interactive service.
 - ▶ **LCN:** Logic Channel Number. It is the first logic number assigned to the first channel in the receiver.
 - ▶ **NIT v.:** Network Information Table version.
 - ▶ **+Info:** Additional service information.



- ▶ **FREE/SCRAMBLED:** Free/scrambled transmission.
 - ▶ **DTV/DS:** Standard type of transmission.
- 8 Tuned audio information.
- ▶ **TYPE:** Type of audio encoding and transmission speed
 - ▶ **FORMAT:** Service audio format. Bit depth; sampling frequency; sound reproduction.
 - ▶ **LANGUAGE:** Broadcasting language.
 - ▶ **PID:** ID of the audio program.
- 9 Multicast IP address and name of the selected service.

8.4 Tools

Press **F3**: **Tools** to access the tools in the IPTV mode. The **IP Ethernet Frame Viewer**, **PING** and **View IP Network log** are the specific tools for IPTV. The other tools (TS Analyzer, TS Recording, Task Planner) are generic and its operation can be found in the "Tools" chapter.

8.4.1 PING / TRACE

The PING tool is a diagnostic tool about the network. To use it follow these steps:

- 1 Set parameters for the PING/TRACE test. Press on **F4**: **Advanced**. Options are:
 - **Mode:** Select between PING (it confirms if a given unit can get any response from another machine in the same network), TRACE (it shows all IP servers between the meter and the IP address measuring transit delays of packets across the network) or Avg Packet Delay / IPDV (it shows delay between two points in the network and changes in this delay).
 - **Pings for each IP** (only for PING tool): Number of times to repeat the ping test. If "Forever" is selected, it can be stopped with "Cancel" or "Exit".
 - **Ping range** (only for PING tool): Range of addresses to apply the ping test. It adds the number selected to the original IP address.
- 2 Click on IP Address and enter the IP address of the remote machine you want to check its communication. It works for both local network or external network.
- 3 Press **F2**: Start.
- 4 The equipment starts sending data packets to the IP address of the remote machine.



- 5 If it gets response, on screen appears the message "Reply from" with the response IP address, number of bytes received, time of response, TTL (time-to-live) or average IPTD (average IP Packet Transfer Delay) and IPDV (IP Packet Delay Variation).

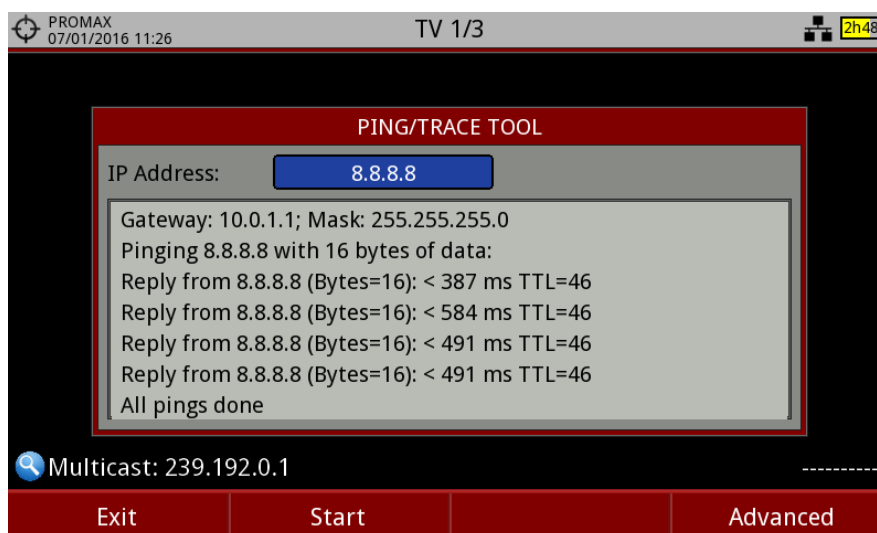


Figure 102.

- 6 To exit the tool press : **Exit**.

8.4.2 View IP Network Log

This function shows a log with network events about protocols IGMP, PING, ARP, DHCP and also Ethernet link detection. Data shown is date, hour and a description.

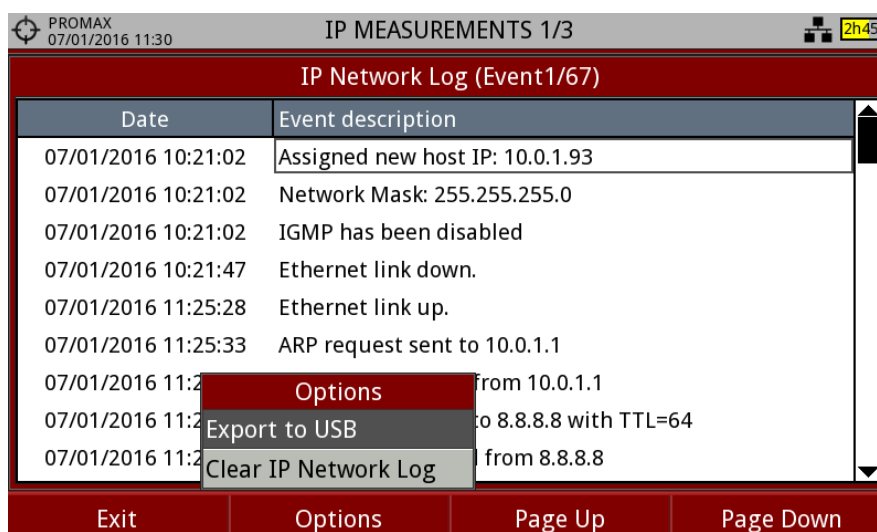



Figure 103.

Pressing on : **Options** the log can be exported to an USB flash memory or be cleared.

8.4.3 IP Ethernet Frame Viewer **NEW!**

This function only works for **Multicast streaming**.

When user presses on F2: **Capture** the system captures an Ethernet packet that belongs to the multicast stream been received. Information of this packet is shown as a tree that can be deployed to show header data of each protocol available (Ethernet, IPv4, UDP and RTP).

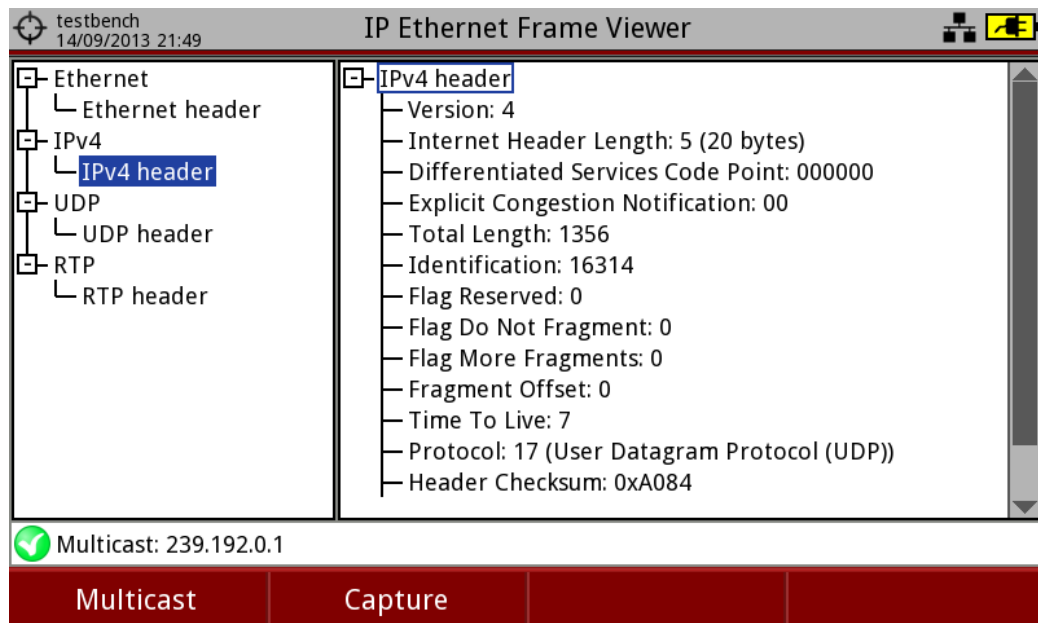




Figure 104.

Pressing on : Multicast allows user to change multicast address.

Pressing on : Capture allows user to capture a new packet in the multicast stream.

8.5 Settings

8.5.1 Multicast Settings

The IPTV tuning options are on the : **Multicast** key. These options are available to receive a multicast signal. Multicast is an open broadcasting over IP in which the device only takes data packets with a specific address.


For multicast distribution, options are:


- **Multicast Address:** Multicast address at which the equipment is subscribed to receive a multicast transmission.
- **UDP Port:** It allows the user to select the port when working with UDP protocol.



- **Recent Multicast Addresses:** It shows a list of multicast addresses recently used.
- **Discovered Multicast Addresses:** It discovers and shows all multicast streams into the network. It shows a complete list including IP addresses and bitrates for each stream.
- **IGMPv3 Server Sources:** Multicast IP servers validated by the user to receive multicast streams (only for IGMPv3 protocol; select IGMP version protocol in "Preferences").


8.5.2 IPTV parameters and reset measures

Pressing on the : **IPTV** key it displays a list of IP Parameters: ethernet speed, IGMP version, multicast address, protocol, FEC status and TS packets/IP frame.

Pressing on : **Advanced** there is an option to reset measured values.

8.5.3 General Settings and Preferences

► Preferences

To access **Preferences** press the  key for 1 second. Go to the **Network** options tab to fill out the network options to identify the equipment into a data network. This is necessary to receive IPTV signal.

Network parameters are:

- **MAC:** Physical address of the equipment. It is unique and cannot be edited.
- **DHCP:** Enable this option to get the proper IP address when the unit is first connected to a network. That feature contributes to make things easier to installers when debugging network access. Enable the DHCP protocol for proper IP configuration.
- **IP Address:** IP Address of the equipment into the local network.
- **Mask:** Subnet mask of the equipment (by default 255.255.255.0).
- **Gateway:** It allows the meter to get out from the local network when using PING or TRACE (if the network does not have gateway, use 0.0.0.0).
- **IGMP Version:**
Protocol for multicast transmissions used by the router. Available versions are 1, 2 and 3. To disable select Off.
 - **IGMPv1:** IGMP version 1. Each time user selects a multicast address, meter asks for the new multicast stream.



- **IGMPv2:** IGMP version 2. Each time user selects a multicast address, meter stops receiving the current stream and asks for receiving the new one.
- **IGMPv3:** IGMP version 3. Each time user selects a multicast address, meter stops receiving the current stream and asks for receiving the new one, from the servers approved by the user.
- **Off:** Meter does not send any IGMP messages and discards the received ones.

► General Settings

The IPTV settings when pressing the settings  key are:

- **Signal Source:** It allows the user to select the signal coming into the equipment between the RF input for RF signal and the IPTV input. In this case select IPTV.
- **Decoder TS Input:** It allows the user to select the transport stream coming into the equipment. In this case select IPTV. If you want to save the transport stream received by the IPTV, select the IPTV input.
- **ASI Output:** It allows the user to select the way out for TS-ASI packets. User can select among Off, IPTV and ASI Input. This transport stream received by the equipment can feed the signal to other devices as well. In the case of IPTV option the TS-ASI packets go out through the IPTV connector. If you want to send to the output the transport stream from the IPTV signal, select IPTV.





9 INSTALLATIONS MANAGEMENT

9.1 Description

The Installations Management is a program embedded in the equipment that allows the user to easily create a file (installation) to individually store and manage data for each installation. Measurements, channel plans, screenshots and any other data associated with the installation will be stored in the folder corresponding to that installation. These measures can then be displayed and downloaded to a PC.

If the user does not create any file installation, the equipment stores measurements in the installation file that is preinstalled by default (named "DEFAULT").

9.2 Operation

- 1 To access the Installations menu press the  key.
- 2 It shows up a window with a list of all available installations. On the softkeys appears the options to manage these installations.
- 3 To exit the list of installations press the key .

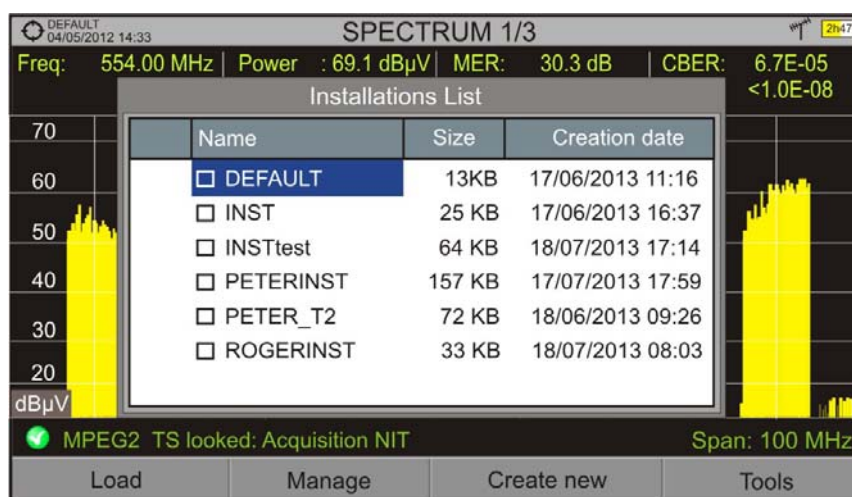


Figure 104.



There are the following options:

- **Load** F1: It loads the selected installation. To select a installation from the list, place the cursor on the installation and press the joystick, then press "Load" F1 to load it. Once loaded, the name of the installation appears on the upper left corner of the screen, accompanied by the symbol , that means that is the current installation. All measurements, screenshots, channel plans and other data since this moment will be stored in the current installation.
- **Manage** F2: It opens a window that displays all data of the current installation and from where they can be edited, changed or view (more details in section "Installation management").
- **Create new** F3: It creates a new installation with the data introduced by the user (more details in section "New installation").
- **Tools** F4: It shows up a menu with some tools to use with the installations (see section "Tools for installations").

9.3 Installation Management

In the list of installations, press on the option **Manage** F2 to access to the **Installation manager** screen:

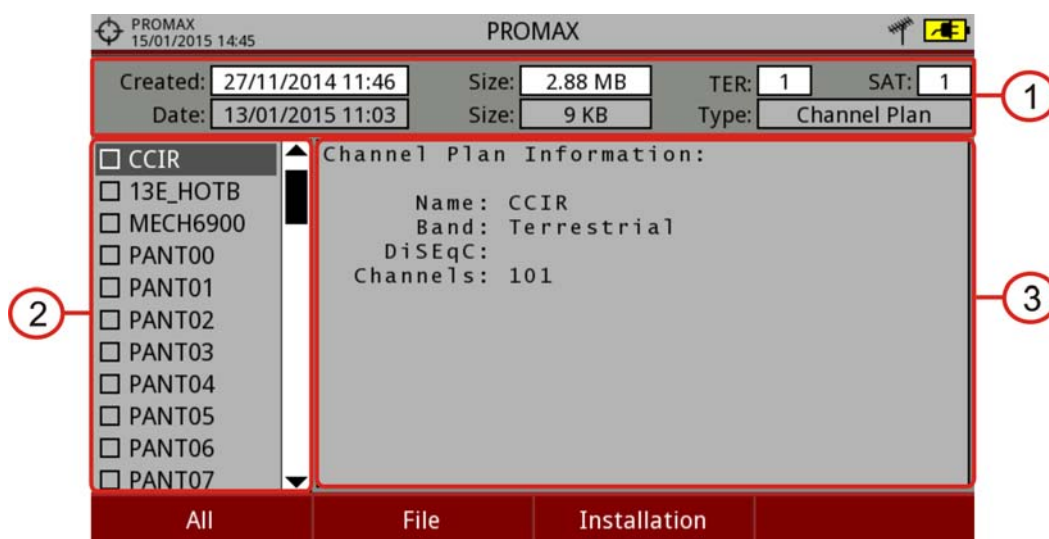


Figure 105.

The DEFAULT installation is the installation preinstalled on the equipment. It is like any other installation and it can load channel plans, DiSEqC programs, etc. The DEFAULT installation can not be deleted or renamed.



The window is divided into three fields:

1 General data

- In the first line shows general information about the installation and in the second line shows information about the selected file. Data fields are:
 - ▶ **Name:**
Name of the current installation file.
 - ▶ **Created:**
Date and time the current installation was created.
 - ▶ **Size:**
Data size of the current installation.
 - ▶ **TER:**
It shows the number of terrestrial channel plans in the installation.
 - ▶ **SAT:**
It displays the number of satellite channel plans in the installation.
 - ▶ **Date:**
Date and time when the selected file was created.
 - ▶ **Size:**
Size of the selected file.
 - ▶ **Type:**
Type of the selected file.

2 List of files area

It shows all file types associated to the installation. File types are: screenshot, channel plan, datalogger, DiSEqC commands, data capture, signal monitoring, services databases and antennas.

To move along this file list move the joystick up or down.


Any of these files can be selected or deselected by pressing the joystick.

3 Display area

It is the area where a description of the file, on which the cursor is placed at the file list, is displayed. Description data is displayed only if the cursor is placed for a moment.

For a screenshot, it displays a thumbnail of the full screen, as captured.

In the remaining cases, it only shows data description of the file type.

If there is any additional option associated with the file type, it will appear in the  key.



► Menu options

The installation manager menu has four options linked with the softkeys. They are described below:



Filter by type

It shows all available file types in the current installation and the amount of them between brackets. User can filter by file type. The selected file type will be the only one available in the list of files. Available file types are: screenshots, channel plans, dataloggers, DiSeqC commands, data captures, signal monitoring, service databases and antennas (or all).



File

► **Mark All:**

It marks all files on the list of files area.

► **Unmark All:**

It deselects all files on the list of files area.

► **Delete:**

It deletes all selected files on the list of files area.

► **Copy to USB:**

It saves selected files on the list of files area to an USB stick connected to the equipment.

If the name of the file to be copied is greater than 8 characters the system cuts it. If the file name is cut and matches with another one, then it is added a number to the name to make them different. For instance, 2 files with similar names, like FILENAME01 and FILENAME02 both files will be correctly copied with names FILENA~1 and FILENA~2.

To keep the file names with more than 8 characters it is recommended to export the complete installation using the "Export to USB" option (see "Tools" section).

The Datalogger files copied to the USB cannot be used to generate reports by the NetUpdate program. To do this the datalogger files must be exported directly through the NetUpdate program (see the NetUpdate user's manual for details).



F3

Installation

► Add Channel Plan:

It opens a window to add a channel plan, terrestrial or satellite, to the current installation.

► Add Antenna:

It allows the user to add an specific antenna between the ones available. To import an antenna refer to "Field Strength" section in chapter "Tools".

► Add DiSEqC Program:

It allows the user to select and add to the current installation any DiSEqC program available in the equipment.

F4

Options

This option shows up only if the selected file has an additional option associated.

► See full screen:

This option only appears if user selects an image in the list of files. It displays the selected image full screen.

► DiSEqC program:

This option only appears if a satellite channel plan is selected in the list of files area. It allows the user to add a Diseqc program to the selected satellite channel plan from the list of diseqc programs available for the current installation.

► Open file:

This option appears if datalogger, data capture or monitoring signal is selected in the file list. For datalogger it directly accesses the datalogger viewer. For data capture (if it has been done in the Spectrum Analyzer mode) it shows the reference spectrum. For monitoring signal it accesses the data viewer.


To get out from the Installation manager press any key to access MEASUREMENT, SPECTRUM or TV mode.



[Click here to watch this video: Installation manager](#)





9.4 New installation

In the list of installations, when selecting the option **Create New**  it runs the installation wizard that helps to create a new installation:

- 1 During the process, the user has the option to edit the default name assigned or import data from another installation.
- 2 The user can select the channel plans (terrestrial and satellite) that will be used in that installation. At least one for each band has to be selected.
- 3 For satellite channel plans the user can select the DiSEqC commands associated to the installation and also the satellite band (Ku-Ka or C band) and the frequencies of the LNB Oscillator.
- 4 During the creation process the softkeys function are: Next (it goes to the next step), Previous (it goes to the previous step) or Cancel (it cancels the process).
- 5 When finish, the new installation created will be the current installation.

9.5 Tools for installations

In the list of installations, when pressing the **Tools**  option it shows a menu with some options to edit the installation files:

- ▶ **Mark All:**
It selects all installations in the list of installations.
- ▶ **Unmark All:**
It deselects all installations in the list of installations.
- ▶ **Archive:**
It compresses (using the ZIP algorithm) the selected installations to save more space. A zipped installation shows a box icon  at the left side in the list of installations. A zipped installation can be loaded as anyone else, but the load time can be slightly higher because previously it is unzipped automatically. Once the installation is unzipped the user must re-zip it if necessary. To transfer an installation file from the equipment to a PC, it must have been previously zipped.



- ▶ **Delete:**
It deletes the selected installations and all the files associated to them. The DEFAULT installation cannot be deleted.
- ▶ **Rename:**
It edits the name of the installation selected in the list of installations. The installation by default DEFAULT cannot be renamed.
- ▶ **Export to USB:**
It saves the installations files selected in the list of installations to an USB stick connected to the instrument. The installation file is exported in zip format.
- ▶ **Import from USB:**
It imports installation files from a USB stick connected to the equipment. It has to use the same folder structure that is generated when exporting to USB.
- ▶ **Installed Antennas:**
It allows user to remove antennas in the installation.



9.6 Importing Data from USB

The data import tool allows the user to import data files in a simple way from an USB flash drive to the equipment.

Data available to be imported are:

- **Installations.**
- **Channel Plans.**
- **Antennas.**

▶ Operation

- 1 Copy the file to be imported on a flash drive and plug it into the mini-USB port using the supplied cable. The file must be in the proper format so the system can recognize it.
- 2 Press the **Installation Management** key .
- 3 Press the  key "**Tools**".
- 4 Select the "**Import from USB**" option.




- 5 The Import Files window appears. Select the file and press the  key: **"Import"**.



Figure 106.

- 6 If the file import is successful then a window shows a confirmation message.



10 CONNECTING TO EXTERNAL DEVICES

The **HD RANGER 2** can interact with external devices, sharing information through its interfaces. Connection types are:

- 1 Input/output data interface via mini-USB connector to USB memory or PC.
- 2 Video/Audio analogue output interface via **V/A** connector output.
- 3 Video/Audio analogue input interface via **V/A** connector input.
- 4 DiSEqC, SCD/EN50494 standard (also known as SatCR) and SCD2/EN50607 standard (also known as JESS) through the RF connector.
- 5 Digital High Resolution Video/Audio interface via HDMI connector.
- 6 CAM modules input via Common Interface slot.
- 7 TS-ASI Input/Output via F connector.
- 8 IP network via 8P8C connector.

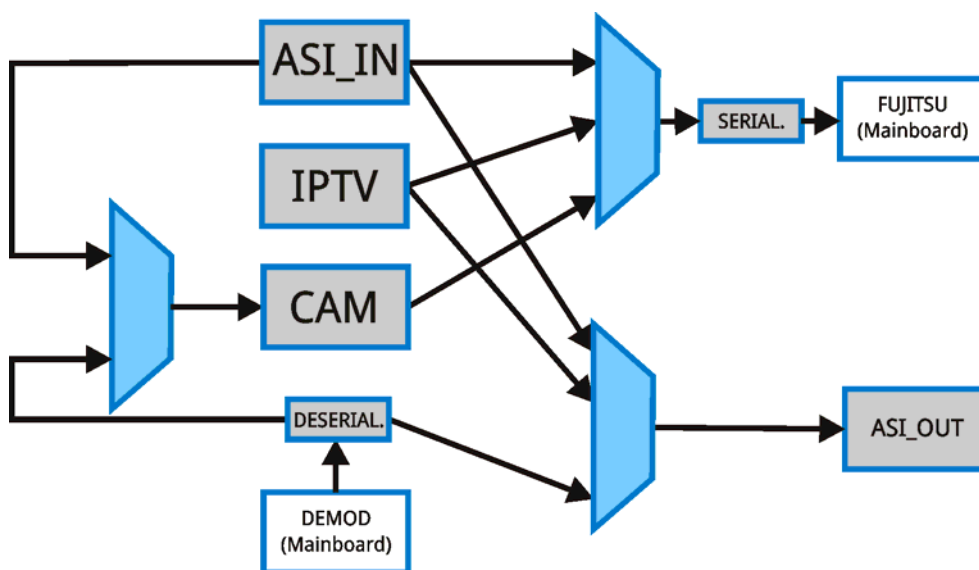


Figure 107.

Next is described each of these interfaces and their interaction with external devices.








10.1 Mini-USB connector

The equipment has a female mini USB port that uses a USB media specific protocol called "On-the-Go" (OTG abbreviated). This type of communication allows the equipment to work in two different ways depending on the device connected to the USB port: as a server (host) or device. More often, the **HD RANGER 2** will work as a host when connecting a USB memory and as device when connecting to a computer. This feature makes the equipment in a much more versatile tool.

10.1.1 Connecting the **HD RANGER 2** (host) to an USB memory (device)

This connection allows the user to copy files (screenshots, channel plans, dataloggers, DiSEqC commands and others) and export/import installations from the equipment to the USB and vice versa.


► To copy some select data from the installation:

- 1 Connect the CC-045 cable (USB (A) Female - Mini USB (A) Male) to the mini-USB socket ([see figure 5](#)) of the equipment.
- 2 Connect the USB stick to the female port of the cable.
- 3 USB icon should appear on the top right corner of the equipment. This icon indicates that an USB stick has been detected at the port.
- 4 Press the Installations key  and select check the installation to download some of its data.
- 5 Press the key : Manage to access the data of the selected installation.
- 6 Press : Filter by type to select the type of list to view (list of all the files, only screenshots, only channel plans, only dataloggers or only DiSEqC commands).
- 7 Select the files from the list to be copied on the USB memory stick, by pressing the joystick or by pressing : File and selecting "Mark All" (it selects all files on the list displayed).
- 8 Once files are selected press : File and select the "Copy to USB" option. This option is enabled only if it detects that there is an USB connected to the equipment and if any file has been selected.
- 9 It shows a progress bar and a message informing that files are being copied to the USB.




- 10 When finish you can remove the cable with the USB stick memory directly from the equipment and connect it to a computer to view the files copied.
- 11 Default files are copied to the root directory of the USB memory. Screenshots appear with PNG extension and data with XML extension.

► **To export one or more complete installations:**

- 1 Connect the CC-045 cable (USB (A) Female - Mini USB (A) Male) to the mini-USB socket ([see figure 5](#)) of the equipment.
- 2 Connect the USB stick to the female port of the cable.
- 3 USB icon should appear on the top right corner of the equipment. This icon indicates that an USB stick has been detected at the port.
- 4 Press the Installations key and check the installations to export.
- 5 Press the key : Tools and select **Export to USB**.
- 6 A progress bar and a message indicates that the files are being copied to the USB. The files are copied to the root directory of the USB in ZIP format.
- 7 When finished, the cable can be extracted directly with the USB stick and connect it to a computer to display the copied files.
- 8 Unzip the installation file to access the data.

► **To import one installation:**

- 1 Connect the CC-045 cable (USB (A) Female - Mini USB (A) Male) to the mini-USB socket ([see figure 5](#)) of the equipment.
- 2 Connect the USB stick to the female port of the cable.
- 3 USB icon should appear on the top right corner of the equipment. This icon indicates that an USB stick has been detected at the port.
- 4 Press the Installations key and check the installation to export.
- 5 Press de key : Tools and select **Import from USB**.
- 6 A dropdown menu shows the installations identified in the USB memory. An installation can be imported if it has the same folder structure than when exporting. Select the installation to import from those available.
- 7 The import process starts. If the name of the installation matches with an existing one, it gives a warning before import.



10.1.2 Connecting a computer (host) to the **HD RANGER 2** (device)

This connection allows the communication between the equipment and a computer via an USB cable or using the program NetUpdate of PROMAX.

NetUpdate program can be downloaded for free from the PROMAX website.

Connect the equipment to your computer using the cable CC-041 (mini USB male – USB male) supplied with the equipment.

For more information about the NetUpdate program, see the user's manual, which is available on the PROMAX website.




[Click here to watch this video: Generating a measurement report](#)




[Click here to watch this video: Creation of a channel plan](#)

10.2 V/A Output Connector

The V/A output connector allows connecting a video/audio analogue output signal. This connection allows you to switch between the image from the equipment to an auxiliary monitor by following these steps:

- 1 Connect the jack 4V cable to the video/audio output connector ([see figure 5](#)), ensuring that the plug is fully inserted.
- 2 Connect the opposite end (RCA connector) to the auxiliary monitor where video and audio of the equipment will be played.
- 3 Switch on the equipment and press the **Settings** key  for 1 second.
- 4 In the **Video & Audio Settings** menu, enable **Video output**.
- 5 Then, the image on the equipment disappears and the auxiliary monitor shows a message asking for confirmation to switch the image.




NOTE: When tuning by channel is selected, polarization, satellite band and supply output cannot be changed, because these parameters are determined by the channel plan.

- 6 Press the joystick to accept and the image will appear on the auxiliary monitor. If you do not press the joystick after ten seconds the image will return to the equipment.
- 7 To recover the image from the auxiliary monitor to the equipment, press the  key for two seconds.



10.3 V/A Input Connector

The V/A input connector allows connecting a video/audio analogue input signal. This connection allows the user to view an image on the equipment screen coming from an external source by following these steps:



- 1 Connect the supplied jack 4V cable to the video/audio input connector (see [Figure 5](#)), ensuring that the plug is fully inserted.
- 2 Connect the opposite end (RCA connector) to the source of video/audio.
- 3 Switch on the equipment and select the terrestrial and analogue signal.
- 4 Select TV mode  and press : Input.
- 5 From the menu, select "External". A message shows that the external input has been selected.
- 6 After a few seconds, the input image will be displayed on screen.
- 7 With the option : Aspect, you can select the aspect ratio of the image, between 4:3 and 16:9.

NOTE: If the equipment is displaying an external analogue video, it will not switch to internal video mode anymore when that external video is disconnected or lost.

10.4 RF Connector

10.4.1 DiSEqC commands



The RF connector allows controlling an antenna using DiSEqC commands. DiSEqC (Digital Satellite Equipment Control) is a communication protocol between the satellite receiver and the installation accessories of satellite (switches, LNBs, etc.) proposed by Eutelsat, in order to standardize the diversity of switching protocols (13 to 18 V, 22 kHz) and meet the needs of the installations for the reception of digital TV.

- 1 Connect the RF cable (see [Figure 6](#)) to the RF connector for the input signal of the equipment.
- 2 Press the **Spectrum** key  to access the spectrum analyser mode.
- 3 Press the **Settings** key  and select the satellite band.
- 4 From the **Settings** menu, select the polarization (horizontal/vertical) and the satellite band (high/low).





- 5 If necessary, enable the **Supply output** and select the supply voltage for the LNB.

NOTE: When tuning by channel is selected, polarization, satellite band and supply output cannot be changed, because these parameters are determined by the channel plan.


- 6 Select the option **DiSEqC mode**.
- 7 Two new functions appear on the softkeys: Command  and Software . DiSEqC programs appear classified in categories or folders.
- 8 Select the command or program and press the joystick to send it to the antenna. These commands or programs allow the user to control an antenna (for more information about DiSEqC commands and programs see [Annex 3](#)).

10.4.2 SCD/EN50494 (SatCR) commands

By means of function SCD/EN50494 (internacional standard, also known as SatCR) it is possible to control the devices of a TV satellite installation that are compatible with this standard, which allows to concentrate downlink frequencies (slots) by an only cable. By this way each user using a slot can tune and decode any signal present in the satellite.

- 1 Connect the RF cable ([see Figure 6](#)) to the RF connector for the input signal of the equipment.
- 2 Press the **Spectrum** key  to access the Spectrum analyser mode.
- 3 Press the **Settings** key  and select the satellite band.
- 4 Select the polarization (horizontal/vertical) and the satellite band (high/low).
- 5 If necessary, enable the **Supply output** and select the supply voltage for the LNB.

NOTE: When tuning by channel is selected, polarization, satellite band and supply output cannot be changed, because these parameters are determined by the channel plan.

- 6 In the option SCD/EN50494, select ON to enable it. It appears the  icon at the top right corner.
- 7 Also in the SCD/EN50494 option, select **Configuration** to access SCD/EN50494 parameters.

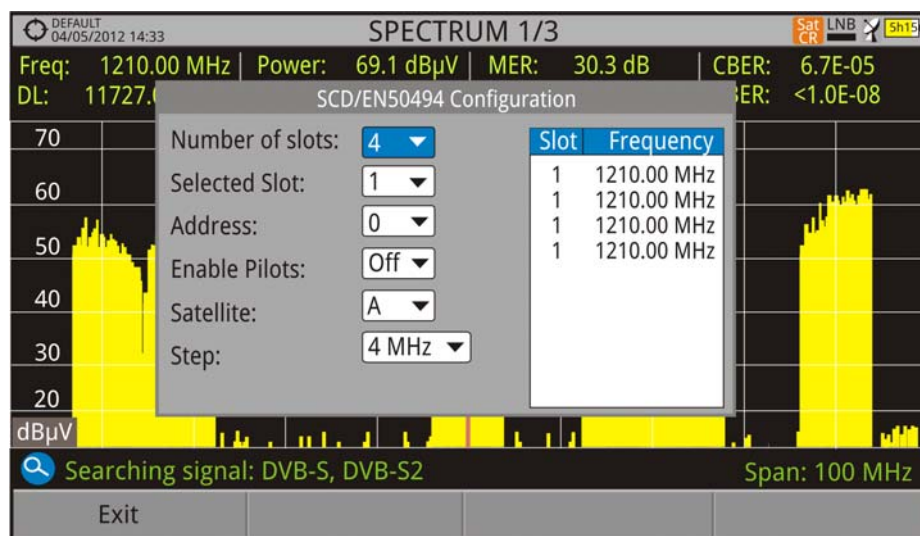


Figure 108. SCD/EN50494 command screen.

The configuration window shows the options that user can modify: number of slots, slot selected, device address, pilot signal activation (when activating the SatCR device located in the headend, it emits a pilot signal with constant level for each downlink frequency to identificate available channels), selected satellite and frequency step. For each type of slot number unit there is a list of independent frequencies to select. The user may have separate frequencies for 2, 4 or 8 slots units and these values are not lost when switching from one type to another.

- 8 Once SCD/EN50494 is configured, the user can select the slot by pressing the "Tuning" key in the Spectrum mode.

10.4.3 SCD2/EN50607 (JESS) commands


Through the SCD2/EN50607 (international standard, also known as JESS) function is possible to control the devices of a TV satellite installation that are compatible with this standard. This technology has two main functionalities: one for configuring headends, and another for configuring sockets. Thanks to its bidirectional DiSEqC capabilities, the meter can automatically read the configuration from any SCD2/EN50607 compatible unit connected to it. In case that no compatible device is detected, the meter allows the user to make a blind configuration of the unit without any confirmation other than spectrum reference. For information about JESS technology, developed by JULTEC, refer to its website (<http://jultec.de/>).

- 1 Connect the RF cable (see Figure 6) to the RF connector for the input signal of the equipment.
- 2 Press the **Spectrum** key to access the spectrum analyser mode.



- 3 Press the **Settings** key and select the satellite band. From the **Settings** menu, select the polarization (horizontal/vertical) and the satellite band (high/low).
- 4 If necessary, enable the **Supply output** and select the supply voltage for the LNB.

NOTE: When tuning by channel is selected, polarization, satellite band and supply output cannot be changed, because these parameters are determined by the channel plan.

- 5 In the option SCD2/EN50607, select ON to enable it. It appears the JESS icon at the top right corner of the screen.
- 6 Now the SCD2/EN50607 option shows a new menu. Select **Configuration** to access the configuration parameters. The user can select the power, central frequency, tone beacon and satellite for each band. The user can also select the number of user bands and the available satellites through the option "Configuration" on key .

SCD2/EN50607 CONFIGURATION				
UB	Power	Central Frequency	Tone Beacon	Satellite
UB_1	Enabled	1076 MHz	Off	A
UB_2	Disabled	1178 MHz	Off	A
UB_3	Disabled	1280 MHz	Off	A
UB_4	Disabled	1382 MHz	Off	A
UB_5	Disabled	1484 MHz	Off	A
UB_6	Disabled	1586 MHz	Off	A
UB_7	Disabled	1688 MHz	Off	A
UB_8	Disabled	1790 MHz	Off	A
<div>Exit Configuration Send</div>				

Figure 109.

- 7 Also from option SCD2/EN50607, select **Socket** to access the configuration of SCD2/EN50607 socket. The user can select the user bands that should be enabled for the socket and to send them to configure the socket.

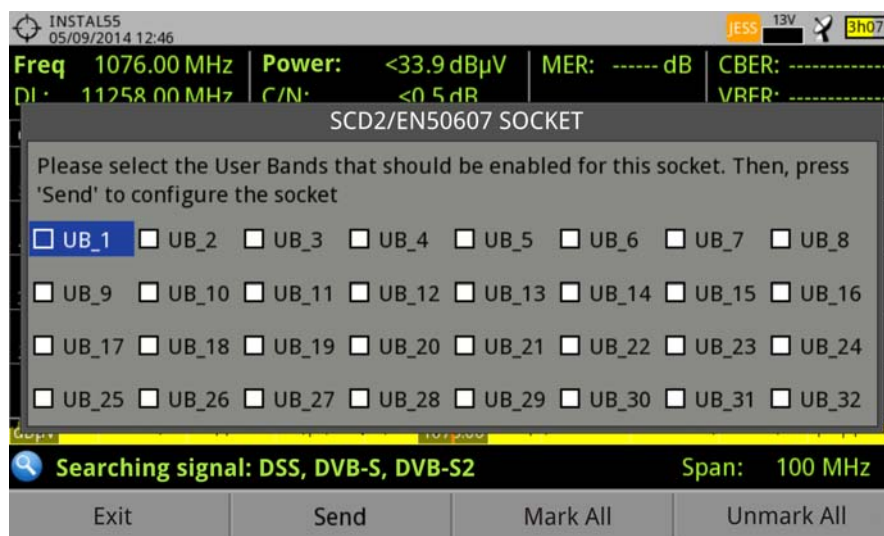


Figure 110.

- 8 Once is configured, the user, through the **F1** key "Tuning" can select the user band.

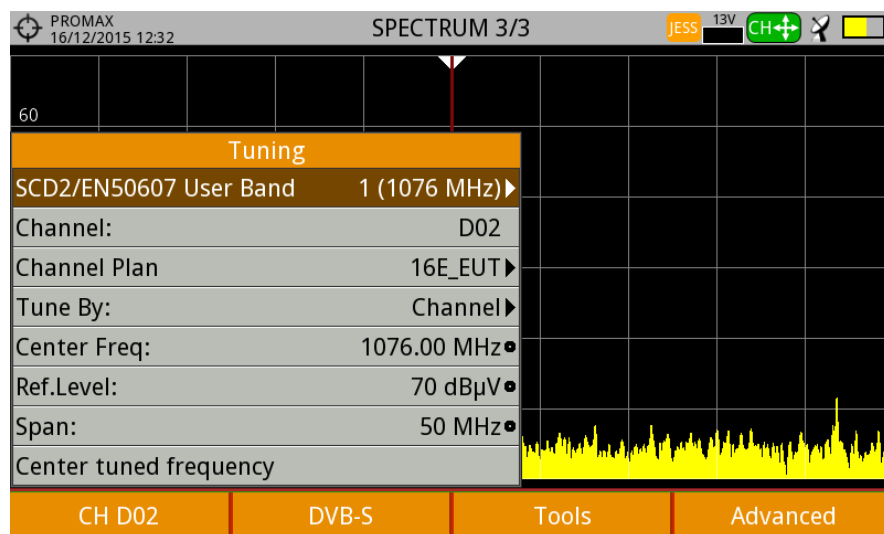


Figure 111.

- 9 User frequency tuned is stored for each User band (UB) and it is restored each time the multiswitch is being configured.

NOTE: When not detecting any SCD2 receiver, the function enters in a more basic mode, allowing sending configuration commands even with nothing connected. In that mode, the user can debug cable issues or even SCD2 units problems.

NOTE: For special devices that use non-standard commands, it has been added a **NEW!** channel bandwidth for every user band.




10.5 HDMI Output

HDMI (High-Definition Multimedia Interface) is a compact audio/video interface for transmitting uncompressed digital data. HDMI supports, on a single cable, any TV or PC video format, including standard, enhanced, and high-definition video; up to 8 channels of digital audio; and a Consumer Electronics Control (CEC) connection. The CEC allows HDMI devices to control each other when necessary and allows the user to operate multiple devices with one remote control handset.

This connection allows the equipment to interface with other High Definition equipment. It can also be very useful to check proper operation of the client's TV while on a service call. Everything that can be seen on the meter's screen is available through the HDMI.

To switch between the image from the equipment to an auxiliary monitor by following these steps:

- 1 Connect the HDMI cable to the HDMI output connector (see figure 5), ensuring that the plug is fully inserted.
- 2 Connect the opposite end to the auxiliary monitor where video and audio of the equipment will be played.
- 3 Switch on the equipment and press the Settings key  for 1 second.
- 4 In the Video & Audio Settings menu, enable **Video output**.
- 5 Then, the image on the equipment disappears and the auxiliary monitor shows a message asking for confirmation to switch the image.
- 6 Press to accept and the image will appear on the auxiliary monitor. If you do not press after ten seconds the image will return to the equipment.

10.6 Common Interface Slot

This connection enables the conditional access (decryption) for encoded digital TV signals, in agreement with the DVB-CI (Common Interface) recommendation.

This technology supports all those decryption systems for which a valid CAM module exists, according to DVB-CI, with the corresponding subscriber card.

The equipment by means of Common Interface method offers the possibility of supporting various conditional access systems, so that video and/or audio broadcast by encrypted services (scrambled TV for subscribers) may be decoded following the SimulCrypt model. It provides a standard connector to insert CAM modules (Conditional Access Module), which allows a specific management for each codification system.

SimulCrypt is a process that supports various parallel conditional access systems, together with the encryption algorithms specified by DVB-CSA (Common Scrambling Algorithm) to control access to pay-TV services. The SimulCrypt broadcasts Transport Stream contains keys for various conditional accesses, thereby allowing reception by more than one type of decoder.

NOTE: The insertion of a CAM module or a SMART-CARD in a wrong position might produce the instrument malfunction and could generate damages to the equipment.

► Operation

- 1 Insert the subscriber Smart-Card* in the CAM module*.

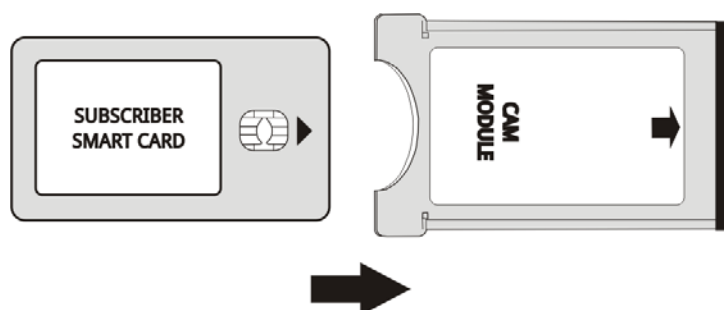



Figure 112. Subscriber Smart-Card and CAM module insertion.

- 2 Insert the CAM module in the Common Interface slot of the equipment. The CAM module connector is located on the equipment rear panel. Place the instrument on a stable surface and insert the module so the printed arrow appears on visible upper face, pressing until the extractor mechanism button becomes activated.
- 3 If the equipment detects the CAM module it shows a confirmation message.
- 4 Press the Settings key .
- 5 Select the **Common Interface** option.
- 6 By means of this option the user can navigate through the CAM module menu. Each time an option is selected, the waiting icon appears, until the module allows accessing the next menu or option.
- 7 To extract an inserted CAM module, press the button from extractor mechanism and remove the module. If the equipment detects the CAM module extraction it shows a confirmation message.

* CAM module and Smart card are not included.



10.7 TS ASI Input / Output


It is an asynchronous serial interface. It is the serial standard used for MPEG-2 TS, in multimedia equipment interconnection:

- Synchronous 270 Mbps data flow (up to 218 Mbps payload).
- Differential signal over coax interface.
- It allows intermediate node test in broadcast and distribution infrastructures.

10.7.1 TS-ASI Input

The TS-ASI option is a key feature. You can monitor and analyze streams coming from satellite receivers, transport stream players, multiplexers, etc... It automatically detects whether the stream is composed of 188 or 204 bytes.

► Operation


- 1 Press the **Settings** key  to access the settings.
- 2 Select the **Decoder TS Input** option. It shows up a menu to select the transport stream coming into the equipment between the RF Demodulators, IPTV and the ASI Input.
- 3 The **RF Demodulators** option (this option is available only if RF is selected as a Signal Source) extracts the TS from the RF signal by means of the internal RF demodulator. The RF signal can come from digital terrestrial, satellite or cable.
- 4 The **IPTV** option (this option is available only if IPTV is selected as a Signal Source) extracts the TS from the IPTV signal.
- 5 The **ASI Input** option gets the TS directly through the ASI-TS input connector.



10.7.2 TS-ASI Output

It can transmit in packet mode or burst mode. User can use the transport stream received by the equipment to feed the signal to other devices as well through the TS-ASI output.

► Operation

- 1 Press the **Settings** key  to access the settings.
- 2 Select the **ASI Output** option. It allows the user to select the signal source for the TS-ASI packets going out through the ASI Output. User can select among Off, IPTV, RF demodulators and ASI Input. By this way, the transport stream can feed another device.
- 3 The **Off** disables the ASI Output. If the **RF Demodulators** option (this option is available only if RF is selected as a Signal Source) is selected, the signal through ASI Output is the TS extracted from the RF signal by means of the internal RF demodulator. The RF signal can come from digital terrestrial, satellite or cable. If the **IPTV** option is selected (This option is available only if IPTV is selected as a Signal Source), the signal through **ASI Output** is the TS extracted from the IPTV signal. The ASI Input option enables the TS-ASI packets coming from ASI input connector go out through the ASI output connector.

10.8 IP network

Refer to IPTV chapter.



11 SPECIFICATIONS

11.1 General Specifications

► Inputs and Outputs

Parameter	Value	Additional data
RF Input		
Connector Input type	F male	75 Ω
Maximum Signal	130 dB μ V	
Maximum Input Voltage	50 V rms	DC to 100 Hz; powered by the AL-103 power charger
	30 V rms	DC to 100 Hz; not powered by the AL-103 power charger
	140 dB μ V	Protected up to 30 seconds
Video/Audio Input/Output		
Connector Input	Multipole Jack	75 Ω
Connector Output	Multipole Jack	75 Ω
Sensibility	1 Vpp	75 Ω ; positive video
Sound Input/Output		
Connector Input	Multipole Jack	75 Ω ; same V/A input multipole jack
Outputs	Built-in speaker	
	Multipole Jack	75 Ω ; same V/A output multipole jack
DVB-ASI Input/Output		
Connector Input	BNC female	75 Ω
Connector Output	BNC female	75 Ω
Bit Rate max	80 Mbit/s	
IP Interface		
Connector	RJ45	Also known as 8P8C. With Tx/Rx LED indication
Type	Ethernet 10/100/1000 Mbps	
Protocol	UDP/RTP	
Transmission	Multicast, IGMP v2 standard SMPTE 2022-1	
Protection	FEC standard SMPTE 2022-2	
Payload	from 1 to 7 Transport stream MPEG-2 packets	
USB Interface		
Connector	mini-USB	
Characteristics	OTG (On-the-go)	
	Mass storage host	Can read/write on flash drives
	Serial port emulation	
	USB CDC	Communications Device Class



Parameter	Value	Additional data
Monitor Display		
Monitor	7" TFT	Transmissive colour dot matrix type
Aspect ratio	16:9	
Dot Format	800 x 480 dots	(R,G,B)(W) x (H)
Brightness	700 cd/m ²	
External Unit Power (through the RF input connector)		
Terrestrial Supply	External, 5, 12 and 24 V	
Satellite Supply	External	Up to 500 mA
	13 V	Up to 500 mA
	15 V	Up to 500 mA
	18 V	Up to 500 mA
22 kHz signal Voltage	0.65 V ± 0.25 V	Selectable in Satellite band
22 kHz signal Frequency	22 kHz ± 4 kHz	Selectable in Satellite band
Maximum Power	At least 6 W for 13, 15, 18, 24 V	If you select 5V, the maximum power shall not exceed 2.25 W (450 mA)
DiSEqC Generator	According to DiSEqC 1.2 standard	DiSEqC is a trademark of EUTELSAT

► Mechanical Features

Parameter	Value	Additional data
Dimensions	290x185x95 mm	WxHxD
Weight	2.2 kg	without options
Size	5.096 cm ³	

► Power Supply

Parameter	Value	Additional data
Internal battery	7.2 V; 13 Ah	Li-Ion Intelligent battery
Battery Operation Time	> 5 hours in continuous mode	No EXTERNAL supply active
Recharging time	3 hours up to 80%	Instrument off
External Voltage	12 V DC	Using only PROMAX supplied accessories
Consumption	50 W	
Auto Power Off	Programmable	After the selected amount of minutes without operating on any control. Deactivable

► Operating Environmental Conditions

Parameter	Value	Additional data
Altitude	Up to 2000 m	
Temperature range	From 5 °C to 45 °C	Automatic disconnection by excess of temperature
Max. Relative humidity	80%	up to 31°C; decreasing lineally up to 50 % at 40 °C.

NOTE: Equipment specifications are set in these environmental operating conditions. Operation outside these specifications are also possible. Please check with us if you have specific requirements.



► Included Accessories

Parameter	Value	Additional data
1x CC-046	Jack 4V/RCA cable	
1x CC-041	Connection USB Cable On-the-go (A) Male – Mini USB (B) Male	
1x CC-045	USB Cable (A) Female – Mini USB (A) Male	
1x AA-103	Car lighter charger	
1x AL-103	External DC charger	
1x AD-055	"F"/H-BNC/H adapter	
1x AD-056	"F"/H-"DIN"/H adapter	
1x AD-057	"F"/H-"F"/H adapter	
1x CA-005	Mains cord	
1x CB-084	Rechargeable Li+ battery 7,2 V 13 Ah	Built-in
1x DC-300	Transport belt	
1x DC-303	Carrying bag	
1x DC-230	Transport suitcase	
1x DG0124	Quick Reference Guide	

RECOMMENDATIONS ABOUT THE PACKING

It is recommended to keep all the packing material in order to return the equipment, if necessary, to the Technical Service.



11.2 Measurement Mode

► DVB-T

Parameter	Value	Additional data
Modulation	COFDM	
Margin of power measurement	From 35 dBμV to 115 dBμV	
Measures	Power, CBER, VBER, MER, C/N and Link margin	VBER measure can go down to <1E-10; CBER measure can go down to <1E-7
Displayed data	Numeric and level bar	
Carriers	2k, 8k	
Guard Interval	1/4, 1/8, 1/16, 1/32	
Code Rate	1/2, 2/3, 3/4, 5/6, 7/8	
Constellation	QPSK, 16-QAM, 64-QAM	
Bandwidth	6, 7 and 8 MHz.	
Spectral inversion	ON, OFF	Auto
Hierarchy	Indicates hierarchy mode.	
Cell ID	Detected from transmitter station.	
TPS signalling	Time slicing, symbol interleaver and MPE-FEC.	

► DVB-T2

Parameter	Value	Additional data
Profiles	T2-Base, T2-Lite	
Modulation	COFDM	
Margin of power measurement	From 35 dBμV to 115 dBμV	
Measures	Power, CBER, C/N, LBER, MER, Link Margin, BCH ESR, LDP Iterations and wrong packets	LBER measure can go down to <1E-10
Displayed data	Numeric and level bar	
Carriers	1k, 2k, 4k, 8k, 8k+ EXT, 16k, 16k+ EXT, 32k, 32k+ EXT.	
Guard Interval	1/4, 19/256, 1/8, 19/128, 1/16, 1/32, 1/128.	
Bandwidth	5, 6, 7 and 8 MHz.	
Spectral Inversion	ON, OFF	Auto
Pilot Pattern	PP1 - PP8	
PLP Code Rate	1/2, 3/5, 2/3, 3/4, 4/5, 5/6	
PLP Constellation	QPSK, 16QAM, 64QAM, 256QAM.	
PLP Constellation Rotation	ON, OFF	Auto
PLP ID	0 - 256	
Cell ID	Detected from transmitter station	
Network ID	Detected from transmitter station	
C2 System ID	Detected from transmitter station	

► DVB-C

Parameter	Value	Additional data
Modulation	QAM	
Margin of power measurement	From 45 dBμV to 115 dBμV	256QAM: 42dBμV 128QAM: 39dBμV 64QAM: 36dBμV 32QAM: 33dBμV 16QAM: 30dBμV
Measures	Power, BER, MER, C/N and Link margin	
Displayed data	Numeric and level bar	
Demodulation	16/32/64/128/256 QAM	
Symbol rate	1800 to 7200 kbauds	
Roll-off (α) factor of Nyquist filter	0.15	
Spectral inversion	ON, OFF	Auto



► DVB-C2

Parameter	Value	Additional data
Modulation	COFDM	
Margin of power measurement	From 45 dB μ V to 115 dB μ V	TBD
Measures	Power, CBER, MER, C/N, LBER, BCH ESR, LDP Iterations and wrong packets	
Displayed data	Numeric and level bar	
Carriers	4k	
Guard Interval	1/64, 1/128	
Bandwidth	6 and 8 MHz	
Spectral Inversion	ON, OFF	Auto
PLP Code Rate	2/3, 3/4, 4/5, 5/6, 8/9, 9/10	
PLP Constellation	64QAM, 256QAM, 1kQAM, 4kQAM	
Dslice ID	0-256	
PLP ID	0-256	
Cell ID	Detected from transmitter station	
Network ID	Detected from transmitter station	
C2 System ID	Detected from transmitter station	

► Analogue TV

Parameter	Value	Additional data
Colour System	PAL, SECAM and NTSC	
Standard supported	M, N, B, G, I, D, K and L	
Sensibility	40 dB μ V for a correct synchronism	

► FM

Parameter	Value	Additional data
Tuning range	45 to 1000 MHz	
Tuning step size	10 kHz	
Sensitivity	5 dB μ V	150 MHz (S+N/N = 40 dB)
Selectivity (mono)	\pm 200 kHz 25 dB	

► DVB-S

Parameter	Value	Additional data
Modulation	QPSK	
Margin of power measurement	From 35 dB μ V to 115 dB μ V	18 dB μ V@2.15 GHz / 2 MSs; 30 dB μ V@2.15 GHz / 27 MSs; 33 dB μ V@2.15 GHz / 45 MSs
Measures	Power, CBER, MER, C/N and Link Margin	
Displayed data	Numeric and level bar	
Symbol rate	2 to 45 Mbauds	
Roll-off (α) factor of Nyquist filter	0.35	
Code Rate	1/2, 2/3, 3/4, 5/6, 7/8	
Spectral inversion	ON, OFF	Auto



► DVB-S2

Parameter	Value	Additional data
Modulation	QPSK, 8PSK, 16APSK, 32APSK	
Modulation schemes	ACM / VCM	
Margin of power measurement	From 35 dBμV to 115 dBμV	8PSK: 24 dBuV@2.15 GHz / 2 MSs; 34 dBuV@2.15 GHz / 27 MSs
Measures	Power, CBER, LBER, MER, C/N, BCH ESR, Wrong Packets and Link Margin	
Displayed data	Numeric and level bar	
Symbol rate	2 to 45 MSps	QPSK, 8PSK, 16APSK, 32APSK
Roll-off (α) factor of Nyquist filter	0.20, 0.25 and 0.35	
Code Rate (8PSK)	1/2, 3/5, 2/3, 3/4, 4/5, 5/6, 8/9, 9/10	
Code Rate (QPSK)	3/5, 2/3, 3/4, 5/6, 8/9, 9/10	
Spectral inversion	ON, OFF	Auto
Pilots	Presence Indication	
TS clock NEW!		Warning message when the TS clock is too high.

► DSS

Parameter	Value	Additional data
Modulation	QPSK	
Margin of power measurement	From 35 dBμV to 115 dBμV	
Measures	Power, CBER, VBER, MER, C/N and Noise Margin	
Displayed data	Numeric and level bar	
Symbol rate	20 Mbauds or variable	Auto detected
Roll-off (α) factor of Nyquist filter	0.20	
Code Rate	1/2, 2/3, 6/7 and AUTO	
Spectral Inversion	ON, OFF	Auto



11.3 Spectrum Analyser Mode

► Digital Signal

Parameter	Value	Additional data
General Parameters		
Resolution filter	10 kHz, 20 kHz, 40 kHz, 100 kHz, 200 kHz, 1 MHz	Also 2 kHz only for terrestrial band.
Markers	1	It displays frequency, level indication, level difference, frequency difference
Reference Level	60 dB μ V to 135 dB μ V	Adjustable in steps of 5 dB
Spectrum range		Span, dynamic range and reference level are variable by means of arrow cursors
Terrestrial		
Tuning range	5 to 1000 MHz	Continuous tuning from 5 to 1000 MHz
Tuning mode	Channel or frequency	Channel plan configurable; tune step 50 kHz
Resolution	10 kHz	
Measurement range	10 dB μ V to 130 dB μ V	3.16 μ V to 3.16 V
Measurement bandwidth	100 kHz	
Span	Full span-500-200-100-50-20-10 MHz	Full span (full band); selectable by joystick
Digital channels measures	Channel power, C/N	
Satellite		
Tuning range	950 to 2150 MHz	
Tuning mode	Intermediate frequency or downlink	Channel plan configurable; tune step 50 kHz
Resolution	10 kHz	
Measurement range	10 dB μ V to 130 dB μ V	3.16 μ V to 3.16 V
Measurement bandwidth	100 kHz	
Span	Full span-500-200-100-50-20-10 MHz	Full span (full band); selectable by joystick
Digital channels measures	Channel power, C/N	According to modulation type



► Analogue Signal

Parameter	Value	Additional data
General Parameters		
Attenuation scale	Auto-range	
Numerical indication	Absolute value according to selected units	
Graphical indication	Analogue bar on screen	
Audible indicator	Pitch sound	Tone with pitch proportional to signal strength
Terrestrial		
Tuning range	5 to 1000 MHz	
Tuning mode	Manual	
Resolution	10 kHz	
Measurement range	15 dBμV to 130 dBμV	3.16 μV to 3.16 V
Measurement bandwidth	100 kHz	
Analogue channels measures	Level, C/N, V/A	
Accuracy	±1.5 dB	25-120 dBμV; 45-1000 MHz; 22 °C ± 5 °C
Out of range indication	<, >	
Satellite		
Tuning range	950 to 2150 MHz	
Tuning mode	Intermediate frequency or downlink	Channel plan configurable
Resolution	10 kHz	
Measurement range	20 dBμV to 130 dBμV	31.6 μV to 3.16 V
Measurement bandwidth	100 kHz	
Analogue channels measures	Level, C/N	
Accuracy	±1.5 dB	35-100 dBμV; 950-2050 MHz; 22 °C ± 5 °C
Out of range indication	<, >	



11.4 TV Mode

► Video

Parameter	Value	Additional data
Codecs	MPEG-1	
	MPEG-2	MP@HL (Main profile high level)
	MPEG-4 AVC H.264	High Profile Level 4.1; maximum bitrate 40 Mbps
Maximum Image Size	1920x1080x60i; 1280x720x60p/50p	
Minimum Image Size	352x240x30p; 352x288x25p	
Bitrate	40 Mbps	
Aspect Ratio	16/9; 4/3	
SI/PSI data	Service list and main PIDs	
HD Video Resolution	1080, 720 and 576	Progressive or interlaced
Conditional Access Type	Common Interface	By means the CAM module
HDMI output resolution	1920x1080	

► Audio

Parameter	Value	Additional data
Codecs	MPEG-1	
	MPEG-2	
	HE-AAC	
	Dolby Digital and Dolby Digital +	
Demodulation	According to the TV standard	
De-emphasis	50 µs	75 µs (NTSC)
Sound subcarrier	Digital frequency synthesis according to the TV standard	

► Transport Stream

Parameter	Value	Additional data
Communication protocol	UDP or RTP/UDP	
Packets	188 or 204 bytes	Automatic detection
Transmission	Packet or burst mode	
Methode	MULTICAST / IGMP version 2	
Payload	From 1 to 7 packets MPEG-2	
Video Info	Type, bitrate, format, aspect ratio, frequency, profile, PID	
Service Info	Network, provider, NID, ONID, scrambled/free, TSID, SID, LCN	
Audio Info	Type, bitrate, format, frequency, mono/stereo, language, PID	



11.5 Tools

► Constellation

Parameter	Value	Additional data
Type of Signal	DVB-T, DVB-T2, DVB-C, DVB-C2, DSS, DVB-S and DVB-S2	Type of Signal
Displayed data	I-Q graph	Displayed data

► Echoes

Parameter	Value	Additional data
Type of Signal	DVB-T, DVB-T2, DVB-C2	
Measurement range	Depends on the standard, carrier and guard interval	
Delay	0.1 μ s to 224 μ s	Typical configuration (DVB-T 8K, GI = 1/4)
Distance	0.3 km to 67.2 km	Typical configuration (DVB-T 8K, GI = 1/4)
Power range	0 dBc to -30 dBc	Typical configuration (DVB-T 8K, GI = 1/4)
Time scale	1/3 symbol period	

► LTE Ingress Test

Parameter	Value	Additional data
Type of signal	DVB-T, DVB-T2, DVB-C, DVB-C2	
Displayed data	LTE band plus quality parameters for a selected TV channel	

► Attenuation Test

Parameter	Value	Additional data
Test frequencies	3 selectable pilots	

► Datalogger

Parameter	Value	Additional data
Stored data	Signal type, modulation parameters, all measures available for the detected signal type, and time stamp	
Timestamp	Date and time at each measured channel	



11.6 IPTV

► Streams Multicast

Parameter	Value	Additional data
IP	224.0.0.0 to 239.255.255.255	
Ports	1024 to 65535	
Maximum bitrate	80 Mbit/s	
IPER (ITU Y-1540)		Population of interest: all Ethernet frames received on the interface; recommended value < 100 ms
MDI (RFC4445)		Population of interest: specified multicast stream; recommended value < 0.005 pkt/s
Mean IPTD, IPDV (ITU Y.1540)		Population of interest: PING packets with 16 bytes of data. Packet Transfer Delays are based in the halved round-trip time of PING packets
Autodetection of crossover cables	Yes	



11.7 Transport Stream Analyser

► Tables

Parameter	Value	Additional data
PSI Tables	PAT	Program Association Table
	PMT	Program Map Table
	NIT	Network Information Table
	CAT	Conditional Access Table
SI Tables	NIT	Network Information Table
	BAT	Bouquet Association Table
	SDT	Service Description Table
	EIT	Event Information Table
	TDT	Time and Date Table
	TOT	Time and Date Table

► Bitrate

Parameter	Value	Additional data
Bitrate max	80 Mbit/s	

► Alarm

Parameter	Value	Additional data
According to ETSI std TR101 290 V1.2.1		Sections 3.3, 3.9 and 3.10 (no measurements done)



11.8 Options

► Fibre Optics

Parameter	Value	Additional data
Selective Optical Power Meter		
Optical Measure bands	1310 nm \pm 50 nm; 1490 nm \pm 10 nm; 1550 nm \pm 15 nm	
Connector	FC/APC	
Measurement Dinamic Range	- 49,9 dBm to +10 dBm	Accuracy \pm 0,5 dB
Isolation between bands	> 45 dB	
Optical to RF Converter		
Dynamic range of conversion	From -5 dBm to +10 dBm	
Atenuación RF	ON = 15 dB; OFF = 0 dB	
RF band converted (Optical Cable and DTT links)	From 65 MHz to 1000 MHz	
RF band converted (Optical IF-Satellite Installations)	From 950 MHz to 5450 MHz	for universal optical LNB
RF output	From 65 MHz to 2150 MHz	
5 GHz RF Auxiliary input		
Connector	SMA	
Frequency bands	Band1 = De 2150 MHz a 3000 MHz	
	Band2 = De 3400 MHz a 4400 MHz	
	Band3 = De 4400 MHz a 5400 MHz	
Dynamic Range	45 -105 dB μ V	ATT OFF
	60 - 120 dB μ V	ATT ON
Conversion Gain	7 dB	
	-8 dB	
Flatness	+ -5 dB	
Spurious	< 45 dB μ V	(-65 dBm) typical
Intermodulation products	<15 dB typical	
Maximum input signal	RF: 120 dB μ V; DC: 50 V	

► DAB/DAB+

Parameter	Value	Additional data
Combined antenna input	for Band III	
DAB sensitivity	up to -94 dBm typical	
Decodes audio services	up to 384 kbit/s	

► **GPS**

Parameter	Value	Additional data
Chipset	GSP3F	SIRF Start III technology
Frequency	L1, 1575.42 MHz	
C/A code	1.023 MHz chip rate	
Channels	20	
Accuracy Position	10 meters, 2D RMS 5 meters 2D RMS, WAAS corrected <5 meters (50%), DGPS corrected	
Velocity	0.1 meters/second	
Time	1 microsecond synchronized to GPS time	
Reacquisition	0.1 sec., average	
Snap start	1 sec., average	
Hot start	8 sec., average	
Warm start	38 sec., average	
Cold start	42 sec., average	
Altitude	18.000 meters max	
Velocity	515 meters/second max	
Acceleration	4g, max	
Jerk	20 meters/second, max	



12 MAINTENANCE

12.1 Considerations about the Screen

This paragraph offers key considerations regarding the use of the colour screen, taken from the specifications of the manufacturer.

In the TFT display, the user may find pixels that do not light up or pixels that are permanently lit. This should not be regarded as a defect in the TFT. In accordance with the manufacturer quality standard, 9 pixels with these characteristics are considered admissible.

Pixels which are not detected when the distance from the surface of the TFT screen to the human eye is greater than 35 cm, with a viewing angle of 90° between the eye and the screen should not be considered manufacturing defects either.

It is advisable a viewing angle of 15° in the 6.00 o'clock direction in order to obtain the optimum visualization of the screen.

12.2 Cleaning Recommendations

The equipment consists of a plastic case and a TFT screen. Each element has its specific cleaning treatment.

■ Cleaning the TFT screen

The TFT screen surface is VERY DELICATE. It has to be cleaned with a soft fabric cloth (cotton or silk), always making the same move from left to right and from top to bottom, without putting pressure on the screen.

The TFT screen has to be dry-cleaned or with a product specifically designed for TFT screens, by slightly dampening the cloth. NEVER use tap or mineral water, alcohol or conventional cleaning products, because they contain components that can damage the screen.

Turn off the equipment to locate dirt on the screen. After cleaning, wait a few seconds before turning on.



■ **Cleaning the plastic case**

The equipment has to be disconnected before cleaning the case.

The case must be cleaned with a solution of neutral soap and water, using a soft cloth dampened with this solution.

Before use, the equipment has to be completely dry.

Never clean with abrasive soaps, chlorinated solvents or aromatic hydrocarbons. These products may degrade the case.



ANNEX 1 SIGNALS DESCRIPTION

A1.1 DIGITAL signals

A1.1.1 Digital TERRESTRIAL Television FIRST Generation (DVB-T standard/COFDM modulation)

DVB-T Parameters

► **Channel Bandwidth**

This parameter affects the frequency separation of the carriers. Its value is 6 MHz, 7 MHz or 8 MHz.

► **Spectral inversion**

It detects if the input signal has been inverted.

► **FFT Mode**

It defines the number of modulation carriers between values 2k, 4k and 8k.

► **Guard Interval**

This parameter is the dead time between symbols; its purpose is to detect problems due to multipath echoes. This parameter is expressed in terms of the symbol duration: 1/4, 1/8, 1/16, 1/32.

► **Constellation**

Modulation used by the carriers. It also defines the noise immunity of the system (QPSK, 16-QAM and 64-QAM).

► **Code rate**

Also known as Viterbi ratio. It defines the ratio between the number of data bits and the total number of bits transmitted (the difference corresponds to the number of control bits for the detection and recovery of errors).

► **TS Hierarchy**

The DVB-T standard gives the possibility of TDT transmissions with hierarchical levels, that is, the simultaneous transmission of the same program with different image qualities and levels of protection to different noises, so the receiver can switch to a signal of lesser quality when reception conditions are not optimal.



DVB-T Measurements

■ **Power**

Measured power over the entire bandwidth of the channel.

■ **C/N**

Carrier/Noise ratio, where C is the received power of the modulated carrier signal and N is the received noise power. To measure it correctly the channel should be tuned at its centre frequency.

■ **MER**

Modulation error ratio with link margin (LM). The link margin indicates the safety margin respect to the MER level, measured for the degradation of the signal up to the QEF (Quasi Error Free) value. MER represents the ratio between the average power of the DVB signal and the average noise power of the signal constellation.

■ **BER (VBER/CBER)**

It is the system error rate. In a system of digital terrestrial signal reception, after the COFDM decoder two methods of error correction are applied. Each time an error correction is applied on the digital signal, the error rate changes, so if the error rate is measured at the demodulator output or after Viterbi or at the Reed-Solomon decoder output, different error rates are obtained.

■ **CBER**

BER measurement for digital signal before the error correction (BER before FEC).

■ **VBER**

BER measurement for digital signal after error correction (BER after Viterbi).

In order to have a reference about the image quality, it is considered that a system has good quality when it produces less than one un correctable error per hour of transmission. This border is called QEF (Quasi-English Error-Free,) and corresponds to one error rate after Viterbi equal to 2×10^{-4} , or 2 bit errors per 10.000.

This value is marked on the BER measurement bar after Viterbi. This the BER for acceptable signals should be to the left of this mark.

■ **PER**

Measurement associated to VBER. It is an errored packet counter, plus a total time counter, accounting for total packets lost over a given period of time.


A1.1.2
**Digital TERRESTRIAL Television SECOND Generation
 (DVB-T2 standard/COFDM modulation)**

The **DVB-T2** demodulator version allows working with Base (standard version) and Lite (mobile devices version) profiles.

DVB-T2 Parameters

► **Channel Bandwidth**

This parameter affects the frequency separation of the carriers. Its value is 6 MHz, 7 MHz or 8 MHz.

► **Spectral inversion**

It detects if the input signal has been inverted.

► **FFT Mode**

It defines the number of modulation carriers between values 1k, 2k, 4k, 8k, 8k + EXT, 16k, 16k + EXT, 32k, 32k + EXT.

► **Pilot Pattern**

There are several pilot patterns available from PP1 to PP8, which offer different features depending on the type of channel. Each pattern supports time and frequency variations up to the Nyquist limit. Limits depend on certain characteristics such as the receiver operation, if the interpolation is in frequency and time or just in time, and so on.

► **Guard Interval**

This parameter is the dead time between symbols; its purpose is to detect problems due to multipath echoes. This parameter is expressed in terms of the symbol duration: 1/4, 19/256, 1/8, 19/128, 1/16, 1/32, 1/128.

► **Constellation**

COFDM modulation with constellations QPSK, 16QAM, 64QAM, 256QAM.

► **Constellation rotation**

It detects if the constellation is rotated (ON) or not (OFF).

► **Code rate**

It defines the ratio between the number of data bits and the total number of bits transmitted (the difference corresponds to the number of control bits for the detection and recovery of errors).

► **PLP id**

It is the PLP identifier. In the case of PLP Single mode identifies the input stream (0-255). In the case of PLP Multiple mode clients can choose the PLP ID to view.



DVB-T2 Measurements

■ **Power**

Measured power over the entire bandwidth of the channel.

■ **C/N**

(Carrier/Noise) where C is the received power of the modulated carrier signal and N is the noise power received. To measure it correctly the channel should be tuned at its centre frequency.

■ **PLP id**

It is the PLP identifier. In the case of PLP Single mode identifies the input stream (0-255). In the case of PLP Multiple mode clients can choose the PLP ID to view.

■ **MER**

Modulation Error ratio with indication of Link Margin (LM). The link margin indicates the safety margin respect to the MER level, measured for the degradation of the signal up to the QEF (Quasi Error Free) value. MER represents the ratio between the average power of the DVB signal and the average noise power of the signal constellation.

■ **BER (CBER/LBER)**

It is the bit error rate. There are two measurements related to BER:

■ **CBER** (Channel Bit Error Rate):

BER of the signal after the COFDM demodulator and before applying the error correction or FEC (Forward Error Correction).

■ **LBER** (LDPC Bit Error Rate):

BER after been applied the LDPC (Low-density parity-check) error correction.

In a digital signal reception (DVB-T2), after the COFDM decoder two methods of error correction are applied. DVB-T2 uses two codes to correct errors that are the LDPC (Low Density Parity Check) combined with the BCH (Bose-Chaudhuri - Hocquengham) to protect against high levels of signal noise and interferences. Next to the measurement LBER is shown the number of iterations LDPC, that is, the number of times the LDPC error correction decoder has to pass through the signal and the ESR (Error Second Ratio) after 20 seconds of the BCH decoder. This measure indicates the percentage of time with errors after the BCH. Error correction is internal with BCH and external with LDPC. The internal gives basic error correction with minimum load while the external gives error correction with a correction additional charge.

**A1.1.3****Digital SATELLITE Television FIRST Generation
(DVB-S standard/QPSK modulation)****DVB-S Parameters****► Channel Bandwidth**

It displays the channel bandwidth from 1.3 MHz to 60.75 MHz.

► Spectral inversion

It detects if the input signal has been inverted.

NEW! ► Symbol Rate

It represents the number of times that the signal status changes in a period of time. The bandwidth is related to this parameter. The symbol-rate can be set manually.

► Roll-Off Factor

Roll-off factor of Nyquist filter. It indicates the excess of bandwidth over the ideal bandwidth

► Constellation

QPSK modulation for constellations with DVB-S signals.

► Code rate

Also known as Viterbi ratio. It defines the ratio between the number of data bits and the total number of bits transmitted (the difference corresponds to the number of control bits for the error detection and recovery). This value should be between 1/2, 2/3, 3/4, 5/6 and 7/8.



DVB-S Measurements

■ **Power**

Measured power over the entire bandwidth of the channel.

■ **C/N**

Carrier/Noise ratio where C is the received power of the modulated carrier signal and N is the noise power received. To measure it correctly the channel should be tuned at its centre frequency.

■ **MER**

Modulation Error ratio with indication of Link Margin (LM). The link margin indicates the safety margin respect to the MER level, measured for the degradation of the signal up to the QEF (Quasi Error Free) value. MER represents the ratio between the average power of the DVB signal and the average noise power of the signal constellation.

■ **BER (CBER/VBER)**

It is the error rate. There are two measurements related to BER:

■ **CBER** (Channel Bit Error Rate):

BER of the signal after the QPSK demodulator and before applying the error correction or FEC (Forward Error Correction).

■ **VBER** (Viterbi Bit Error Rate):

Measurement of the BER for the digital signal after error correction (BER after Viterbi).

In a system for receiving digital satellite signals (DVB-S) after the QPSK decoder two methods of error correction are applied. Each time an error correction is applied on a digital signal its error rate changes, so if we measure the error rate at the output of the QPSK demodulator or after Viterbi or after the Reed-Solomon output decoder, the error rates obtained are different.

■ **PER**

Measurement associated to VBER. It is an errored packet counter, plus a total time counter, accounting for total packets lost over a given period of time. In DVB-S, CBER is not to measure when PER is evaluated.



A1.1.4

Digital SATELLITE television signal of SECOND generation (DVB-S2 standard/QPSK/8PSK modulation)

DVB-S2 Parameters

- ▶ **Channel Bandwidth**
It displays the channel bandwidth from 1.3 MHz to 60.75 MHz.
- ▶ **Spectral inversion**
It detects if the input signal has been inverted.
- NEW!** ▶ **Symbol Rate**
It represents the number of times the signal status changes in a period of time. The bandwidth is related to this parameter. The symbol-rate can be set manually.
- ▶ **Roll-Off Factor**
Roll-off factor of Nyquist filter. It indicates the excess of bandwidth over the ideal bandwidth.
- ▶ **Constellation**
QPSK or 8PSK modulation for DVB-S2 signal constellation.
- ▶ **Code rate**
It defines the ratio between the number of data bits and the total number of bits transmitted (the difference corresponds to the number of control bits for the error detection and recovery).
- ▶ **PLP id**
It is the PLP identifier. In the case of PLP Single mode identifies the input stream (0-255). In the case of PLP Multiple mode clients can choose the PLP ID to view.
- ▶ **TS clock**
It displays a warning when the TS clock is too high.

DVB-S2 Measurements

- **Power**
Measured power over the entire bandwidth of the channel.
- **C/N**
Carrier/Noise ratio where C is the received power of the modulated carrier signal and N is the noise power received. To measure it correctly the channel should be tuned at its centre frequency.



■ **MER**

Modulation Error ratio. MER represents the ratio between the average power of the DVB signal and the average noise power of the signal constellation.

Next to the MER appears the Link Margin (LM) measurement. The LM is equivalent to the noise margin (NM) and indicates the distance to the QEF (usually defined as a one lost packet per hour). The LM is measured in dB and its value corresponds to the safety margin that separates from the QEF. The greater is the LM better the quality signal. LM of negative values implies no reception or that video errors are starting to appear in the video or audio so clear. LM of 0 (zero) value will display a service and occasionally some artefact.

■ **BER (CBER/LBER)**

It is the bit error rate. There are two measurements related to BER:

■ **CBER** (Channel Bit Error Rate):

BER of the signal after the QPSK/8PSK demodulator and before applying the error correction or FEC (Forward Error Correction).

■ **LBER** (LDPC Bit Error Rate):

BER after applying LDPC error correction (Low-density parity-check).

This standard makes use of two codes to correct errors that are the LDPC (Low Density Parity Check) codes combined with BCH (Bose-Chaudhuri - Hocquengham) to protect against high levels of signal noise and interference. Each time you apply an error correction to the digital signal, the error rate changes, so if we measure the error rate at the output of the QPSK/8PSK demodulator or after LDPC (Low Density Parity Check) decoder or at the BCH decoder output, error rates obtained are different.

Next to the LBER measure appears ESR (Error Second Ratio). This measures indicates the percentage of time with errors after BCH. The error correction is internal with BCH or external with LDPC. The internal error correction provides basic minimum load while the outer error correction is an additional correction with load. It also measures the PER, which is the number of erroneous packets, that is packets received during the measurement time not correctable by the demodulator.

**A1.1.5****Digital CABLE television signal of FIRST generation
(DVB-C standard/QAM modulation)****DVB-C Parameters**

- ▶ **Bandwidth channel**
It displays the channel bandwidth up to 9.2 MHz.
- ▶ **Spectral inversion**
It detects if the input signal has been inverted.
- ▶ **Symbol Rate**
It represents the number of times the signal status changes in a period of time. The bandwidth is related to this parameter.
- ▶ **Roll-Off Factor**
Roll-off factor of Nyquist filter. It indicates the bandwidth excess over the ideal bandwidth.
- ▶ **Constellation**
Modulation used by the carriers. It also defines immunity to the system noise (16QAM, 32QAM, 64QAM, 128QAM and 256QAM).



DVB-C Measurements

■ **Power**

Measured power over the entire bandwidth of the channel.

■ **C/N**

Carrier/Noise ratio where C is the received power of the modulated carrier signal and N is the noise power received. To measure it correctly the channel should be tuned at its centre frequency.

■ **MER**

Modulation Error ratio with indication of Link Margin(LM).The link margin indicates the safety margin respect to the MER level , measured for the degradation of the signal up to the QEF (Quasi Error Free) value. MER represents the ratio between the average power of the DVB signal and the average noise power of the signal constellation.

■ **BER (CBER)**

It is the system error rate. In a digital signal reception via cable, after the QAM demodulator an error correction method is applied, called Reed-Solomon. The error rate after correction is less than the error rate at the output of the QAM demodulator. For this reason the BER is given prior to error correction.

■ **CBER**

BER measurement for digital signal before the error correction (BER before FEC)

■ **PER**

Measurement associated to VBER. It is an errored packet counter, plus a total time counter, accounting for total packets lost over a given period of time.

**A1.1.6****Digital CABLE television signal of SECOND generation
(DVB-C2 standard/COFDM modulation)****DVB-C2 Parameters****► Channel Bandwidth**

It is the channel bandwidth between 6 MHz, 7 MHz and 8 MHz.

► Spectral inversion

It detects if the input signal has been inverted.

► Guard Interval

It corresponds to the dead time between symbols; its purpose is to detect echoes due to multi-paths. This parameter is expressed in terms of the symbol duration: 1/64 or 1/128.

► Constellation

COFDM modulation with constellations QPSK, 16QAM, 64QAM, 256QAM, 1024QAM, 4096QAM. The constellation refers to all the selected PLP data.

► Code rate

It defines the ratio between the number of data bits and the total number of bits transmitted (the difference corresponds to the number of control bits for the error detection and recovery): 2/3, 3/4, 4/5, 5/6, 8/9, 9/10.

► DSLICE id

DSLICE identifier. A DSLICE is a data packet containing a group of several PLPs.

► PLP id

PLP (Physical Layer Pipes) identifier. Layers are used by the system to transmit compressed data such audio, video and more.



DVB-C2 Measurements

■ **Power**

Measured power over the entire bandwidth of the channel.

■ **C/N**

Carrier/Noise ratio where C is the received power of the modulated carrier signal and N is the noise power received. To measure it correctly the channel should be tuned at its centre frequency.

■ **MER**

Modulation Error ratio with indication of Link Margin(LM).The link margin indicates the safety margin respect to the MER level , measured for the degradation of the signal up to the QEF (Quasi Error Free) value. MER represents the ratio between the average power of the DVB signal and the average noise power of the signal constellation.

■ **BER (CBER/LBER)**

System error rate. In DVB-C2 makes use of two codes to correct errors that are the LDPC (Low Density Parity Check) codes combined with BCH (Bose - Chaudhuri - Hocquengham) to protect against high levels of signal noise and interferences. On screen, under LBER measurement the number of iterations LDPC is shown, that is, the number of times the LDPC decoder for error correction has to pass through the signal and the ESR (Error Second Ratio) that indicates the percentage of time with errors after the BCH. Error correction is internal with BCH or external with LDPC. The internal error correction provides basic minimum load while the outer error correction is a correction with additional load. Also the PER measurement is displayed, which is the number of erroneous packets, that is, packets received during the measurement time and not correctable by the demodulator.

■ **CBER** (Channel Bit Error Rate)

BER of the signal after passing through the COFDM demodulator and before applying the error correction or FEC (Forward Error Correction).

■ **LBER** (LDPC Bit Error Rate)

BER of the signal after applying the correction errors LDPC (Low-density parity-check).

**A1.2 ANALOGUE signals****A1.2.1 Terrestrial band****Analogue TV**

In the measurement of analogue signals in terrestrial band, measurements available are:

► **LEVEL**

Indication of the carrier level of the tuned video.

► **C/N**

Ratio between the modulated signal power and noise power for the same bandwidth (depending on TV standard). The modulation error ratio (MER), used in digital systems is analogue to the Signal-Noise (S/N) ratio in analogue systems. The Carrier level is measured by a quasi-peak detector (100 kHz BW). The noise level is measured with an average detector and corrected to refer it to the bandwidth equivalent to channel noise (according to its definition for the TV selected standard).

► **Video/Audio**

Ratio between levels of the video carrier to audio carrier.

Analogue FM

In the analogue FM measurement mode signal, the display acts as an analogue indicator of signal representing the signal at the input. The equipment also demodulates the FM carrier (radio) and can be listened through the speaker.

**A1.2.2****Satellite band****Analogue TV**

In the measurement mode of analogue signals in the satellite band, measures available are:

► **Level**

Measurement of the tuned carrier level.

► **C/N**

Ratio between the modulated signal power and noise power equivalent to the same bandwidth (as TV standard). The modulation error ratio (MER), used in digital systems is analogue to the Signal-Noise (S/N) ratio in analogue systems. The carrier level is measured by a quasi-peak detector (4 MHz BW). The noise level is measured with an average value detector (230 kHz) and corrected to refer it to the channel bandwidth.



ANNEX 2 HOW TO POINT A DISH ANTENNA

A2.1 INSTALLING A SATELLITE DISH USING **HD RANGER 2**

A2.1.1 A bit of history

That's it, a bit of history. First artificial satellite "Sputnik I" was launched 4th of October of 1957 by former Soviet Union. It was about the size of a basketball with a weight below 100 Kgrs but went down in history as the start point for the space age. For three weeks it was transmitting radio signals to the excited scientist on the ground that were gathering fundamental data for the launches to come.

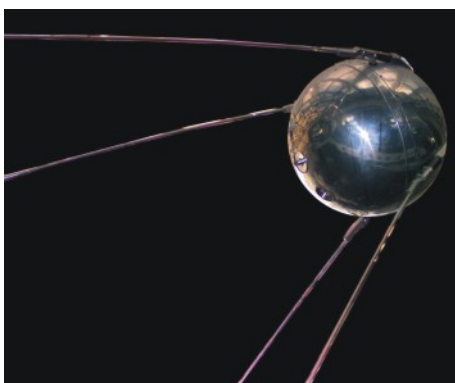


Figure A2.1.

The first telecommunications satellite was Telstar / launched in 1962. Some people refers to Echo / as the World's first in 1960 but it was a passive signal reflector as opposite to Telstar that carried electronics on board like today's satellites. It was also the first to use the modern transponder concept where the satellite "transposes" the up-link frequency (6,390 GHz in Telstar) to another down-link frequency (4,170 GHz in this case). Telstar / trans-mitter power was 3 Watts and the antenna was omnidirectional.



Figure A2.2.



The antenna used to receive the test transmission from Telstar / was a huge horn inside a bubble radome 48 metres high. Only four decades later we have broken all records and we have high power DBS geostationary satellites carrying a lot of digital transponders on board and we start to worry about space junk having thousands of satellites in orbit, plenty of them beyond its useful life. Satellites use highly efficient directional antennas and very high transmitters power, digital transponders, meaning in plain words that we can receive hundreds of TV channels with a small, fix, cheap, 60 cm dish.



Figure A2.3.

Modern broadcast satellites use geostationary orbits. This simply means that they could be seen from the ground hanging in the sky at the same exact position all the time and therefore receiving signals from them does not require complex steering systems. A piece of cake.

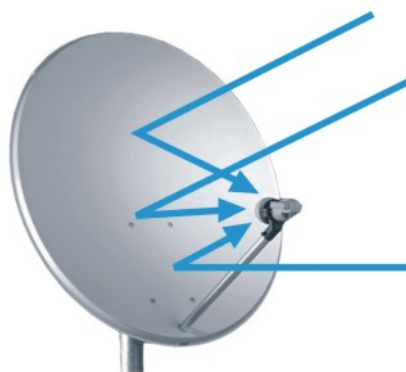
All we need to do to receive their signals with the enormous amount of programs they carry is to set up the satellite receiving antenna properly and to ensure that the signals are received with the proper quality levels...and here is where the **HD RANGER 2** comes into action.

A2.1.2 The basics

A professional installer will instantly tell us from the top of his head what to have in the to-do-list if we want to install a satellite dish properly. Surely the list will require us to select the proper mount kit and dish size from the numerous options available in the market, pick a good location for the dish, free of obstacles to the south (in the north hemisphere) or to the north (in the south hemisphere), etc.



Other than the mechanical bits and pieces the dish is made of two clearly differentiated parts, the reflector and the LNB.

The reflector is passive and simply reflects signals from the satellite in such a way that the beam is collimated to the LNB's mounting point.


Figure A2.4.

The LNB (Low Noise Block-converter) is an active device fruit of the great evolution of RF circuit manufacturing and includes amplifiers, oscillators and frequency converters in a small low cost package. The first section is made of a device called *polarisation shifter* that receives one polarisation or the other depending on the supply voltage given to the LNB. This voltage is necessary to supply the active devices inside the LNB.

Signals broadcast from the satellites use two polarisations simultaneously. These can be LINEAR VERTICAL/HORIZONTAL or CIRCULAR LEFT/RIGHT depending on the type of transmitting antenna used in the satellite. The transponder frequencies for each polarisation are carefully selected to avoid interference to the other polarisation commonly referred to as the crossed polarisation. In general they are imbricate or in other words frequencies used in one polarisation are free in the crossed polarisation and viceversa.

	13 VDC	VERTICAL	CIRCULAR RIGHT
	18 VDC	HORIZONTAL	CIRCULAR LEFT

Modern universal LNB's use mostly linear polarisation and have also the capability to select a different input frequency range depending on a control signal called 22 kHz switching tone which is overlapped with the supply voltage.

SUPPLY VOLTAGE	POLARISATION	BAND
13 VDC	VERTICAL	LOW
18 VDC	HORIZONTAL	LOW
13 VDC + 22 kHz	VERTICAL	HIGH
18 VDC + 22 kHz	HORIZONTAL	HIGH

In other words our LNB will output a different set of satellite transponders depending on which supply voltage we use.



Figure A2.5. An example of LNB(Low Noise Block-converter)

A2.1.3 Coarse dish alignment

We can use different techniques to find out where in the sky the satellite we want is located. They can be anything from a pure guessing game to a sophisticated procedure.

The satellites we are interested in are all positioned in a geostationary orbit above the earth's equator. Each of them has a fix given position in that orbit, something like a street number, that we can know from various sources. Orbital position is an important datum so it is commonly part of the name as well.

Websites like <http://www.lyngsat.com/> or <http://www.satcodx.com/> offer plenty of useful information about the satellites we are talking about.

For example ASTRA 19E refers to ASTRA satellite which is positioned at 19 degrees East in the orbit.

Knowing where we are in terms of latitude and longitude is also easy. We can read that information from a map or even from our car's navigation system if we have one.

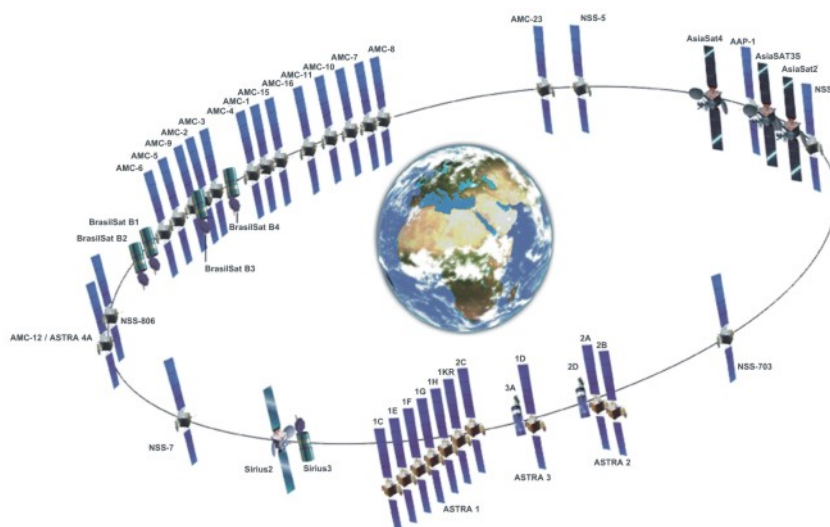


Figure A2.6.

With this information in hand we can calculate the elevation and azimuth we should put on the dish to begin our coarse antenna alignment. There are formulas to do that but some websites are again quite useful. There are also free mobile applications, as Dish Aligner, which calculates the elevation and azimuth and also your current location determined by the GPS of the mobile phone. This one is especially interesting for you can select the satellite you want and then position yourself on a graphical map:

<http://science.nasa.gov/realtime/jtrack/3d/JTrack3D.html/>

For example if we take ASTRA (19E position) and select a location somewhere in Germany:

- Latitude: 50 degrees North
- Longitude: 12 degrees East

The required elevation and azimuth for the dish are:

- Azimuth: 170 degrees
- Elevation: 31 degrees

Elevation must be measured from the horizontal level (may be using an inclinometer) and azimuth from magnetic north (with a compass) there are some applications for smartphones, as mentioned above, that include compass and inclinometer, although it should be noted that the measurements made by mobile phone may be affected by interferences from the antenna itself. It is normally more practical to start with azimuth moving the dish horizontally and then look for the elevation.

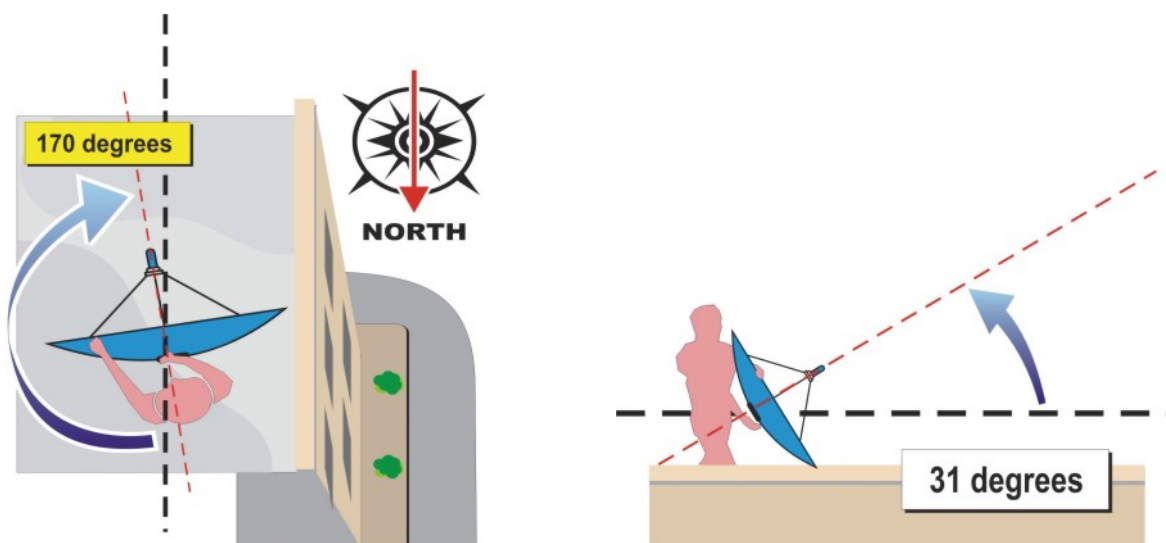


Figure A2.7.



A2.1.4 Knowing what satellite we are on

And the **HD RANGER 2** comes into action. Our dish is now more or less "looking" in the direction where we presume our "bird" is parked. With the **HD RANGER 2** connected to the output of the LNB we select satellite frequency range, antenna alignment mode, span of 200 MHz and set the power supply voltage to one of the possible values. We will take for example 13 VDC, which will take us to the VERTICAL polarisation and LOW band. We can use 80 dBμV for the reference level for we can change that at pleasure depending on the amount of signal we get.

Something will come up on the **HD RANGER 2** screen. It will normally be a weak signal that may come from the desired satellite or from the neighbour ones for the dish is not properly tuned up yet. Swing the dish slightly horizontally and vertically until a decent signal is shown on the screen.

There we have a satellite but which one is it? Most probably the signals we are looking at are digital transponders from the unknown satellite. The **HD RANGER 2** can be operated in frequency or channel modes.

Tune any of those digital channels in frequency mode using the joystick and the markers shown on the screen. The **HD RANGER 2** will tell you what satellite and/or orbital position you are on in a matter of seconds !

If we are unlucky and this is not the satellite we want then we only need to move the dish slightly to pick the signal from the next satellite and repeat the process.

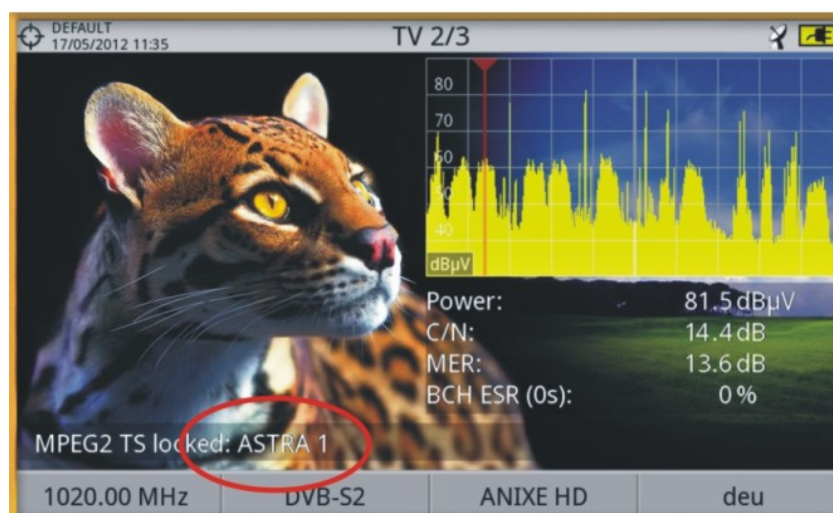


Figure A2. 8.



A2.1.5 Fine tuning the dish

Once we know for certain that we are on *ASTRA 19E* it is time to make fine adjustments to the dish to optimise the alignment. There are two goals to achieve. On the one hand we want to receive the maximum amount of power possible and on the other hand we need to make sure we minimise the interference from the crossed polarisation.

In order to maximise the received signal power we need only to move the dish's azimuth and elevation very carefully ensuring that the display of the spectrum analyser show us the highest values possible.

As you move the dish's position you will see the signal change on the spectrum analyser. Cross-polarisation is adjusted by rotating the LNB on its axis. As you do so you will see on the **HD RANGER 2** screen how the channels interfering from the opposite polarisation go up and down the objective being to leave the LNB in such a position that those channels are as low as possible.

A2.1.6 Testing signal quality

The **HD RANGER 2** is the ideal instrument for quick and effective checks of signal quality not only because it shows all measurements in one single screen but also because the meter doesn't require bothering configuration processes.

► Option 1: Frequency mode

I can tune in frequency mode all channels coming up in the screen, all of them or the most representative ones only. We can move our cursor in frequency mode, in spectrum, through out the band. When we stop on a channel, the meter will acquire all the settings needed to measure the channel without bothering us. Then pressing the measurement button and voilà.

► Option 2: Channel mode

I can select channel mode and a satellite channel table from the list. The **HD RANGER 2** has several of them preloaded but this can be changed using software application.

Once we select the desired table, *ASTRA 19E* in this case, we can browse the channels at once. There are channel tables grouped by polarisation or band or those with all channels in the satellite.



A2.1.7 Look what we've got

The **HD RANGER 2** can also display the free to air programs available in the satellite. That is very practical not so much for the picture itself but for amount of interesting data related to the transponders we can display as well. This includes:

Tuned video information.

- ▶ **TYPE:** Encoding type and video transmission rate.
- ▶ **FORMAT:** Resolution (horizontal x vertical), aspect ratio and frequency.
- ▶ **PROFILE:** Profile level.
- ▶ **PID:** Video program identifier.

Tuned service information.

- ▶ **NETWORK:** Television distribution network (Terrestrial). Orbital position (Satellite).
- ▶ **PROVIDER:** Program provider name.
- ▶ **NID:** Network identifier where the signal is distributed.
- ▶ **ONID:** Identifier of the original network where the signal originates.
- ▶ **TSID:** Transport stream identifier.
- ▶ **SID:** Service Identifier.
- ▶ **MHP:** Interactive service.
- ▶ **LCN:** Logic Channel Number. It is the first logic number assigned to the first channel in the receiver.
- ▶ **+Info:** Additional service information.
- ▶ **FREE/SCRAMBLED:** Free/scrambled transmission.
- ▶ **DTV/DS:** Standard type of transmission.

Tuned audio information.

- ▶ **TYPE:** Type of audio encoding and transmission speed
- ▶ **FORMAT:** Service audio format. Bit depth; sampling frequency; sound reproduction.
- ▶ **LANGUAGE:** Broadcasting language.
- ▶ **PID:** ID of the audio program.

At any time it is possible to display the SERVICE LIST pressing the F3 key and show all the programs and services available within the tuned channel. Selecting one particular channel or service becomes very intuitive.



ANNEX 3 DiSEqC COMMANDS

A3.1 DiSEqC introduction

The **DiSEqC™** (Digital Satellite Equipment Control) is an open protocol created by Eutelsat in 1997 as a communication standard between satellite TV receivers and external peripherals. The DiSEqC™ communications are based on the control commands, which travel combined with power voltage through the coaxial cable that leads the TV signal. The compatible peripherals and receivers detect these commands and react in agreement with such.

A **DiSEqC™** command is a digital command represented by a succession of binary messages: "0" and "1" obtained when modulating the 22 kHz signal.





The **DiSEqC™** usually is used in the satellite TV facilities in order to use different types of switchers, through the coaxial cable that leads the TV signal.

A3.2 To begin: The Universal LNB

The Universal LNB is the simplest and most used LNB. This allows the signal reception coming from one single satellite.

TWIN (2 independent outputs), QUAD (4 independent outputs) and OCTO (8 independent outputs) versions exist in the market. Each output is independent from others and can be connected to a different receiver.

An universal LNB is controlled by means of a power voltage and a 22kHz signal, sent through the RF cable, which allows us to switch between the different bands and polarities, according to the following table:

'Standard'	'TWIN'	'QUAD'*	'OCTO'
			
1 satellite only 1 receiver	1 satellite only 2 receivers	1 satellite only 4 receivers	1 satellite only 8 receivers

Power	Band	Polarization(linear / circular)
13 V	Low	Vertical / Right
18 V	Low	Horizontal / Left
13 V + 22 kHz	High	Vertical / Right
18 V + 22 kHz	High	Horizontal / Left

* Not to confuse with LNB Quattro used in collective facilities.



Note: The LNB accept a very wide range of values for these voltages, usually 10-14.5V (for 13V) and 15.5-20V (for 18V).

In the **HD RANGER 2**, the band and the polarisation selection can be done from different menus (all the different ways indicate dare equivalent):

Menu	Line
External units power supply	13 V, 18 V, 13 V+22kHz, 18 V+22kHz
Configuration	Band: High / Low Polarization: Vertical / Horizontal
DiSEqC	Band: High / Low Polarization: Vertical / Horizontal

A3.3 DiSEqC™ around the world

The use of **DiSEqC™** devices requires to know previously which commands are acknowledged by these ones, since it will determine the wiring diagram of the different elements, as well as the way as they can be controlled. This information must be provided by the device manufacturer.

Following appear the **DiSEqC™** devices more usually installed in the individual and collective facilities.

A3.4 In the individual facilities

A3.4.1 Tone-burst switcher (2 inputs – 1 output)

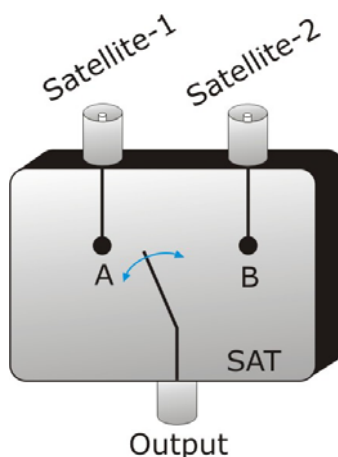


Figure A3. 1.

It is the simpler **DiSEqC™** switcher. This one uses the « SAT A/B » commands and allows to switch between two different Universal LNB:



Command	Selected input
SAT A	Satellite 1
SAT B	Satellite 2

These switchers are transparent to the LNB's (13V, 18V, 22 kHz) commutation commands. Then, once chosen the satellite with the SAT command, the corresponding LNB can be used in a normal way. (see Universal LNB).

Note: There are switchers of 2 inputs and 1 output in which other **DiSEqC™** commands are used, such as POSITION or OPTION, to allow more complex assemblies. Refer to the manufacturer technical information to make sure which are the commands to use.

A3.4.2 Monobloc LNB

A Monobloc LNB is a module composed by 2 Universal LNB connected by a Tone-burst switcher (2 inputs – 1 output). So, it can be managed in the same way.

Also TWIN (2 independent outputs), QUAD (4 independent outputs) and OCTO versions exist (8 independent outputs). In this case, each output is controlled in a different way from the rest.

Important: If it is desired to use Monobloc LNB with **DiSEqC™** switchers, is necessary to make sure that these are compatible.



Figure A3. 2.



A3.4.3 DiSEqC™ Switcher with 4 inputs and 1 output

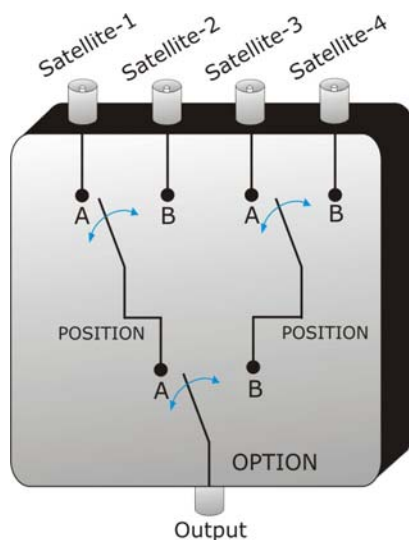


Figure A3. 3.

This switcher allows the signal reception from four independent Universal LNBs (coming from 4 different satellites) on a single receiver.

As it is possible to observe in the attached scheme, there are "OPTION" and "POSITION" switchers in cascade. In order to switch it, will be necessary to send an OPTION command and later a POSITION command that yields, therefore, a total of 4 possibilities.

Note: the manufacturers usually assure the compatibility with the Tone-burst commands (SAT A/B) so that the second stage can be switched as much using a «POSITION A/B» command as using a «SAT A/B» command. This allows us then to use the switcher like a Tone-burst type with 2 inputs and 1 output.

With the **HD RANGER 2**, it is very easy to use this type of switcher, because it incorporates a specific «OPT / POS» command:

HD RANGER 2 Command	Combination of DiSEqC™ Commands send	Selected input
OPT/POS A-A	Option A + Position A	Satellite 1
OPT/POS A-B	Option A + Position B	Satellite 2
OPT/POS B-A	Option B + Position A	Satellite 3
OPT/POS B-B	Option B + Position B	Satellite 4

These switchers are transparent to the LNB's (13V, 18V, 22 kHz) switching commands. Then, once the satellite is chosen by means of the SAT command, the corresponding LNB can be used in a normal way. (see Universal LNB).



A3.5 In the collective facilities

The most frequent satellite signal distribution system in the small collective facilities is the "BIS-switched". This technology implies to use the "Quattro" type LNBs (not to confuse with the "QUAD" type) and also supports specific multiswitches for this type of facilities.

A Quattro-LNB is a LNB with 4 outputs that provides in a separated way the four frequency bands (vertical low, vertical high, horizontal low and horizontal high). These four signal scan then be distributed in the building through multiswitches.



Figure A3. 4.

The signal is distributed in the network by means of **multi-outlet multiswitches**. The number of inputs and outputs is variable. The number of inputs depends on the number of satellites (LNB). Usually a multiswitch includes also an input for the TV terrestrial signal. The number of outputs depends on the number of terminals (receivers) that can be connected to the multiswitch. In addition, **multiswitch in cascade** incorporate pass connectors to be able to distribute the signal and thus to connect several multiswitch in cascade mode and therefore to give access to more users.

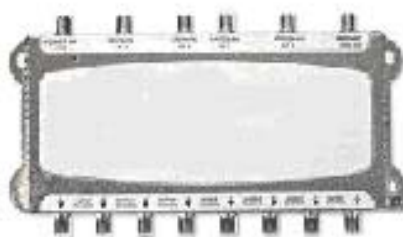


Figure A3. 5.



► **Examples of multiswitch**

	SAT Inputs	TER Inputs	Satellites	Terminals
Multiswitch 9/4	8	1	2	4
Multiswitch 5/16	4	1	1	16
Multiswitch 17/16	16	1	4	16
...

We will not consider the input of terrestrial TV, since this does not take part in the satellite signal. Also the following indicated examples do not show more than a single output. In the case of several outputs, the own operation scheme is reproduced for each one of them, because they are independent of the others.

A3.5.1 **Multiswitch (1 satellite)**

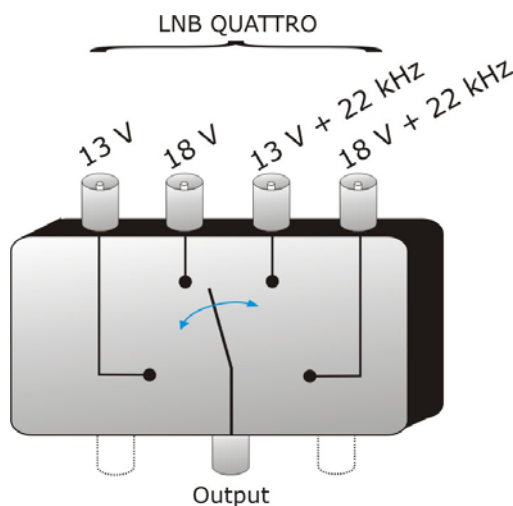


Figure A3. 6.

In the **DiSEqC™** menu of the **HD RANGER 2**, select the band and the polarisations desired and send the SAT A command, as it is indicated in the following table:

Band	Polarization	Command
Low	Horizontal	SAT A
Low	Vertical	SAT A
High	Horizontal	SAT A
High	Vertical	SAT A

Very important: Whenever you wish to change of band or polarisation, it is necessary to send the SAT A command at the same time, since multiswitch does not respond to the habitual switching commands for a LNB (13V/18V/+22kHz): it is necessary the complete **DiSEqC™** sequence to cause the commutation.



A3.5.2 Multiswitch (2 Satellites)

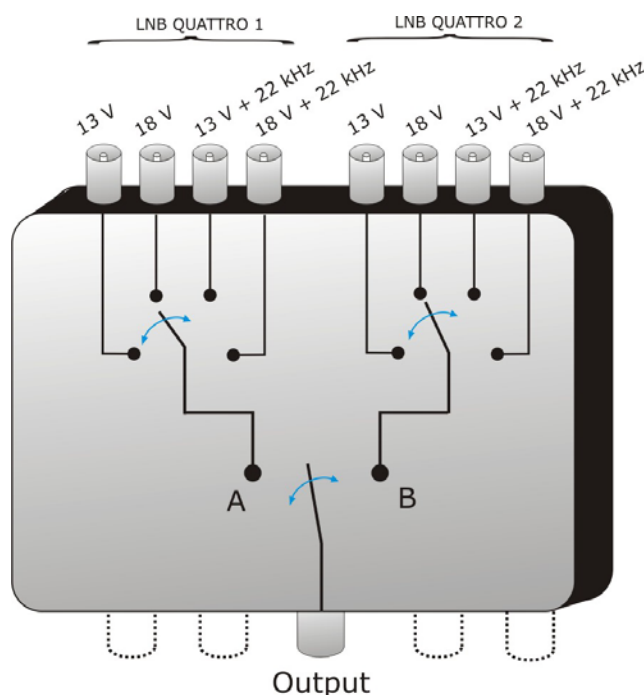


Figure A3. 7.

This type of multiswitch is used usually to switch the Astra 19° and Hotbird 13° satellites.

As in the previous case, if for a certain satellite it is desired to change of band or polarisation, it is not sufficient with changing the corresponding parameter, but in addition it is necessary to send the command SAT A/B corresponding to cause the switching (even if one does not change of satellite).

Band	Polarization	Command	Output
Low	Horizontal	SAT A	Satellite-1
Low	Vertical	SAT A	Satellite-1
High	Horizontal	SAT A	Satellite-1
High	Vertical	SAT A	Satellite-1
Low	Horizontal	SAT B	Satellite-2
Low	Vertical	SAT B	Satellite-2
High	Horizontal	SAT B	Satellite-2
High	Vertical	SAT B	Satellite-2



A3.5.3 Multiswitch (4 Satellites)

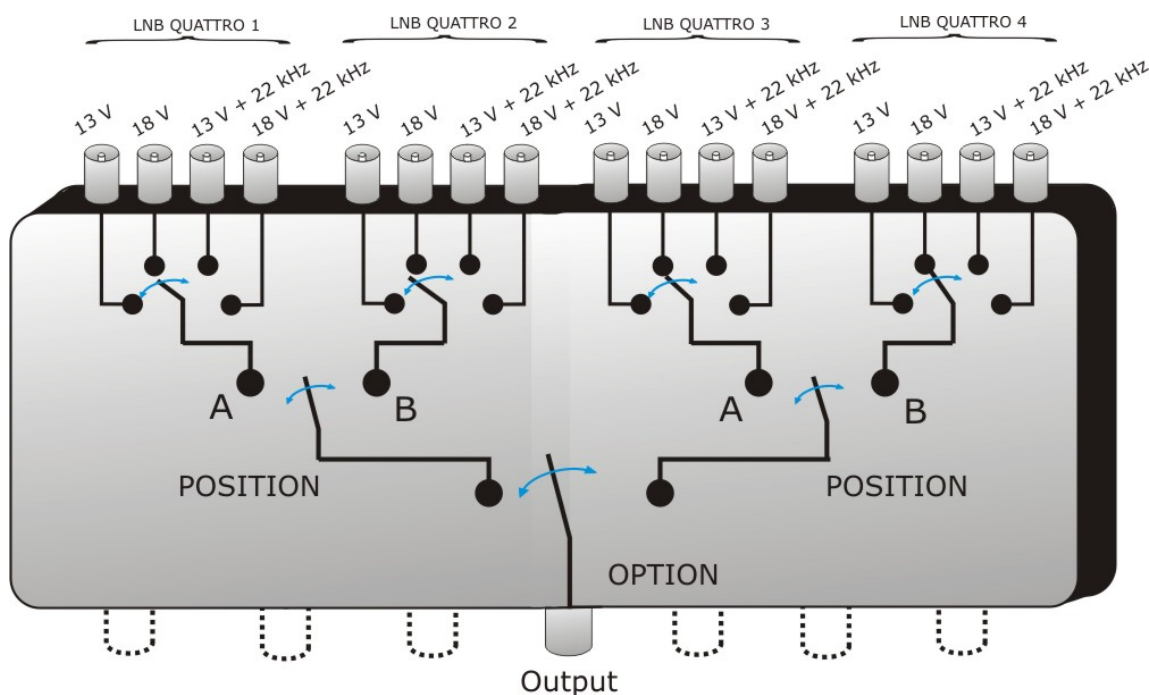


Figure A3. 8.

This type of multiswitch allows to distribute the signal coming from 4 different satellites. It uses a combination of OPTION, POSITION, Polarisation and Band commands. The equipment allows to use easily this type of multiswitch thanks to the « OPT/POS » command, which sends the OPTION et POSITION commands in the necessary order. Like in the others multiswitch, if it's wanted to change of band or polarisation, if the satellite is even he himself, is necessary to send OPT/POS command to cause the commutation again.

Band	Polarization	Command	Satellite
Low	Horizontal	OPT/POS A-A	Satellite-1
Low	Vertical	OPT/POS A-A	Satellite-1
High	Horizontal	OPT/POS A-A	Satellite-1
High	Vertical	OPT/POS A-A	Satellite-1
Low	Horizontal	OPT/POS A-B	Satellite-2
Low	Vertical	OPT/POS A-B	Satellite-2
High	Horizontal	OPT/POS A-B	Satellite-2
High	Vertical	OPT/POS A-B	Satellite-2



Band	Polarization	Command	Satellite
Low	Horizontal	OPT/POS B-A	Satellite-3
Low	Vertical	OPT/POS B-A	Satellite-3
High	Horizontal	OPT/POS B-A	Satellite-3
High	Vertical	OPT/POS B-A	Satellite-3
Low	Horizontal	OPT/POS B-B	Satellite-4
Low	Vertical	OPT/POS B-B	Satellite-4
High	Horizontal	OPT/POS B-B	Satellite-4
High	Vertical	OPT/POS B-B	Satellite-4

A3.6 DiSEqC programs and commands in the **HD RANGER 2**

► Commands

The **Commands** option allows executing any of the following commands:

COMMAND
SAT AB-A
SAT AB-B
SWITCH OPTION AB-A
SWITCH OPTION AB-B
DISABLE LIMITS
LIMIT EAST
LIMIT WEST
DRIVE ROTOR
GOTO
HALT
STORE
RECALCULATE
SWITCH 1A
SWITCH 1B
SWITCH 2A
SWITCH 2B
SWITCH 3A
SWITCH 3B
SWITCH 4A
SWITCH 4B
POWER
RESET
STANDBY



► Programs

There are eight predefined programs that execute basic functions to control an universal switch with two or four inputs. It also has more programs that control installations with 8 or 16 satellite antennas using SPAUN devices or switches Committed/Uncommitted. Whenever a **DiSEqC™** program is sent, the commands that correspond to the equipment status in relation to the Horizontal or Vertical polarization and High or Low frequency band are also sent. This allows assuring that the installation status is the one indicated by the equipment.

DiSEqC Programs		
16x1	LNB01	U1A2A/OpA_PoA
16x1	LNB02	U1A2A/OpA_PoB
16x1	LNB03	U1A2A/OpB_PoA
16x1	LNB04	U1A2A/OpB_PoB
16x1	LNB05	U1B2A/OpA_PoA
16x1	LNB06	U1B2A/OpA_PoB
16x1	LNB07	U1B2A/OpB_PoA
16x1	LNB08	U1B2A/OpB_PoB
16x1	LNB09	U1A2B/OpA_PoA
16x1	LNB10	U1A2B/OpA_PoB
16x1	LNB11	U1A2B/OpB_PoA
16x1	LNB12	U1A2B/OpB_PoB
16x1	LNB13	U1B2B/OpA_PoA
16x1	LNB14	U1B2B/OpA_PoB
16x1	LNB15	U1B2B/OpB_PoA
16x1	LNB16	U1B2B/OpB_PoB
8x1	LNB1	U1A/OptA_PosA
8x1	LNB2	U1A/OptA_PosB
8x1	LNB3	U1A/OptB_PosA
8x1	LNB4	U1A/OptB_PosB
8x1	LNB5	U1B/OptA_PosA
8x1	LNB6	U1B/OptA_PosB
8x1	LNB7	U1B/OptB_PosA
8x1	LNB8	U1B/OptB_PosB
	LNB4	(Sw1A-OptB-PosB)
	LNB8	(Sw1B-OptB-PosB)
	Position AB-A	
	Position AB-A	
	Sat A (Toneburst)	
	Sat B (Toneburst)	
	Switch Uncom.1/AA	
	Switch Uncom.1/AB	
	Switch Uncom.1/BA	
	Switch Uncom.1/BB	
	Switch Uncom.2/AA	
	Switch Uncom.2/AB	
	Switch Uncom.2/BA	
	Switch Uncom.2/BB	



ANNEX 4 REMOTE CONTROL COMMANDS

A4.1 Introduction

The design of **HD RANGER 2** based on a microprocessor, allows data to be exchanged between the equipment and a remote controller (usually a personal computer) via USB. By this way, data can be obtained from the equipment and also control it remotely. These data can be stored and subsequently processed for use in maintenance work. Furthermore, the remote control allows tracking and monitoring installations.

A4.2 Protocol for communication between the **HD RANGER 2 and a PC**

This protocol is controlled by software and is using a virtual serial port over an USB interface. Data and information are exchanged using messages consisting of ASCII alphanumerical characters. This method ensures easy carrying between different types of personal computers.

To activate the virtual serial port, a special driver must be installed. The driver is included with the purchased instrument.

► Connections

The cable between the **HD RANGER 2** and the PC is supplied with the equipment.

You need at least **Windows XP** to work with **HD RANGER 2**. Drivers only work for Windows operative systems. What drivers do is to create a virtual COM port, so the software application can "see" the equipment.



A4.3 **Operation Mode**

The **HD RANGER 2** accepts remote commands at any time, which the instrument is on. That is, it is not necessary to put the instrument in special remote control mode; rather, this mode is selected immediately when it detects a complete command during the time necessary for its execution. The protocol communication is as follows:

- 1.- **HD RANGER 2** transmits a XON code (11H) every second. The aim is to indicate to any possible remote device that the equipment is ready to receive data.
- 2.- At this moment, data streams can be sent it. Each data stream is composed by:
 - a. Stream beginning: '*' (code 2AH).
 - b. Set of characters that describe data message.
 - c. CR (carriage return, code 0DH).
- 3.- Once a data stream has been sent, will be received a XOFF (code 13H) indicating that the transmission is stopped.
- 4.- Next, in case of correct message an ACK (acknowledge, code 06H) is expected or a NAK (not acknowledge, code 15H) in the opposite case.
- 5.- If the sent message requires answers it will be sent at this moment.
- 6.- Once completed the data stream transmission, the **HD RANGER 2** will send a XON (code 11H) indicating that already it is prepared to receive a new data stream.

A typical communication chronogram would be as follows:

PC (REMOTE CONTROLLER)		HD RANGER 2
1)		XON
2)	*?TV<CR>	
3)		XOFF
4)		ACK 5
5)		*TV0<CR>
6)	wait...	
7)		XON

(all characters are transmitted in ASCII code).



Commands should always be sent in capital letter and cannot be edited online, i.e., once a character is received it is stored in the **HD RANGER 2** buffer and cannot be rectified by sending an erase code.

Commands in remote control are divided into two groups, orders and interrogations. Orders modify a variable or the equipment status. Interrogations respond with information concerning equipment status or the value of a variable. For interrogative command, it is necessary to add the character '?' after the character '*'.

A4.4 **Virtual Serial Port Configuration**

In order to ensure error-free communication between the computer and the **HD RANGER 2** you must programme following communication parameters into the control console via USB:

Rate:	115200 bits/s
Data bits:	8 bits
Parity:	No
Stop Bits:	1



A4.5 Remote commands table

Remote Commands	Short Description
BATTERY	It provides information about the battery actual status
CAPTURE	It makes and read screen captures
CAPTURE READ	It reads a file with the current screen capture
DISEQC	It gets a list of available diseqc programs and can send a specific one
EQUIPMENT POWER OFF	It shutdowns the equipment
EQUIPMENT SN	It provides the serial number of the equipment
INSTALLATION	It provides information about all the installations
INSTALLATION CURRENT	It provides information about the current installation
INSTALLATION CURRENT CLEAR	It removes all files of the current installation. The installation itself is not remove, only its contents
INSTALLATION CURRENT REMOVE	It removes the files of the same type in the current installation
INSTALLATION FILE	It reads an "xml" file of the current installation and sends it to a PC
INSTALLATION FILE ZIP	It reads an "xml" file of the current installation and sends all the installation files zipped to a PC
INSTALLATION PC FILE	It sends a file of the current installation to the PC
INSTALLATION PC ZIP	It sends a file from a PC to the equipment zipped with all files of the installation
INSTALLATION REMOVE	It removes an installation
IP CONFIG	It sets IPTV parameters
LNB	It provides / configures the LNB output
LTE	It provides / configures the LTE filter status
MEASURE	It provides information of all active measurements
MODE	It provides / sets the operation mode of the equipment
NAM	It provides the program name
PRINT SCREEN	It makes a screenshot in PNG format
PSI	It provides / configures services
PSI SERVICE	It provides / configures services
RTC	It provides / sets date and time
SIGNAL	It provides / configures the signal type
SPECTRUM	It configures the span and/or the reference level
TS MUX CONTROL	It selects the input and output transport stream
TUNE	It provides / configures the frequency
TUNE CH	It provides / configures the channel
TUNE PLAN	It configures a channel plan
VER	It provides the version of the main software application
VIDEO	It configures the video source



Name	BATTERY		
Description:	It provides information about the battery current status.		
Question:	*?BATTERY <i>parameter</i>		
Response:	*BATTERY <i>parameter_resp</i>		
	<i>parameter</i>	<i>parameter_resp</i>	Description <i>parameter_resp</i>
	<empty>	LEVEL, PERCENT, TIME, SMART BATTERY, CHARGER	It provides a complete set of information about the battery current status (see the following parameters for an explanation).
	LEVEL	XXXXmV	It provides the voltage level in mV.
	PERCENT	XX	It provides the charge remaining as a percentage.
	TIME	XXmin	Provides an estimation of the remaining time of functioning. The time is given in minutes. Message CHARGER_CONNECTED will be the answer if the charger is connected.
	SMART_BATTERY	XXX	It answers YES or NO depending if there is a smart battery or not.
	CHARGER	XXX	It answers ON or OFF depending if charger is connected or not.

Name	CAPTURE	
Description	It builds a file with the current screen data in xml or png format.	
Configuration	*CAPTURE FORMAT=format	
	<i>format</i>	Description <i>format</i>
	PNG	It makes a screen capture in PNG format.
	XML	It makes a screen capture in xml format.
Note:	Before saving the file, this command deletes the previous made capture.	



Name	CAPTURE READ	
Description:	It reads a file with the current screen capture (see command CAPTURE)	
Question:	*?CAPTURE BLOCK= <i>bbbb</i> <CR>	
Response:	*CAPTURE SIZE= <i>size</i>	
	<i>bbbb</i>	Description <i>bbbb</i>
	<i>nnn</i>	<i>bbbb</i> is the number of bytes sent in each data block. The file data is sent in blocks, every block is confirmed with an ACK. The value ' <i>bbbb</i> ' can be a decimal one (if starts by 0 to 9, like 1234) or in hex format, if started by "0x" followed by hex characters (like in 0x3FF).
	<i>size</i>	Description <i>size</i>
	<i>nnn</i>	Size in bytes (<i>nnn</i>) of file. Decimal value.
Protocol:	PC→*?CAPTURE BLOCK= <i>bbbb</i> <cr> RANGER→ Xoff It checks if file exists then it sends ACK, otherwise it sends NACK + Xon and aborts the command. RANGER→*CAPTURE SIZE= <i>size</i> . RANGER→Xon. PC→ ACK. RANGER→Xoff. RANGER→block1 + crc (1 byte) + Xon. PC→ It Calculates the block crc if correct send ACK. RANGER→ If detect ACK then send Xoff. RANGER→block2 + crc2 (1 byte) + Xon. PC→ It Calculates the block crc if correct send ACK. Until last block.	

Name	DISEQC	
Description:	It gets a list of available diseqc programs and can send a specific one.	
Question:	*?DISEQC PROGRAMS<CR>	
Response:	*DISEQC PROGRAMS= PROGRAMS= <i>nn</i> <i>program_name</i>	
	Response	Description <i>Inb_resp</i>
	PROGRAMS= <i>nn</i>	<i>nn</i> is the number of available programs
	<i>program_name</i>	the name description of the available programs
Configuration:	*DISEQC PROGRAM= <i>program_name</i>	
	Program_name	Description <i>program_name</i>
	POS_AB_A POS_AB_B etc...	It sends the diseqc program name. This program must exist in the current installation. Check the available programs with *?DISEQC PROGRAMS



Name	EQUIPMENT POWER OFF
Description	It shutdowns the equipment
Order	*EQUIPMENT POWEROFF

Name	EQUIPMENT SN
Description	It provides the serial number of the equipment
Question	*?EQUIPMENT SN
Response	*EQUIPMENT SN = <i>equipment_resp</i>
	<i>equipment_resp</i> Description <i>equipment_resp</i>
	nnn Unique numeric code that identifies the equipment

Name	INSTALLATION
Description	It provides information about all the installations
Question	*?INSTALLATION <i>install</i>
Response	*INSTALLATION <i>install_resp</i>
	<i>install</i> <i>install_resp</i> Description <i>install_resp</i>
	<empty> NUMBER=nn Number (nn) of installations
	CURRENT NAME=name Name (name) of current installation
	TER-CH=nn Number (nn) of terrestrial channel plans in the current installation
	SAT-CH=nn Number (nn) of satellite channel plans in the current installation
	DISEQC=nn Number (nn) of DISEQC programs in the current installation
	SCREEN=nn Number (nn) of print screens in the current installation
	DATALOGGER=nn Number (nn) of dataloggers in the current installation
	SP=nn Number (nn) of spectrum captures in the current installation
	MER=nn Number (nn) of captures MERxcarrier in the current installation
	ECHOES=nn Number (nn) of echo captures in the current installation
	CONSTELLATION=nn Number (nn) of constellation captures in the current installation
	NUMBER=nn NAME=name Name of the installation with index "nn"



Name	INSTALLATION CURRENT		
Description	It provides information about the current installation		
Question	*?INSTALLATION CURRENT <i>current=nn</i>		
Response	*INSTALLATION NAME= <i>current_resp</i>		
	<i>current</i>	Description <i>nn</i> (decimal value)	Description <i>current_resp</i>
	<empty>	<empty>	Available data from the current installation
	TER-CH	Terrest. channel plan index	Terrestrial channel plan name with "nn" index
	SAT-CH	Sat. channel plan index	Satellite channel plan name with "nn" index
	DISEQC_PROGRAM	DISEQC program index	DISEQC program name with "nn" index
	PNG	Print screen file index	Print screen file name with "nn" index
	DATALOGGER	Datalogger index	Datalogger name with "nn" index
	SPECTRUM	Capture index	Spectrum capture name with "nn" index
	CONSTELLATION	Constellation index	Constellation capture name with "nn" index
	ECHOES	Capture index	Echo capture name with "nn" index
	MER	Capture index	MER capture name with "nn" index
	NUMBER	Installation index	Installation name with "nn" index

Name	INSTALLATION CURRENT CLEAR
Description	It removes all files of the current installation. The installation itself is not remove, only its contents
Order	*INSTALLATION CURRENT CLEAR



Name	INSTALLATION CURRENT REMOVE	
Description	It removes the files of the same type in the current installation	
Order	*INSTALLATION CURRENT REMOVE <i>tag=name</i>	
	<i>tag</i>	Description <i>tag</i>
	SPECTRUM	Spectrum capture file
	TER-CH	Terrestrial channel plan file
	SAT-CH	Satellite channel plan file
	DISEQC_PROGRAM	DISEQC program file
	PNG	Print screens file
	CONSTELLATION	Constellation capture file
	ECHOES	Echo capture file
	MER	MER x carrier capture file
	DATALOGGER	Datalogger file
	SPECTROGRAM	Spectrogram file
	MEROGRAM	Merogram file
	TS	Transport stream file
	<i>name</i>	Description <i>name</i>
	<empty>	It removes all files belonging to the same type, which is determined by the <i>tag</i>
	abcd	It removes the file with name ("abcd") of the type indicated by the <i>tag</i>



Name	INSTALLATION FILE	
Description	It reads an "xml" file of the current installation and sends it to a PC	
Question	*?INSTALLATION CURRENT <i>tag=name</i> BLOCK= <i>bbbb</i>	
Response	*INSTALLATION SIZE= <i>size</i>	
	<i>tag</i>	Description <i>tag</i>
	SPECTRUM	It reads spectrum captures in the current installation
	TER-CH	It reads terrestrial channel plans in the current install
	SAT-CH	It reads satellite channel plans in the current install
	DISEQC_PROGRAM	It reads DISEQC programs in the current installation
	PNG	It reads print screens in the current installation
	CONSTELLATION	It reads constellation captures in the current install
	ECHOES	It reads echo captures in the current installation
	MER	It reads MER x carrier captures in the current install
	DATALOGGER	It reads datalogger in the current installation
	SPECTROGRAM	It reads spectrograms in the current installation
	MEROGRAM	It reads merograms in the current installation
	TS	It reads transport stream in the current installation
	<i>name</i>	Description <i>name</i>
	abcd	Name ("abcd") of the capture.
	<i>bbbb</i>	Description <i>bb</i>
	nnn	Byte (nnn decimal) size to which the file will be divided to be send
	<i>size</i>	Description <i>size</i>
	nnn	File byte (nnn decimal) size when send



Name	INSTALLATION FILE ZIP	
Description	It reads an "xml" file of the current installation and sends all the installation files zipped to a PC	
Question	*?INSTALLATION CURRENT ZIP BLOCK= <i>bbbb</i>	
Response	*INSTALLATION SIZE= <i>size</i>	
	<i>bbbb</i>	Description <i>bb</i>
	<i>nnn</i>	Byte (<i>nnn</i> decimal) size to which the file will be divided to be send
	<i>size</i>	Description <i>size</i>
	<i>nnn</i>	File byte (<i>nnn</i> decimal) size when send

Name	INSTALLATION PC FILE	
Description	It sends a file of the current installation to the PC.	
Order	*INSTALLATION CURRENT tag= <i>name</i> SIZE= <i>size</i> BLOCK= <i>bbbb</i>	
	<i>tag</i>	Description <i>tag</i>
	SPECTRUM	Spectrum captures files to the current installation
	TER-CH	Terrestrial channel plans files to the current install
	SAT-CH	Satellite channel plans files to the current instal.
	DISEQC_PROGRAM	DISEQC programs files to the current installation
	PNG	Print screens files to the current installation
	CONSTELLATION	Constellation captures files to the current install
	ECHOES	Echo captures files to the current installation
	MER	MER x carrier captures files to the current install
	DATALOGGER	Datalogger files to the current installation
	SPECTROGRAM	Spectrograms files to the current installation
	MEROGRAM	Merograms files to the current installation
	TS	Transport stream files to the current installation
	<i>name</i>	Description <i>name</i>
	<i>abcd</i>	Capture name ("abcd").
	<i>size</i>	Description <i>size</i>
	<i>nnn</i>	File byte (<i>nnn</i> decimal) size when send
	<i>bbbb</i>	Description <i>bbbb</i>
	<i>nnn</i>	Byte (<i>nnn</i> decimal) size to which the file will be divided to be send



Name	INSTALLATION PC ZIP	
Description	It sends a file from a PC to the equipment zipped with all files of the installation	
Order	*INSTALLATION ZIP NAME= <i>name</i> SIZE= <i>size</i> BLOCK= <i>bbbb</i>	
	<i>name</i>	Description <i>name</i>
	abcd	Name ("abcd") of the installation
	<i>size</i>	Description <i>size</i>
	nnn	Byte (nnn decimal) size of the file when send
	<i>bbbb</i>	Description <i>bbbb</i>
	nnn	Byte size (nnn decimal) of blocks that will be send from the ZIP file

Name	INSTALLATION REMOVE	
Description	It removes a installation	
Order	*INSTALLATION NAME= <i>name</i> REMOVE	
	<i>name</i>	Description <i>name</i>
	abcd	Installation name ("abcd")

Name	IP CONFIG		
Description:	It provides / configures the IP parameters such as: DHCP option, MAC address, IP address and subnet MASK.		
Question:	*?IP <i>ip_option</i>		
Response:	*IP <i>ip_option=ip_resp</i>		
	<i>ip_option</i>	<i>ip_response</i>	
	<empty>	MAC, DHCP, IP and MASK	
	MAC	MAC address	
	DHCP	DHCP protocol enabled / disabled	
	ADDRESS	IP address	
Configuration:	MASK	Subnet MASK	
	<i>ip_option</i>	<i>ip_config</i>	Description <i>lte_conf</i>
	DHCP	ON	It enables DHCP protocol
		OFF	It disables DHCP protocol
	ADDRESS	www.xxx.yyy.zzz	It sets IP address
	MASK	www.xxx.yyy.zzz	It sets Subnet mask



Name	LNB		
Description	It provides / configures the LNB output		
Question	*?LNB <i>Inb</i>		
Response	*LNB <i>Inb</i> = <i>Inb_resp</i>		
	<i>Inb</i>	Description <i>Inb_resp</i>	
	OUTPUT	Current selected output	
	ENABLE	LNB enable (ON) or disabled (OFF)	
	VOLTAGE	Last measurement of the LNB output voltage	
	CURRENT	Last measurement of the LNB output current	
	AVAILABLE	Available output with the current configuration	
	UNDERVOLTAGE	Under voltage alarm	
	OVERCURRENT	Overvoltage alarm	
SHORTCIRCUIT	Short circuit alarm		
DRAINLED	LED DRAIN lit (ON) or not (OFF)		
Configuration	*LNB <i>Inb</i> = <i>Inb_conf</i>		
	<i>Inb</i>	<i>Inb_conf</i>	Description <i>Inb_conf</i>
	ENABLE	ON	Enables the LNB.
	ENABLE	OFF	Disables the LNB.
	OUTPUT	nnn	LNB output voltage (<i>nnn</i> must be one of the available options seen on the command *?LNB AVAILABLE)



Name	LTE	
Description	It provides/configures the LTE filter status	
Question	*?LTE	
Response	*LTE <i>lte_resp</i>	
	<i>lte_resp</i>	Description <i>lte_resp</i>
	ON	LTE filter enabled
	OFF	LTE filter disabled
Configuration	*LTE <i>lte_conf</i>	
	<i>lte_conf</i>	Description <i>lte_conf</i>
	ON	It enables the LTE filter
	OFF	It disables the LTE filter

Name	MEASURE	
Description	It provides information of all active measurements	
Question	*?MEASURE <i>measure</i>	
Response	*MEASURE <i>measure=measure_resp units</i>	
	<i>measure</i>	Description <i>measure_resp</i>
	<empty>	All the active measures
	POWER	Digital channel power
	LEVEL	Analogue channel level
	C/N	C/N of the measured channel (dB)
	V/A	Video/Audio carrier ratio
	MER	MER measurement value
	CBER	CBER measurement value
	VBER	VBER measurement value
	LBER	LBER measurement value
	LM	Link Margin value
	=	Measurement within scale
	<	Measurement under the value shown
	>	Measurement over the value shown
	<i>units</i>	Description <i>units</i>
	dB	Measurement units for C/N, V/A, MER
	dBm/dBuV/dBmV	Measurement units for POWER, LEVEL



Name	MODE	
Description	It provides/sets the operation mode of the equipment	
Question	*?MODE	
Response	*MODE <i>mode_resp</i>	
	<i>mode_resp</i>	Description <i>mode_resp</i>
	TV	TV mode
	TV+SP+MEASURE	TV mode with spectrum and measurements
	TV+PARAMETERS	TV mode with TS parameters
	SP	Spectrum mode
	SP+MEASURE	Spectrum mode with measurement
	SP+MEASURE+TV	Spectrum mode with TV and measurement
	MEASURE	Measurement mode.
	MEASURE+TV+SP	Measurement mode with TV and spectrum
	MEASURE+PARAMETERS	Measurement mode with demodulator parameters
	ECHOES	Echoes tool
	CONSTELLATION	Constellation tool
Configuration	*MODE <i>mode_conf</i>	
	<i>mode_conf</i>	Description <i>mode_conf</i>
	TV	TV mode
	TV+SP+MEASURE	TV mode with spectrum and measurements
	TV+PARAMETERS	TV mode with TS parameters
	SP	Spectrum mode
	SP+MEASURE	Spectrum mode with measurement
	SP+MEASURE+TV	Spectrum mode with TV and measurement
	MEASURE	Measurement mode
	MEASURE+TV+SP	Measurement mode with TV and spectrum
	MEASURE+PARAMETERS	Meas. mode with demodulator parameters
	ECHOES	Echoes tool
	CONSTELLATION	Constellation tool

Name	NAM	
Description	It provides the program name	
Question	*?NAM	
Response	*NAM <i>nam_resp</i>	
	<i>nam_resp</i>	Description <i>nam_resp</i>
	abc	It provides the program name "abc"



Name	PRINT SCREEN	
Description	It makes a screenshot in PNG format	
Configuration	*PRINT SCREEN= <i>printscreen_conf</i>	
	<i>=printscreen_conf</i>	Description <i>=printscreen_conf</i>
	<empty>	It gives a name by default
	=abc	It gives the name "abc"

Name	PSI	
Description	It provides / sets services	
Question	*?PSI	
Response	*PSI STATUS= <i>status_resp</i> NUMBER= <i>number_resp</i> ONID= <i>onid</i> NID= <i>nid</i> TSID= <i>tsid</i> NETWORK= <i>name</i>	
	<i>status_resp</i>	Description <i>status_resp</i>
	ACQUIRED	Acquired services of channel (in this case, service information is not shown).
	IN_PROGRESS	Acquiring services of channel (in progress).
	FAIL	Acquisition failed.
	STOPPED	Acquisition stopped.
	<i>number_resp</i>	Description <i>number_resp</i>
	<i>nn</i>	Number of services
	<i>Services information</i>	Description <i>service information</i>
	ONID	Original Network id
	NID	Network id
	TSID	Transport Stream id
	NETWORK	Name of service network
Configuration:	*PSI SERVICE= <i>index_conf</i> [AUDIO= <i>index_audio</i>]	
	<i>index_conf</i>	Description <i>index_conf</i>
	<i>nn</i>	Index of service. Selecting service from the index service.
	<i>index_audio</i>	Description <i>index_audio</i>
	<i>nn</i>	Index of audio. OPTIONAL: [AUDIO=xx].
Configuration:	*PSI SID= <i>service_id_conf</i> [AUDIO= <i>index_audio</i>]	
	<i>service_id_conf</i>	Description <i>service_id_conf</i>
	<i>nn</i>	Service id. Selecting service from the service id.
	<i>index_audio</i>	Description <i>index_audio</i>
	<i>nn</i>	Index of audio. OPTIONAL: [AUDIO=xx].



Name	PSI SERVICE	
Description	It provides / configures services	
Question	*?PSI SERVICE= <i>service</i>	
	<i>service</i>	Description <i>service</i>
	CURRENT	Current service
	<i>nn</i>	Index of service
Response	*PSI SERVICE= <i>ss</i> NAME= <i>name</i> PROVIDER= <i>provider</i> SID= <i>sid</i> TYPE= <i>type</i> SCRAMBLED= <i>lcn</i>	
	<i>response</i>	Description <i>response</i>
	<i>ss</i>	CURRENT for current service or index of service.
	<i>name</i>	Service name
	<i>provider</i>	Service provider
	<i>sid</i>	Service id
	<i>type</i>	Type of service (radio/tv/data)
	<i>scrambled</i>	Service (service scrambled) or No (service free)
	<i>LCN</i>	Logical channel number
Question	*?PSI SERVICE=CURRENT AUDIO	
Response	*PSI NUMBER= <i>nn</i> AUDIO= <i>aa</i> PID= <i>pid</i> BITRATE= <i>bitrate</i> TYPE= <i>type</i> FORMAT= <i>format</i> LANGUAGE= <i>language</i>	
	<i>response</i>	Description <i>response</i>
	<i>nn</i>	Audios number
	<i>aa</i>	Index of audio
	<i>pid</i>	PID number
	<i>bitrate</i>	Bitrate in kbps
	<i>type</i>	Type of audio (MPEG-1, DD, DD+...)
	<i>format</i>	Format of audio (Stereo/Mono...)
	<i>language</i>	Language of audio
Question	*?PSI SERVICE= <i>service</i> AUDIO	
Response	*PSI NUMBER= <i>nn</i>	
	<i>response</i>	Description <i>response</i>
	<i>nn</i>	Audios number
Question	*?PSI SERVICE= <i>service</i> AUDIO= <i>aa</i>	
Response	*PSI NUMBER= <i>nn</i> AUDIO= <i>aa</i> PID= <i>pid</i> TYPE= <i>type</i> LANGUAGE= <i>language</i>	
	<i>response</i>	Description <i>response</i>
	<i>nn</i>	Audios number
	<i>aa</i>	Index of audio
	<i>pid</i>	PID number
	<i>type</i>	Type of audio (MPEG-1, DD, DD+...)
	<i>language</i>	Language of audio



Question	*?PSI SERVICE=CURRENT VIDEO	
Response	*PSI PID= <i>pid</i> BITRATE= <i>bitrate</i> TYPE= <i>type</i> RESOLUTION= <i>resolution</i> FORMAT= <i>format</i> FRAME= <i>frame</i> PROFILE= <i>profile</i>	
	<i>response</i>	Description <i>response</i>
	<i>pid</i>	PID number
	<i>bitrate</i>	Bitrate in kbps
	<i>type</i>	Type of video (MPEG-2,H264,...).
	<i>resolution</i>	Resolution of video.
	<i>format</i>	Format of video (16:9/4:3...)
	<i>frame</i>	Freq
	<i>profile</i>	Profile level
Question	*?PSI SERVICE=xx VIDEO	
Response	*PSI PID= <i>pid</i> TYPE= <i>type</i>	
	<i>response</i>	Description <i>response</i>
	<i>pid</i>	PID number
	<i>type</i>	Type of audio (MPEG-2, H264,...)
Question	*?PSI SERVICE= <i>service</i> DATA	
Response	*PSI NUMBER= <i>nn</i>	
	<i>response</i>	Description <i>response</i>
	<i>nn</i>	Number of datas
Question	*?PSI SERVICE= <i>service</i> DATA= <i>dd</i>	
Response	*PSI NUMBER= <i>nn</i> DATA= <i>dd</i> PID= <i>pid</i> TYPE= <i>type</i>	
	<i>response</i>	Description <i>response</i>
	<i>nn</i>	Number of datas
	<i>dd</i>	Index of data
	<i>pid</i>	PID number
	<i>type</i>	Type of data (txt, subtitles, data...)



Name	RTC		
Description	It provides/sets date and time		
Question	*?RTC <i>rtc</i>		
Response	*RTC <i>rtc=rtc_resp</i>		
	<i>rtc</i>	<i>rtc_resp</i>	Description <i>rtc_resp</i>
	TIME	DATE=date	It shows current date, time and date format
	DATE	TIME=time	
	FORMAT	FORMAT=format hh:mm:ss DD/MM/YYYY DD/MM/YY MM/DD/YYYY YYYY/MM/DD	Hours:minutes:seconds day/month/year day/month/year (last two digits) month/day/year year/month/day Selected format
Configuration	*RTC <i>rtc= rtc_conf</i>		
	<i>rtc</i>	<i>rtc_conf</i>	Description <i>rtc_conf</i>
	TIME	hh:mm:ss	Hours:minutes:seconds
	DATE		Date according to the selected format
	FORMAT	DD/MM/YYYY DD/MM/YY MM/DD/YYYY YYYY/MM/DD	day/month/year day/month/year (last two digits) month/day/year year/month/day



Name	SIGNAL		
Description	It provides/configures the signal type		
Question	*?SIGNAL <i>signal</i>		
Response	*SIGNAL <i>signal=signal_resp</i>		
	<i>signal</i>	Description <i>signal_resp</i>	
	TYPE	Signal standard type	
	CR	Current code rate	
	BANDWIDTH	Signal bandwidth	
	SR	Signal symbol rate	
	SP	Spectral inversion enabled (ON) or disabled (OFF)	
	MODE	Measurement of the FFT in a COFDM modulation	
	GI	Measurement of the guard interval	
	CONSTELLATION	Constellation type	
	HIERARCHY	DVB-T hierarchy	
	COLOR	Type of colour coding	
	STANDARD	Analogue standard type	
RATE	Field frequency		
Configuration	*SIGNAL <i>signal=signal_config</i>		
	<i>signal</i>	<i>signal_config</i>	Description <i>signal_config</i>
	TYPE	DVB-T	Terrestrial signal standard
		DVB-C	Cable signal standard
		ANALOG	Analogue signal standard
		DVB-S	Satellite signal standard
		DVB-S2	Satellite signal standard (2d generation)
	COLOR	PAL	PAL coding colour
		NTSC	NTSC coding colour
		SECAM	SECAM coding colour
	STANDARD	BG	Analogue standard type BG
		DK	Analogue standard type DK
		I	Analogue standard type I
		N	Analogue standard type N
		M	Analogue standard type M
		L	Analogue standard type L



Name	SPECTRUM		
Description	It configures the <i>span</i> and/or the reference level		
Configuration	*SPECTRUM <i>spectrum=spectrum_config</i>		
	<i>spectrum</i>	<i>spectrum_config</i>	Description <i>spectrum_config</i>
	REF	nn.n	Value (nn.n) of the reference level in units of the current band
	SPAN	nnnF	nnn= span value number F= Order of magnitude for the span. F values: <empty> = 1 K= 1 x 10 E3 M=1 x 10 E6 G=1 x 10 E9

Name	TS MUX CONTROL	
Description:	It selects the input and output transport stream	
Configuration:	*TSMUX, DECODER= <i>decoder_input</i> , OUT= <i>asi_out</i>	
	<i>decoder_input</i>	Description <i>decoder_input</i>
	DEMOMOD	Input from demodulators.
	ASI_IN	Input from ASI_IN.
	IPTV	Input from IPTV (when equipment is on a IPTV mode I.E. IPTV+TV).
	<i>asi_out</i>	Description <i>asi_out</i>
	OFF	No ASI output signal.
	DEMOMOD	Output from demodulators.
	ASI_IN	Output from ASI_IN.
	IPTV	Output from IPTV (when equipment is on a IPTV mode I.E. IPTV+TV).



Name	TUNE	
Description	It provides/configures the frequency	
Question	*?TUNE	
Response	*TUNE BAND= <i>band_resp</i> FREQ= <i>freq_resp</i>	
	<i>band_resp</i>	Description <i>band_resp</i>
	TER	Terrestrial band
	SAT	Satellite band
	<i>freq_resp</i>	Description <i>freq_resp</i>
	nnnK	nnn=Number value for the frequency; K= (kHz)
Configuration	*TUNE BAND= <i>band_conf</i> FREQ= <i>freq_conf</i>	
	<i>band_conf</i>	Description <i>band_conf</i>
	TER	Terrestrial band
	SAT	Satellite band
	<i>freq_conf</i>	Description <i>freq_conf</i>
	nnnF	nnn= Number value for the frequency F= Order of magnitude for the frequency F values: <empty> = 1 K= 1 x 10 E3 M=1 x 10 E6 G=1 x 10 E9



Name	TUNE CH	
Description	It provides/configures the channel	
Question	*?TUNE CH	
Response	*TUNE BAND= <i>band_resp</i> PLAN= <i>plan_resp</i> CH= <i>ch_resp</i>	
	<i>band_resp</i>	Description <i>band_resp</i>
	TER	It means that channel belongs to the terrestrial band
	SAT	It means that channel belongs to the satellite band
	<i>plan_resp</i>	Description <i>plan_resp</i>
	xyz	Alphanumeric code that identifies the channel plan
	<i>ch_resp</i>	Description <i>ch_resp</i>
Configuration	<i>xyz</i>	Alphanumeric code that identifies the channel
	*TUNE <i>ch_conf</i>	
	<i>ch_conf</i>	Description <i>ch_conf</i>
	CH=xyz	"xyz" is an alphanumeric code that identifies a channel
	CH NEXT	It increases +one channel
	CH PREV	It decreases -one channel

Name	TUNE PLAN	
Description	It configures a channel plan	
Configuration	*TUNE PLAN= <i>plan_conf</i>	
	<i>plan_conf</i>	Description <i>plan_conf</i>
	xyz	Alphanumeric code that identifies a channel plan

Name	VER	
Description	It provides the version of the main software application	
Question	*?VER	
Response	*VER <i>ver_resp</i>	
	<i>ver_resp</i>	Description <i>ver_resp</i>
	x.yy.zzz	Alphanumeric code that identifies a version

Name	VIDEO		
Description	It configures the video source		
Configuration	*VIDEO <i>video</i> = <i>video_conf</i>		
	<i>video</i>	<i>video_conf</i>	Description <i>video_conf</i>
	SOURCE	INTERNAL	It enables internal video source
		EXTERNAL	It enables external video source
	SYSTEM	PAL_50 Hz	It enables the video system selected
		PAL_60 Hz	It enables the video system selected
		NTSC	It enables the video system selected
		SECAM	It enables the video system selected



ANNEX 5 **OP-002-PS: OPTICAL + 5 GHz RF AUXILIARY INPUT OPTION**

A5.1 **GENERAL**

A5.1.1 **Description**

This annex contains operating instructions for the next option:

OP-002-PS: Selective Optical Power Meter +
Optical to RF Selective Converter + 5 GHz RF Auxiliary Input.

The evolution of the telecommunications market, more and more demanding in quality standards, speed, services and so on and also economical and competitiveness factors has changed the trend in telecommunications installations, and increasingly, fibre-optics is being imposed on traditional ADSL twisted-pair copper lines.

For this reason and in anticipation of an increase of fibre-optics installations, this option has been developed. It is applicable to the **HD RANGER 2** analysers and allows adapting it in order to work with fibre-optics networks.

This optical module expansion includes two separate functions: The selective optical power meter and the selective optical to RF converter.

The selective meter option allows measurements on optical fibre networks, which are necessary to certify an installation according to the parameters set by local policies.

The optical to **RF** selective converter has a photosensor for each wavelength, which obtains the **RF** signal carried by each one. With this module, user can measure terrestrial or cable (up to 1 GHz) networks or optical **LNB** for satellite antennas (up to 5.45 GHz), so that the installer does not need any additional equipment to measure this type of installations.

The 5 GHz RF auxiliary option can be used among other applications for direct connection to optical LNBs with 5.4 GHz output.

This expansion module is available for both for new equipments or to upgrade equipments owned.



A5.2 DESCRIPTION OF INTERNAL OPERATION

The selective meter consists, in first place, of a selective triple filter for 1310, 1490 and 1550 nm signals. The filter separates each wavelength and each one leads to an independent circuit with a photosensor, which obtains the **RF** signal that it carries. Next, a circuit measures the optical signal power received by the photosensor. The **RF** signal obtained for each wavelength goes to a band switch.

The band switch receives a signal and converts it to a frequency within the RF band (65 — 2150 MHz). In the case of a terrestrial/cable signal the signal is not converted since that signal is within the RF range.

After the conversion, the **RF** signal output is connected to the analyser input connector and the measurement is performed in the usual way to an RF signal. In the conversion, bear in mind that for every unit of optical attenuation (one dB), occurs two dBs of power loss in **RF**. As an example, every 3 dB of optical attenuation for each splitter are equivalent to 6 dB of power loss for **RF**.

The following diagram explains graphically how works the module:

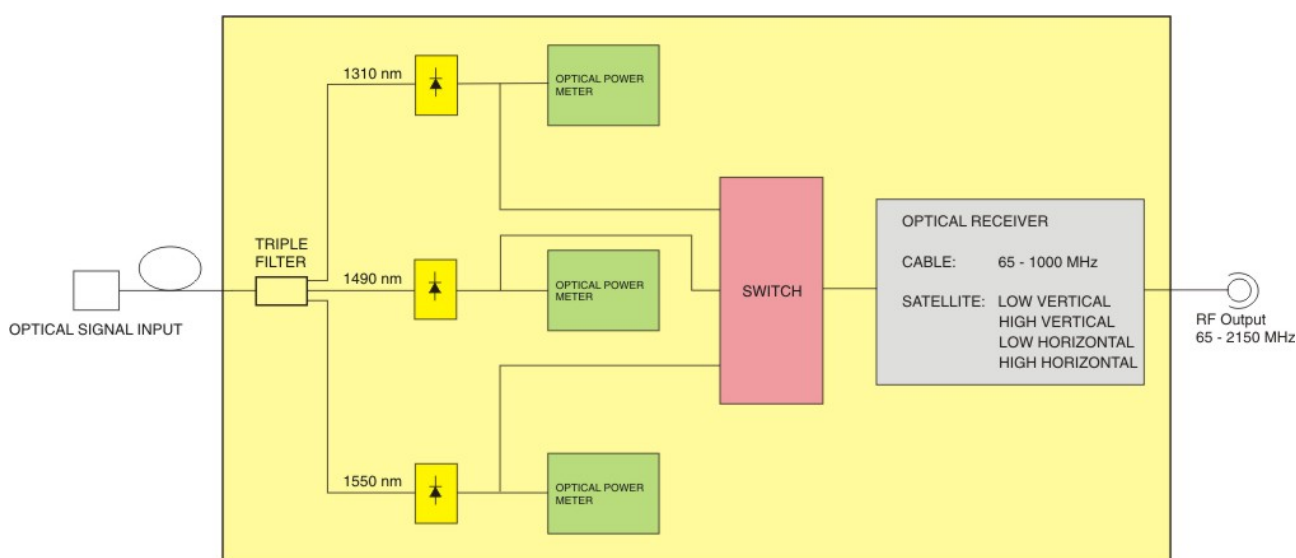


Figure A5.1.



A5.3 Fibre optical test


A5.3.1 Description

The optical function of this module allows the user to certify a telecommunication installation by calibrating the signals at the installation and then measuring them in each of the user access points.

The **HD RANGER 2** with optical module can measure simultaneously and in a selective way the three wavelengths used in optical fibre (1310, 1490 and 1550 nm). It has a selective receiver with a filter for each band that makes a real and very stable measurement of each wavelength. With this feature, user will be able to certify any installation according to the telecommunications infrastructure policies.

A5.3.2 Operation

To access the **FIBRE OPTIC TEST** tool:

- 1 Connect the **optical input** signal to the optical input of the equipment.
- 2 Enter the **MEASUREMENT** or **SPECTRUM** mode.
- 3 Press the **TOOLS** key .
- 4 Select the **FIBRE OPTIC TEST** option.
- 5 It appears the screen to perform the **FIBRE OPTIC TEST** on the signal.

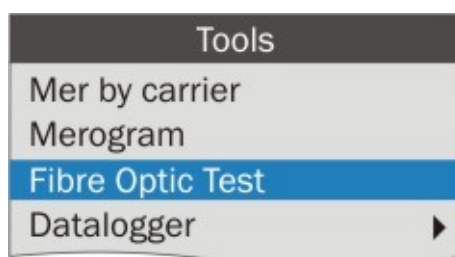


Figure A5.2.

Next it is shown the screen to perform the fibre optic test:

► **Screen description:**

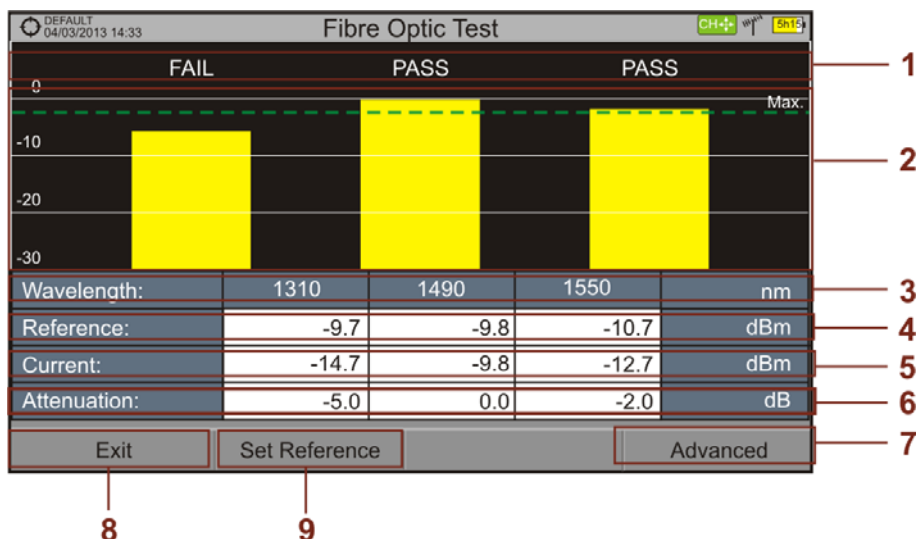


Figure A5.3.

- 1 Status message depending on the level of attenuation.
- 2 Power level of the signal.
- 3 Wavelength of the signal (nm).
- 4 Power level of the reference signal, which is used to calibrate and calculate the attenuation level (dBm).
- 5 Power level of the test signal at the user's access point (dBm).
- 6 Attenuation level (dB); $\text{Attenuation} = \text{Current} - \text{Reference}$.
- 7 "**Advanced**" key to access these options: Threshold attenuation and Max. attenuation (see Max. dashed line).
- 8 "**Exit**" button to exit the screen.
- 9 "**Set Reference**" key to calibrate the reference signal.



A5.3.3 Menu options

On the bottom of the screen there are three menus accessible via the function keys.



It exits the tool.



When pressing this key it uses the current values of power as a reference values.



It accesses the Advanced menu.

In the **Advanced** menu there are two parameters to configure the fibre optical test. They are:

► **Threshold Attenuation:**

It defines the maximum difference that can exist between the reference signal with the highest power level and the reference signal with the lowest power level. Any signal out of this range will be deleted and not used as a reference signal during the measurement process.

► **Max. Attenuation:**

It defines the attenuation level used by the field meter to display the status message on screen. If the attenuation level is below this value the status message will be "**PASS**" and if it is above this value the status message will be "**FAIL**".

NOTE: Datalogger can be done while working with FO (Fiber Optic) signal input, exactly as on RF input. Anyway, it must be clear that measured values for Power are not corresponding solely to the antenna input signal, but to the internal optical to RF conversion.

A5.3.4 Example of a practical application in order to certify an installation by using the **HD RANGER 2**

Next there is a step by step example to certify a telecommunication installation of optical fibre by using the **HD RANGER 2** optical module.

To make the required certification it is necessary:

- **HD RANGER 2** with the optical module.
- A signal generator of the three wavelengths used in fibre optical installations in order to calibrate and measure (**PROLITE-105**).
- A pigtail with a **FC** to **SC** adapter.



► Stage 1. Capturing reference measurements.

- 1 Connect the **SC** pigtail end connector to the **PROLITE-105** output connector.
- 2 Connect the **FC** end of the pigtail to the optical input of the **HD RANGER 2** (see figure below).
- 3 Turn on the **PROLITE-105** and the **HD RANGER 2**.
- 4 Press **F3** key to access the **Tools** menu.
- 5 Select the **FIBRE OPTIC TEST** option and press the *joystick*.
- 6 In the **PROLITE-105**, press once the **SEQ** key to select the **SIMULTANEOUS** mode. This mode simultaneously sends three wavelengths signals.
- 7 In the **HD RANGER 2**, press the **F2** key **Set Reference**. All current values are captured, which will be used as reference values.
- 8 Now, user can proceed to **Stage 2** in order to measure the attenuation at each user's access point.



Figure A5.4.



► **Stage 2. Attenuation Test Measurement.**

- 1 Connect the **PROLITE-105** in a source node of the transmission optical network, for example in a free strip of the main telecommunications cabinet of the building.
- 2 Keep the **PROLITE-105** in simultaneous mode for generating signals, so it **SIMULTANEOUSLY** generates all three wavelengths (1310 nm, 1490 nm and 1550 nm).
- 3 Connect the **HD RANGER 2** to a receiving node of the optical network that is going to be measured, such as for example in a **UAP** (User Access Point).
- 4 Using the **HD RANGER 2**, check measurements on the **FIBRE OPTIC TEST** screen.

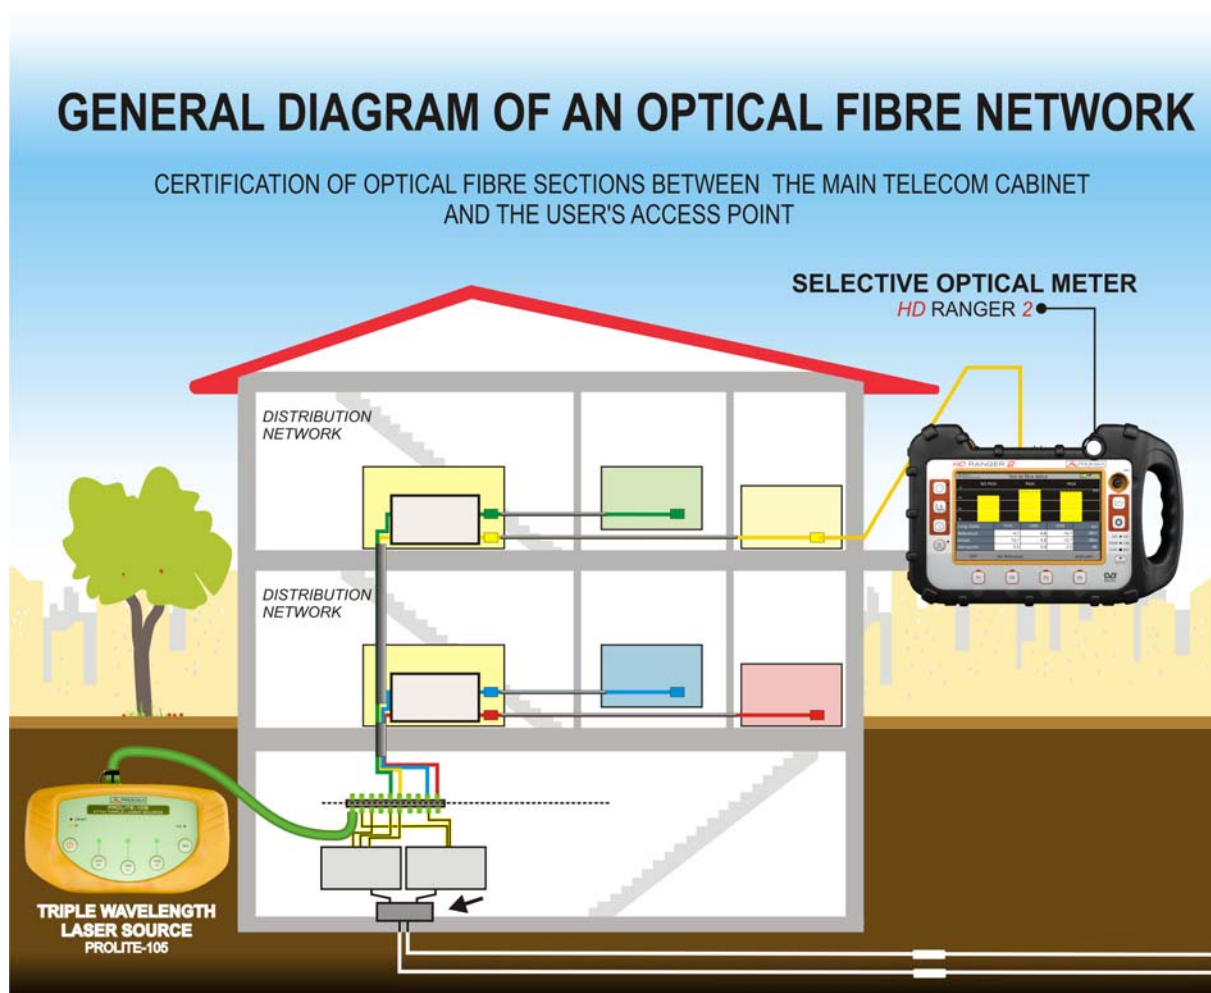


Figure A5.5.



A5.4 Selective optical to RF converter

A5.4.1 Description

The selective optical to **RF** converter has a filter that separates each wavelength and directs it to an independent circuit with a photosensor, which obtains the **RF** signal that carries. The **RF** signal obtained for each wavelength passes to a band switch.

The band switch receives a signal and converts it to a frequency within the **RF** band (65 — 2150 MHz). In the case of a terrestrial / cable signal the signal is not converted since that signal is within the **RF** range. After the conversion, the **RF** signal output is connected to the analyser input connector and the measurement is performed in the usual way to an **RF** signal. In the conversion, bear in mind that for every unit of optical attenuation (one dB), occurs two dBs of power loss in **RF**. As an example, every 3 dB of optical attenuation for each splitter are equivalent to 6 dB of power loss for RF.



A5.4.2 Operation

Signal connection to use this option is as follows:

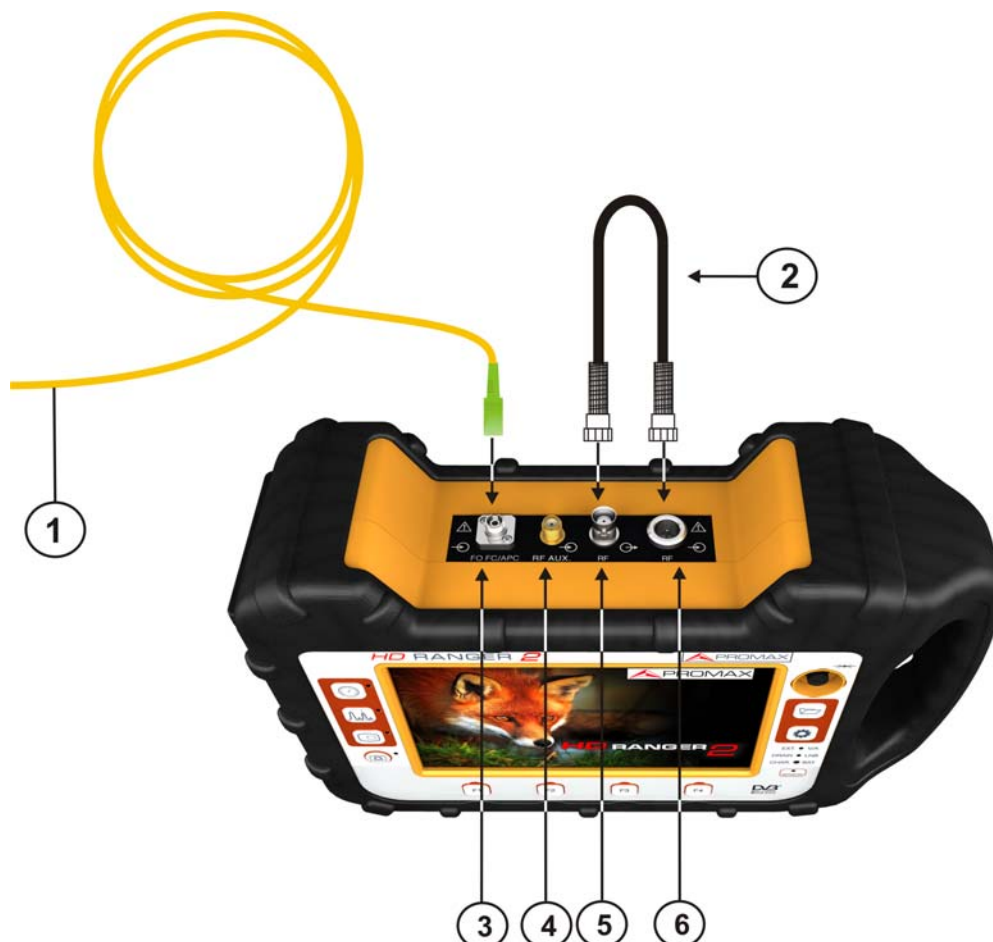




Figure A5.6. Upper panel of **HD RANGER 2** (with this option installed).

- ① Pigtail adapter (supplied with the module) with input optical signal.
- ② Cable (supplied with this expansion module) with RF signal.
- ③ **FC—APC** input connector for optical signal.
- ④ **SMA** Connector (RF aux input signal).
- ⑤ Output BNC connector for the RF signal converted from optical.
- ⑥ Universal Connector for F/F or F/BNC adapter input for RF signal (coming from the optical conversion).



A5.4.3 Configuration

After the connection is made, the user can use the equipment for measurement of optical signals as if they were **RF** signals. Steps to measure a signal are as follows:

- 1 Press the **Settings**  key, and in the "**Signal Source**" option select "**Fiber optic**" in order to work with the fiber optic converted signal.
- 2 From the same **Settings**  menu select the corresponding band, whether terrestrial (for optical link) or satellite (for optical LNB). In the case of a satellite optical signal and frequency tuning, user has to select the signal type, characterized by the band (low/high) and the type of polarization (vertical/horizontal). In the case of a satellite optical signal and channel tuning, the parameters are defined by the channel (refer to the Settings menu section for more details).
- 3 Select the **Optical module** option and press the joystick.
- 4 It appears a window to enable the optical module and to configure additional parameters.
- 5 Select **Enable**.
- 6 At the top right area of the screen appears the **OPT** icon meaning there is external power.
- 7 It appears a window with some setting parameters.

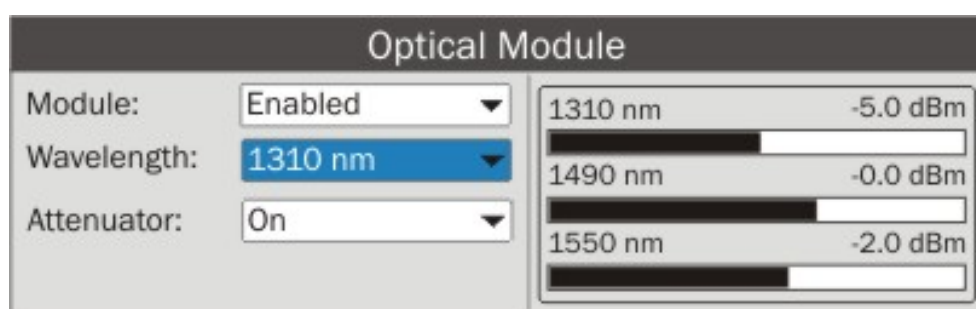


Figure A5.7.

In this window appears the level power for each wavelength and also the user can set two parameters:

► Wavelength:

Wavelength selection at the **RF** output by the user among the three wavelength available: 1310, 1490 and 1550 nm.



► **Attenuator:**

This options allows enabling (ON) or disabling (OFF) the attenuator. When the attenuator is ON is 15 dB RF attenuation. When the attenuator is OFF is 0 dB RF attenuation. The attenuator must be adapted to the installation according to the RF power (modulation index).

Also, on the right side appears the selective power in dBm for each wavelength.

A5.5 5 GHz RF Auxiliary Input

A5.5.1 Description

The optical fibre option comes along with a 5 GHz RF auxiliary input which can be used among other applications for direct connection to optical LNBs with 5.4 GHz output. This RF input covers three bands:

Band I From 2150 MHz to 3000 MHz

Band II From 3400 MHz to 4400 MHz

Band III From 4400 MHz to 5400 MHz

A5.5.2 Operation



Figure A5.8.

1 **SMA Connector (RF aux. input signal).**

A5.5.3 Configuration

The user can use the equipment for direct connection to optical LNB with 5.4 GHz output. Steps to measure it are as follows:

(1) Aux. Input Signal Selection

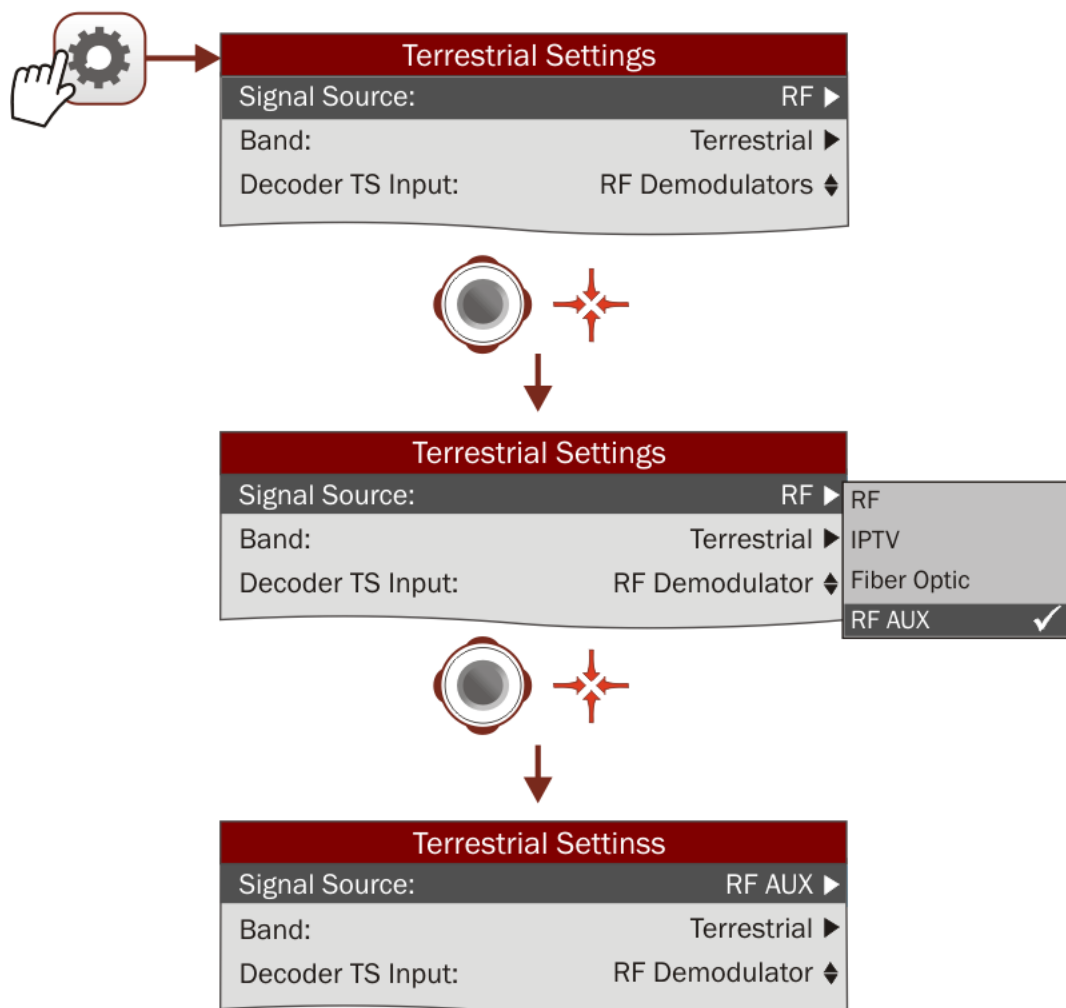


Figure A5.9a.



(2) Band Selection*

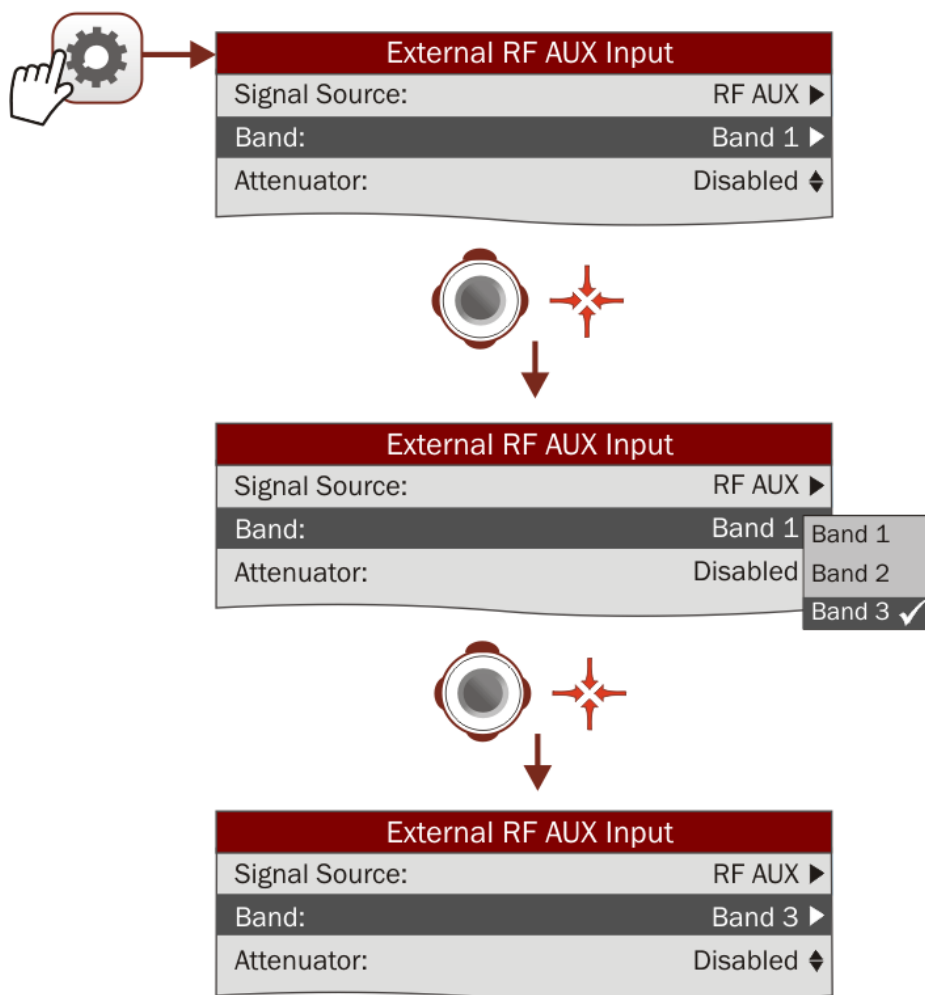


Figure A5.9b.

* Band 1: 2150 - 3000 MHz; Band 2: 3400 - 4400 MHz; Band 3: 4400 - 5400 MHz.

A5.5.4 Screen Description

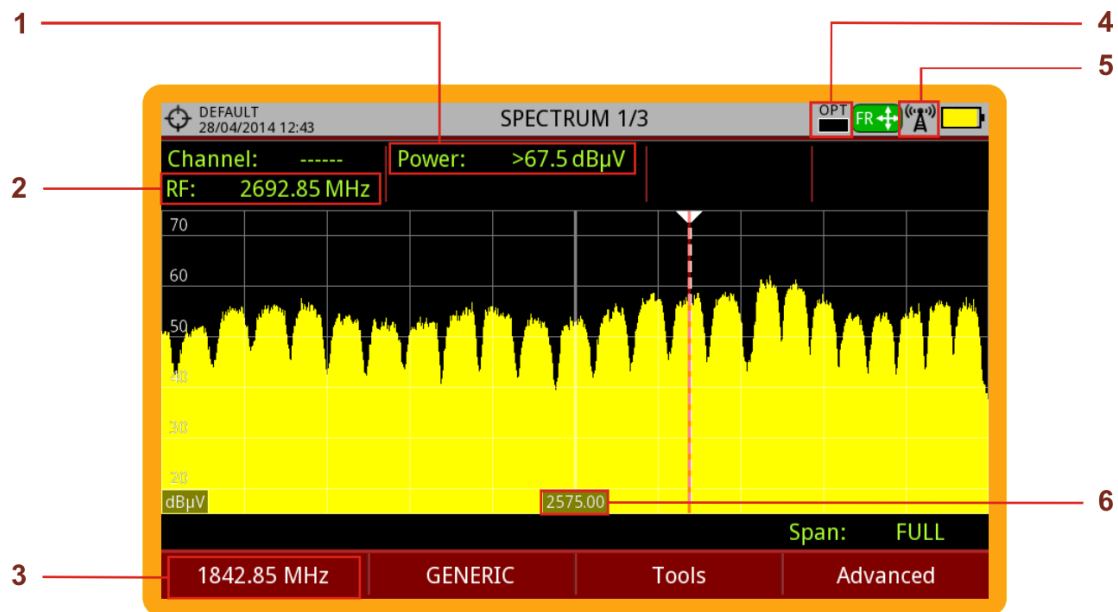


Figure A5.10.

- 1 RF Aux. Input Signal Power.
- 2 Auxiliary Frequency Input.
- 3 Input Signal Frequency.
- 4 LNB Optical Power Level.
- 5 RF Auxiliary Input Enabled.
- 6 Center Frequency.



ANNEX 6 OP-002-GPS: SIGNAL COVERAGE OPTION

A6.1 GENERAL

A6.1.1 Description

This annex contains operating instructions for the next option:

OP-002-GPS: Signal coverage analysis with GPS for **HD RANGER 2**

This option allows the user to check signal coverage by measuring its power, MER and C/N. The position where all these measurements are taken is determined by a GPS receiver. All this data, measurements and GPS position can be downloaded to a PC and exported to a file for later analysis.








Please, read the user's manual of the equipment for detailed information about general operation, specifications and other data.



A6.2 Signal Coverage Analysis

A6.2.1 Operation

The Signal Coverage tool is available for all signals.

- 1 Connect the GPS receiver to the equipment.
- 2 In **Settings** menu  select the terrestrial band.
- 3 Access the **SPECTRUM** mode and tune the signal for coverage study.
 In case of tuning a **DVB-T2** signal, in the **Signal Parameters** menu  select the Profile (Base or Lite) and the PLP identifier. User has to choose one profile and one PLP identifier per each signal coverage analysis.
- 4 Press the **Tools** key .
- 5 Select the **Signal Coverage** option.
- 6 The **Signal Coverage** function appears on screen.
- 7 Before starting the signal coverage analysis, access the **Configuration** option in the **Advanced** menu  for settings (more details in next section).
- 8 After settings, access the **Advanced** menu  and press on **Start** to start the signal coverage analysis.
 In **Automatic** mode, the equipment takes samples automatically according to settings (see next section). In **Manual** mode each time the user presses the joystick the equipment takes a sample. Measurement are linked to the GPS reference.
- 9 Access the **Advanced** menu  and press on **Stop** to finish the signal coverage analysis. Data obtained is automatically stored.
- 10 Access the data by pressing the **Installation List** key  to check that the monitoring data file has been saved. This file is a "Data Capture" type. To manage the data, see below the section "Data File Processing".



A6.2.2 Settings

User can adjust some parameters on the Signal Coverage analysis:

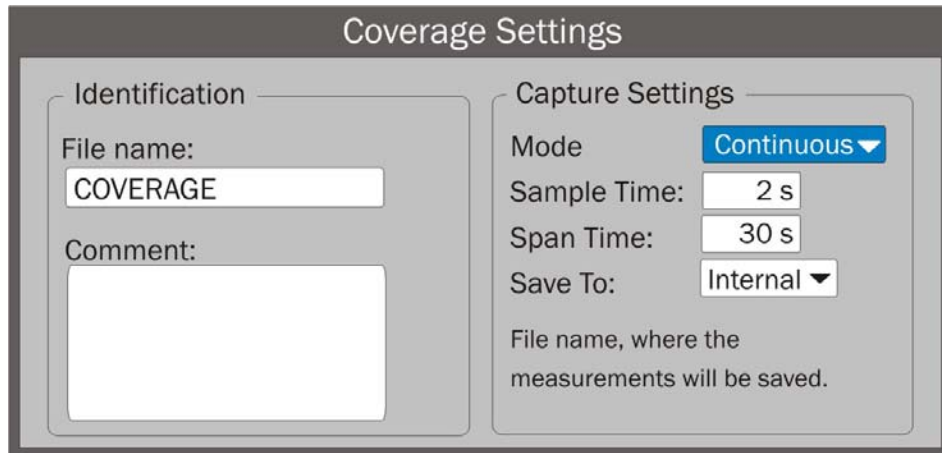


Figure A6.1.

► **File name:**

User can give a name to the file where data is saved. All measurement that can be seen in the MEASUREMENT 1/3 screen (frequency, power/level, C/N, PLP identifier, MER, CBER, LBER and LM) will be stored on the data file. Be sure to change the file name when starting a new Signal coverage analysis. If not, new data file will be saved on the last one.

► **Comment:**

User can write some comments about the study.

► **Mode:**

There are **two** options: **Continuous** or **Manual**. In continuous mode a sample is taken automatically every sample time. In manual mode a sample is taken every time that user presses the joystick.

► **Sample Time:**

Time between acquisitions. Only when working in continuous mode. Minimum time is 1 second.

► **Span time:**

It is the width, in time, shown on screen for the X axis.

► **Save to:**

There are **two** options: **Internal** or **USB**. For Internal option it saves the file with all data in the internal memory of the equipment. For USB option it saves the file with all data in a USB flashdrive connected to the micro-USB port of the equipment.

A6.2.3 Description of signal coverage screen

The following describes the **Signal Coverage** screen:

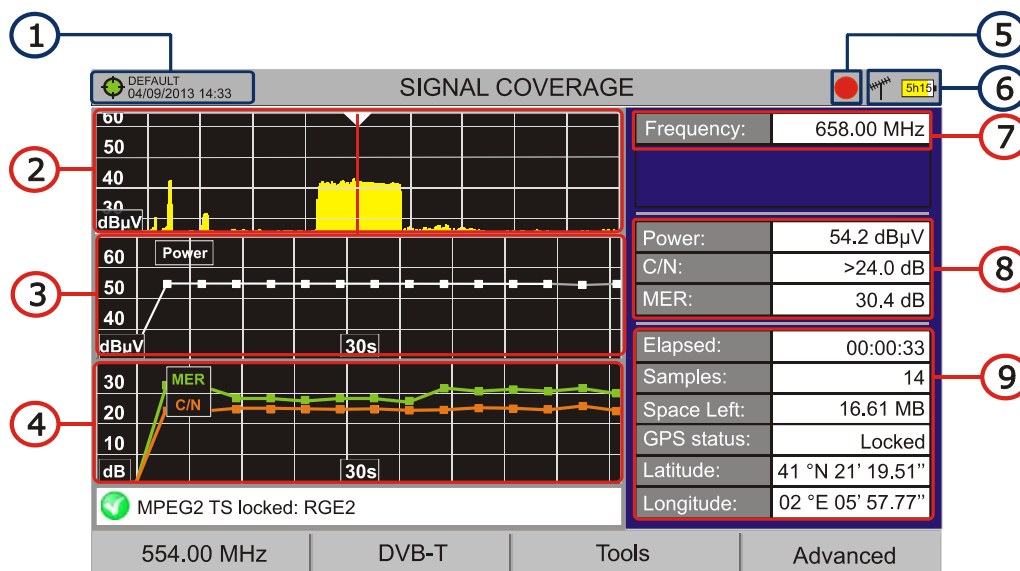


Figure A6.2.

- 1 Selected installation; date and time. The "Current installation" green indicates the system has locked the GPS signal. The "Current installation" in red indicates that the system has not locked the GPS signal.
- 2 Spectrum.
- 3 Power measurement over time (shows span time).
- 4 MER and C/N measurement over time (shows span time).
- 5 Signal coverage started.
- 6 LNB, Selected band; battery level.
- 7 Signal information window 1:
Frequency: frequency at which signal is locked; **Profile** (only for DVB-T2 signals): Base or Lite; **PLP identifier** (only for DVB-T2 signals): identifier of the layer being measured, **TS Hierarchy** (table hierarchy at the transport stream) **TS Priority** (packet priority at the transport stream).
- 8 Signal information window 2:
Power, C/N, MER measurements of the signal over time. It shows on screen only the span time selected in settings.


9

Signal information window 3:

Elapsed: Time elapsed since the beginning of the coverage study.

Samples: Samples taken since the beginning of the coverage study.

Space left: Space left in the memory to save data.

GPS status: It shows if the GPS receiver is locked or unlocked.

Latitude, Longitude: It shows the latitude and longitude at the current position, if GPS is locked. Measurement are linked to the GPS position.

A6.2.4 **Menu Options**

At the bottom of the screen there are four menus available via the function keys.



It displays the channel/frequency where is pointing the cursor and access the tuning menu.



It displays the selected transmission standard menu and accesses the signal parameters.



It displays the Tools menu.



It displays the Advanced menu.

In the **Advanced** menu there are some options for the **Signal Coverage**. They are:

- ▶ **Start:** It starts the signal coverage study.
- ▶ **Stop:** It stops the signal coverage study.
- ▶ **Pause:** It stops the signal monitoring for a while until resuming.
- ▶ **Configuration:** It shows the settings window with some parameters.
- ▶ **Audio:** It allows enable or disable audio. When this option is enabled, the user can listen to any service in the monitored signal, knowing about signal reception while driving or doing other tasks.

- **GPS Status:** It shows a list and a graph with satellites detected to locate the GPS signal. It is also provided additional data such as longitude, latitude, date and universal time, visible satellites and GPS status (locked or not).

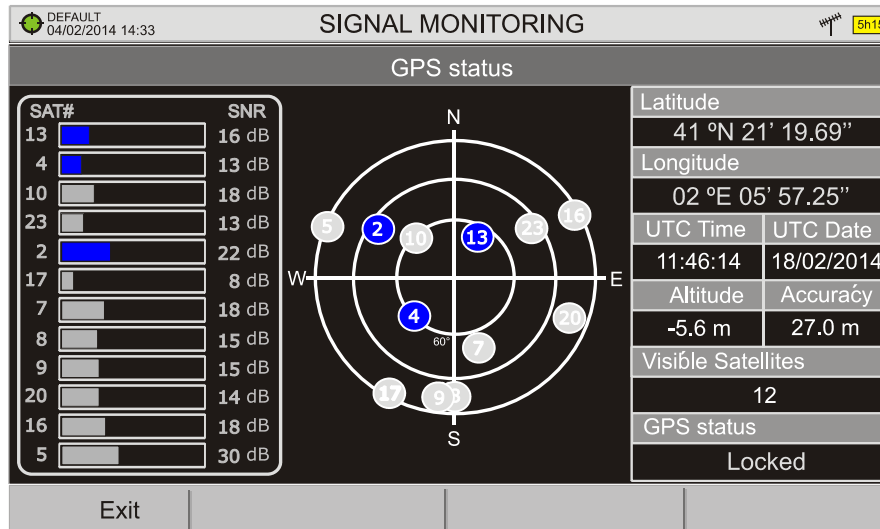


Figure A6.3.

A6.2.5 Data viewer

The data viewer allows the user to browse along the final results. It opens directly after saving the data or by opening the associated data file (that is located in the installation manager).

- **Screen description:**

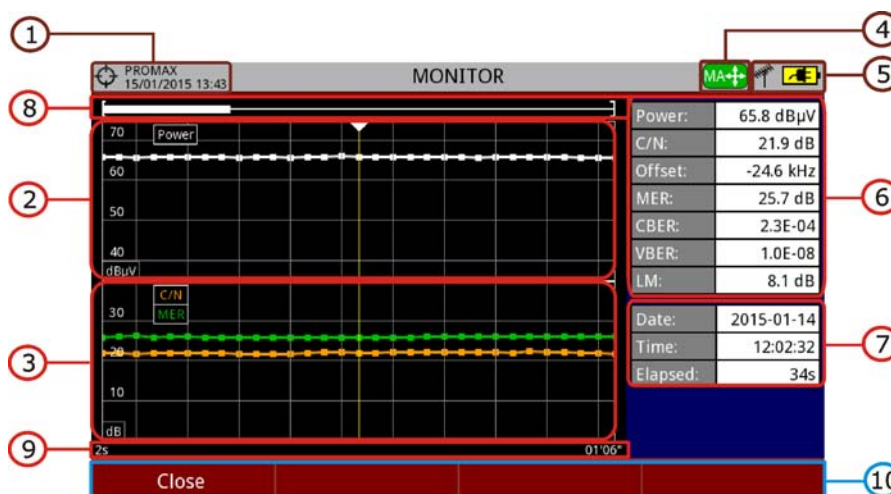




Figure A6.4.



- 1 Selected installation; date and time.
 - 2 Power measurement over time.
 - 3 MER and C/N measurement over time.
 - 4 Joystick mode selected: PA mode (panoramic) or MA mode (cursor movement).
 - 5 LNB, selected band; battery level.
 - 6 Signal information window 1:
Measurement of power, C/N, Offset, MER, CBER, VBER and Link Margin where the cursor is.
 - 7 Signal information window 2:
Date, time and elapsed time.
 - 8 Scrollbar: it shows position and size of the data displayed related to total data.
 - 9 Time span of displayed data.
 - 10 Menu Options:
 - : Exits the data viewer.
 - : It shows transmission parameters of the monitored signal.
- ▶ **Joystick up/down:** It increases / decreases zoom.
 - ▶ **Joystick left/right:** In PA mode it moves time span along the total time.
In MA mode it moves the cursor along the samples of the time span.
 - ▶ **Joystick pressing:** It switches between panoramic (PA) and movement (MA) mode.

A6.3 Data File Processing

A6.3.1 Description

This document is an explanation about the process that is needed to be done in order to obtain a more comfortable view of the XML data obtained with **HD RANGER** family equipment, with GPS option, when doing a Signal Coverage analysis.



Once you got the coverage data, copy the XML data file from the equipment to a USB memory using the Installation Manager. See the equipment's documentation in how to get files from an Installation.

A6.3.2 Obtaining an excel file

For this section, you must have at least Excel 2003 or newer version. Excel 2007 (or later) is highly recommended to avoid macro problems.

- 1 First of all we need to locate the XML data file in the folder from which we want to work. There are no requirements needed to be satisfied. A file named COVERAGE.XSL must be placed in the same data file folder. That second file allows proper data formatting when processed by Excel.
- 2 Select the XML data file and then right click with the mouse button on the file name.
- 3 Choose the option "**Open with**" and then select Excel 2007 (or the available version)

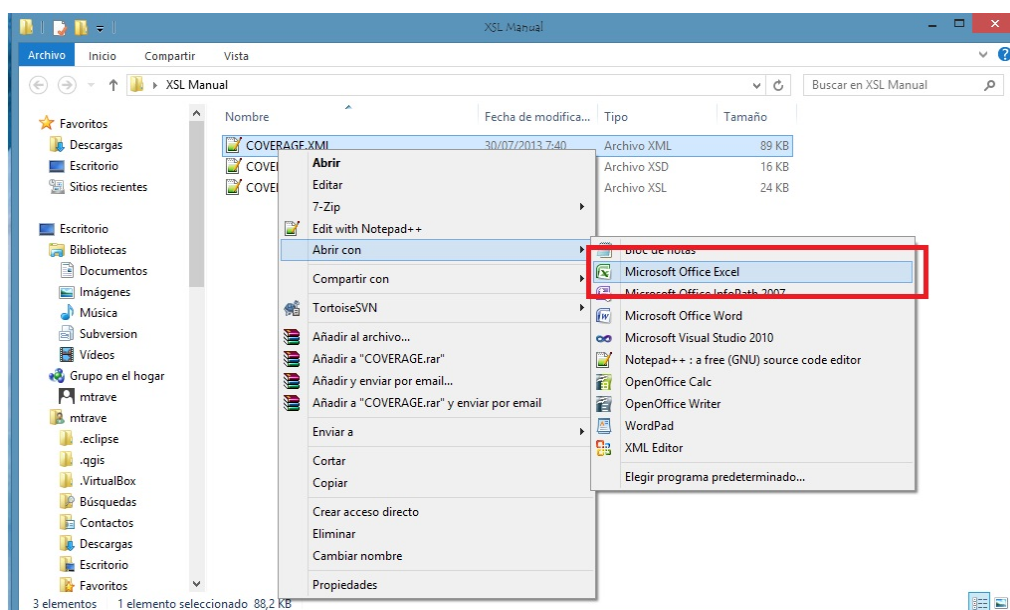


Figure A6.5.



- 4 When Excel tries to open the file it will ask you the import method to open the XML data file by this way:

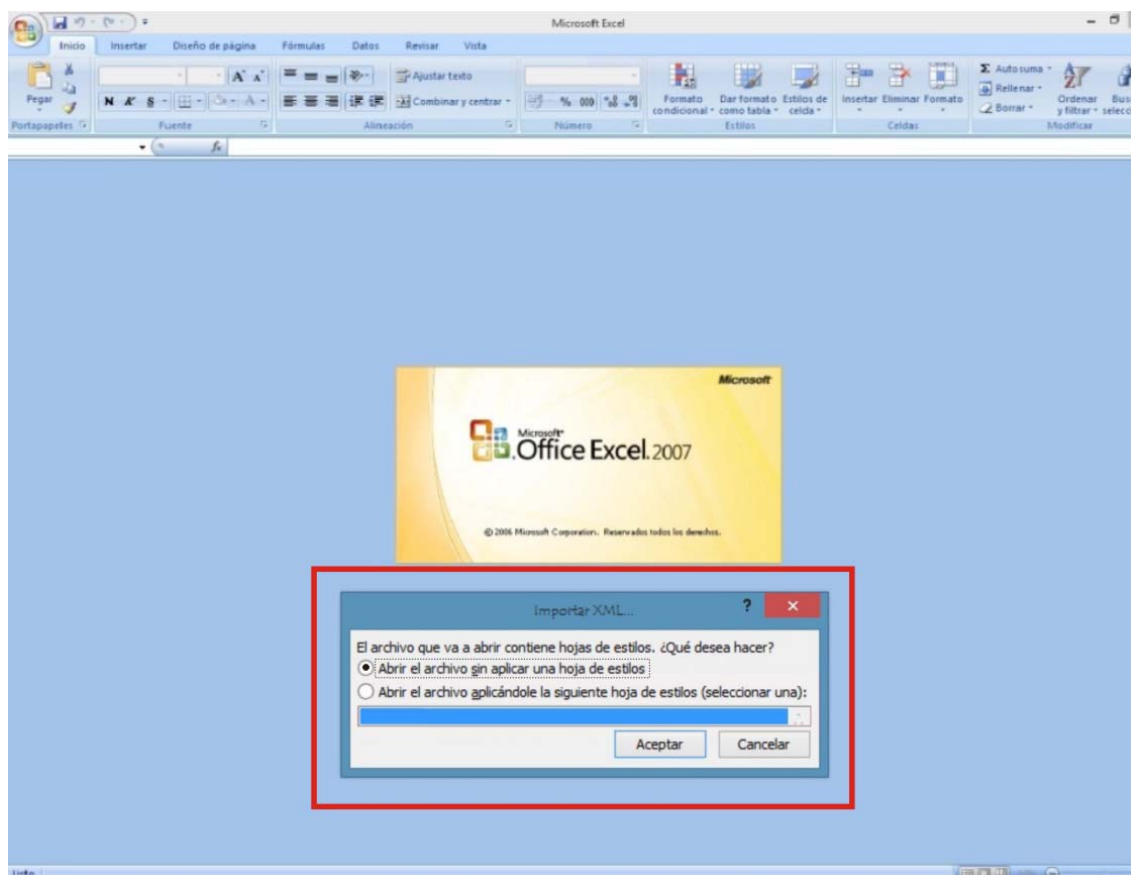


Figure A6.6.

- 5 You must choose the option in which a stylesheet is asked. It will appear as an option the "COVERAGE.xsl" file.

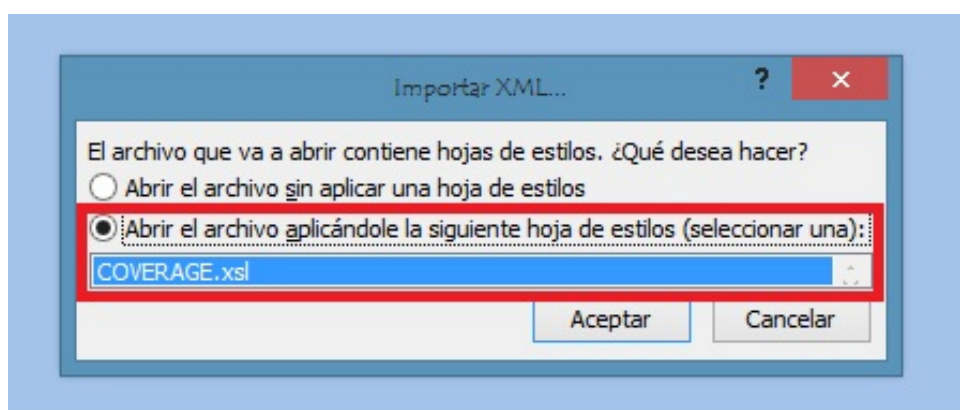


Figure A6.7.



- 6** Now Excel is opening the XML data file using the format that the XSL file is providing. This step could take few seconds depending on the size of the XML data file.
- 7** At this point, you should have an excel file with three different sheets. Each sheet corresponds to a different view of the same data:
 - ✓ The first one will show you the generic signal information and the different coverage measures for each point acquired.
 - ✓ In the second one, you will find the same data but presented in a table format, more user friendly for working with graphs based on each measured parameter.
 - ✓ The third one provides data in a format adapted for geolocation. Information is shown in terms of parameters required for presenting the measured data as a map layer (latitude, longitude, id, description and an icon identifier number) as required for GIS and Google Earth technologies. This third sheet is formatted mainly to be compatible with main Google Earth format converters available in Internet.
- 8** Now save the data as a true excel file. No specific name or path is required, but you must remember the path.

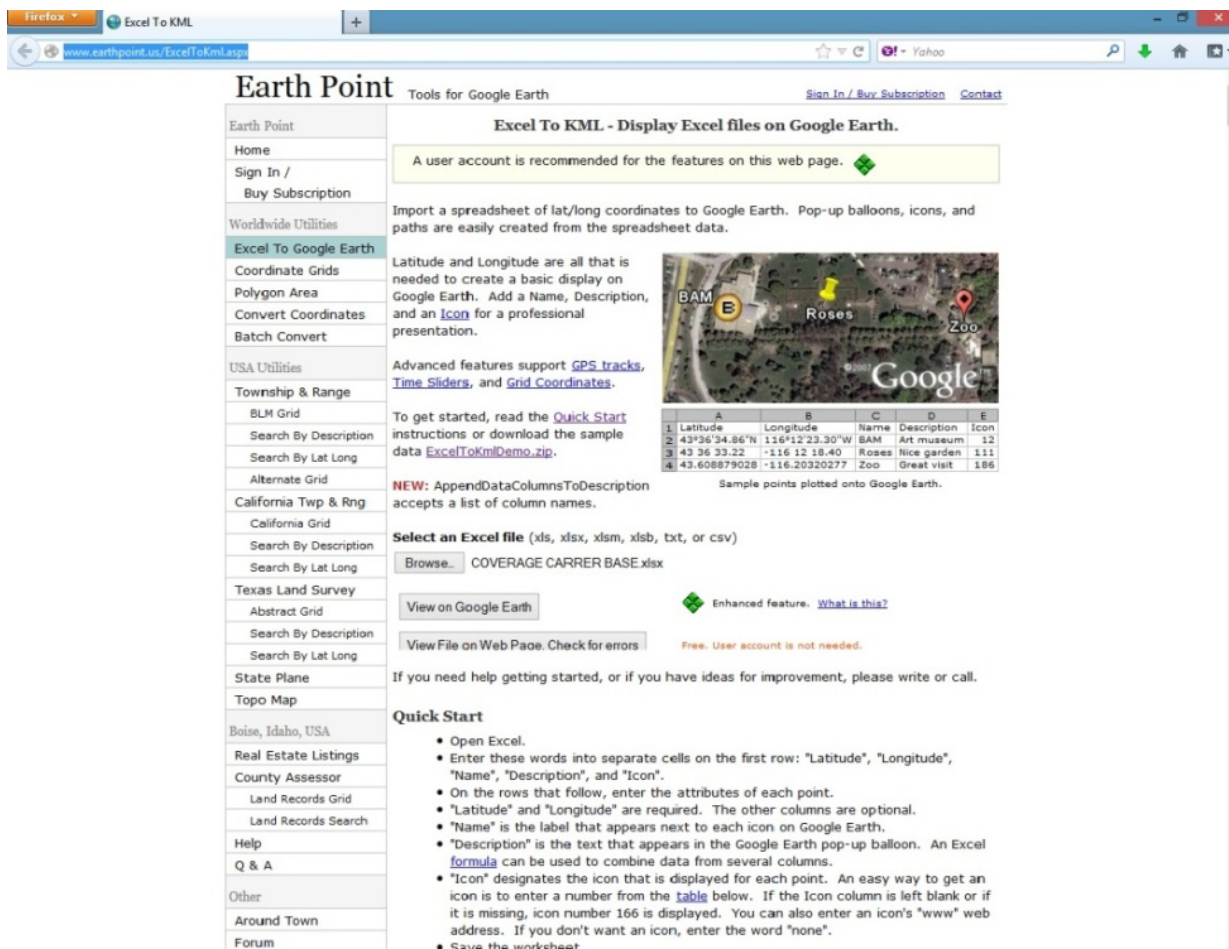


A6.3.3 Presenting measurements in Google Earth

For this process **Google Earth** must be installed on the computer and internet connection will be needed.

- 1 Open a web browser and then search for a converter from Excel file to KML file, for instance, googling "excel to kml" (a kind of XML file used by Google Earth) We propose this one (and this is the one we will explain in detail in the following example explanation).

Navigate to: <http://www.earthpoint.us/ExcelToKml.aspx>



Earth Point Tools for Google Earth [Sign In / Buy Subscription](#) [Contact](#)

Excel To KML - Display Excel files on Google Earth.

A user account is recommended for the features on this web page.

Import a spreadsheet of lat/long coordinates to Google Earth. Pop-up balloons, icons, and paths are easily created from the spreadsheet data.

Latitude and Longitude are all that is needed to create a basic display on Google Earth. Add a Name, Description, and an [Icon](#) for a professional presentation.

Advanced features support [GPS tracks](#), [Time Sliders](#), and [Grid Coordinates](#).

To get started, read the [Quick Start](#) instructions or download the sample data [ExcelToKmlDemo.zip](#).

NEW: [AppendDataColumnsToDescription](#) accepts a list of column names.

Select an Excel file (xls, xlsx, xslm, xlsb, txt, or csv)

[Browse...](#) COVERAGE CARRER BASE.xlsx

[View on Google Earth](#)

[View File on Web Page. Check for errors](#)

Enhanced feature: [What is this?](#)

Free. User account is not needed.

If you need help getting started, or if you have ideas for improvement, please write or call.

Quick Start

- Open Excel.
- Enter these words into separate cells on the first row: "Latitude", "Longitude", "Name", "Description", and "Icon".
- On the rows that follow, enter the attributes of each point.
- "Latitude" and "Longitude" are required. The other columns are optional.
- "Name" is the label that appears next to each icon on Google Earth.
- "Description" is the text that appears in the Google Earth pop-up balloon. An Excel [formula](#) can be used to combine data from several columns.
- "Icon" designates the icon that is displayed for each point. An easy way to get an icon is to enter a number from the [table](#) below. If the Icon column is left blank or if it is missing, icon number 166 is displayed. You can also enter an icon's "www" web address. If you don't want an icon, enter the word "none".
- Save the worksheet

	A	B	C	D	E
1	Latitude	Longitude	Name	Description	Icon
2	43°36'34.86"N	116°12'23.30"W	BAM	Art museum	12
3	43°36'33.22"	-116°12'18.40"	Roses	Nice garden	111
4	43.608879028	-116.20320277	Zoo	Great visit	186

Sample points plotted onto Google Earth.

Figure A6.8.



- 2 Click on the **BROWSE** icon:

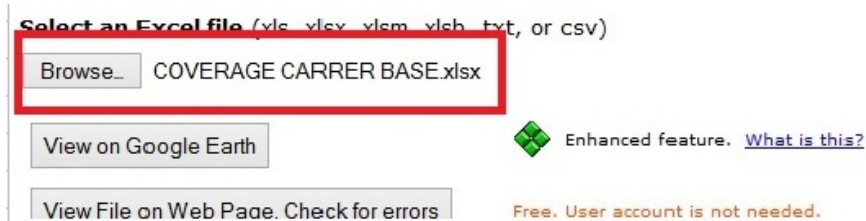


Figure A6.9.

- 3 A new window will appear in which you will be able to search the Excel file you saved in the step number 9 of the previous section of this document.

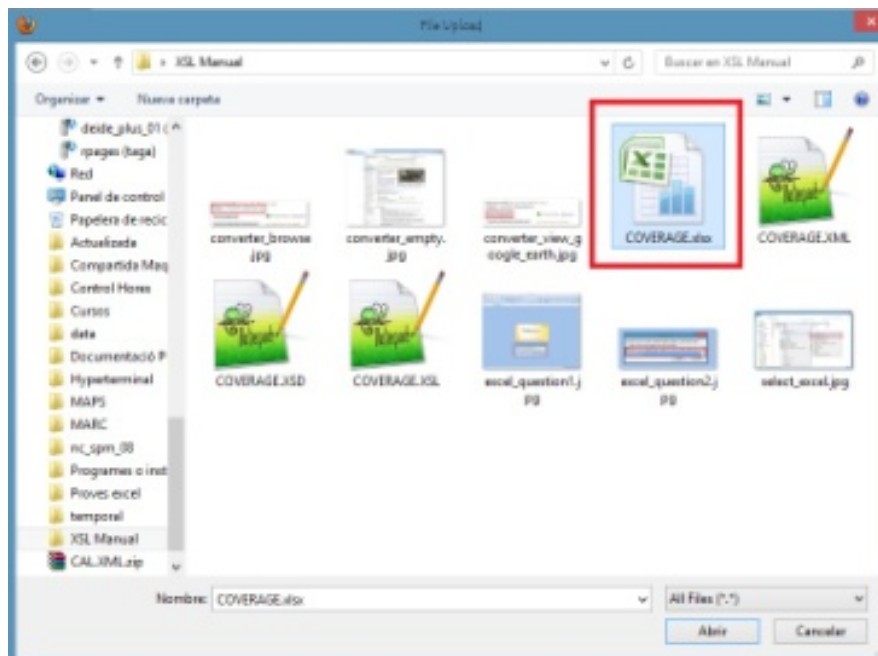


Figure A6.10.

- 4 After doing the file selection click on the option **VIEW ON GOOGLE EARTH**:



Figure A6.11.



- 5 The web page will perform the file conversion and then will ask if you want to save the resulting file or just open it using Google Earth software. Select **OPEN WITH** Google Earth.



Figure A6.12.

Google Earth will try to open the three different excel sheet explained before in this document (see step 8 from Excel opening process for XML data file in the previous section of this document). The first one is not using the format that the converter is expecting and will generate an error. The second and the third one will represent the coverage measurement points, but only the third one will be with the really suitable format.

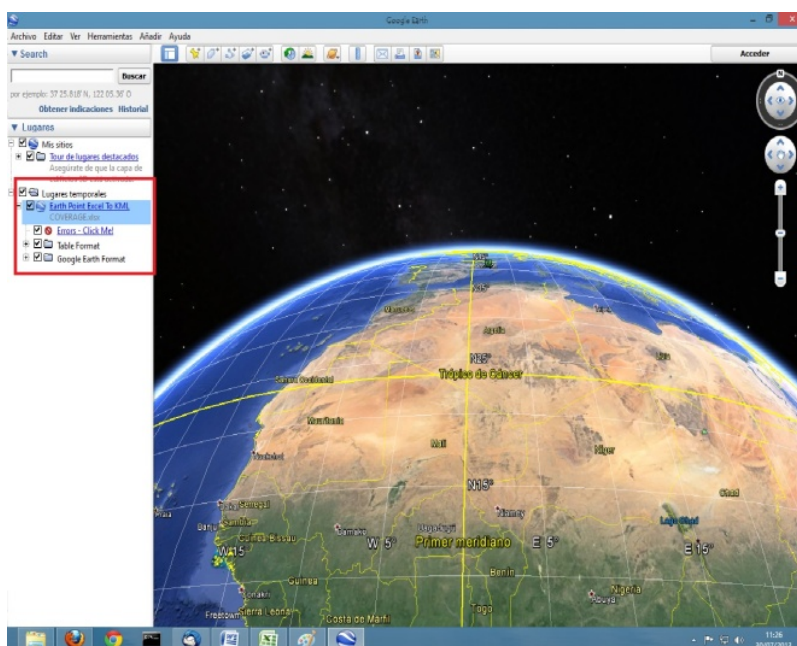


Figure A6.13.

- 6 Disable the first and the second sheets for a more comfortable view, and click over the third one.

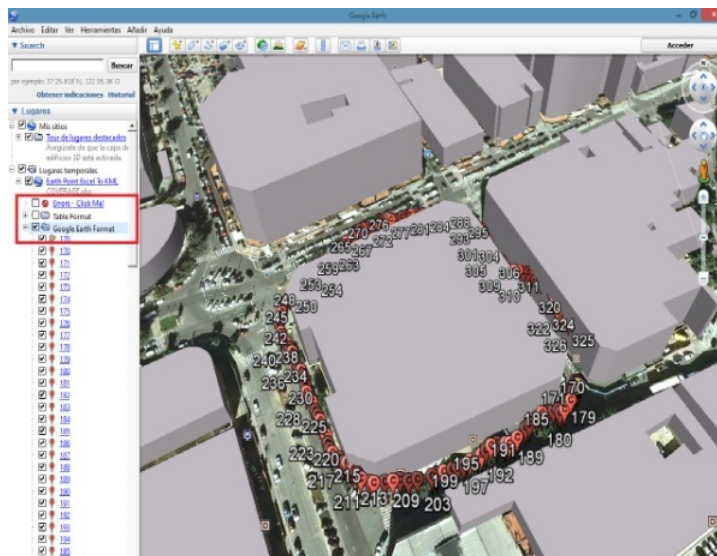


Figure A6.14.

- 7 The yellow flag symbol mark the first and the last coverage measure point. The other measurement points will be presented as a C symbol.

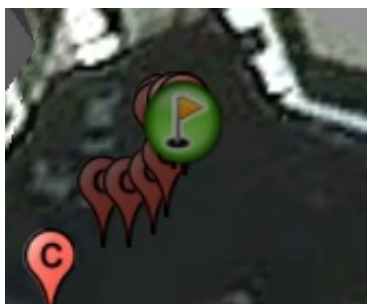


Figure A6.15.

- 8 Every point will show the POWER and MER measurements, when selected.

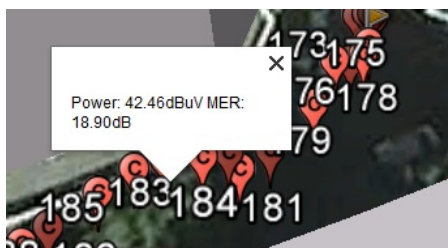


Figure A6.16.

Finally, the KML file generated with the procedure described here can be used directly with most of the GIS tools, to import such data into a layer over a GIS map.



ANNEX 7 OP-002-DAB: DAB/DAB+ OPTION

A7.1 Description

This annex contains instructions for the following option:



OP-002-DAB: DAB/DAB+ signal analysis.

This option allows the user to detect, measure, analyse and visualise digital radio **DAB** and **DAB+**.

The **DAB** (Digital Audio Broadcasting) is a digital radio standard, designed for both home and portable receivers to broadcast terrestrial and satellite audio and also data. It works with Band III and L-Band frequencies.

The **DAB+** is an evolution of DAB using the AAC + audio codec. It also includes Reed-Solomon error correction, which makes it more robust. DAB receivers are not compatible with DAB+ receivers.

A7.2 Operation

- 1 Connect the RF input signal to the equipment.
- 2 Select the frequency band (terrestrial or satellite) by means of the "Settings"  menu.
- 3 Access the **MEASUREMENT**, **SPECTRUM ANALYSER** or **TV MODE** by pressing the corresponding key.
- 4 Lock the DAB/DAB+ signal.
- 5 If you want to enable auto-detection function for DAB/DAB+, go to "Preferences" by pressing the  key for 1 second and in the Stealth -ID tab select the **DAB/DAB+** option.



A7.3 MEASUREMENT Mode

Views for **DAB/DAB+** signal in **MEASUREMENT** mode are:

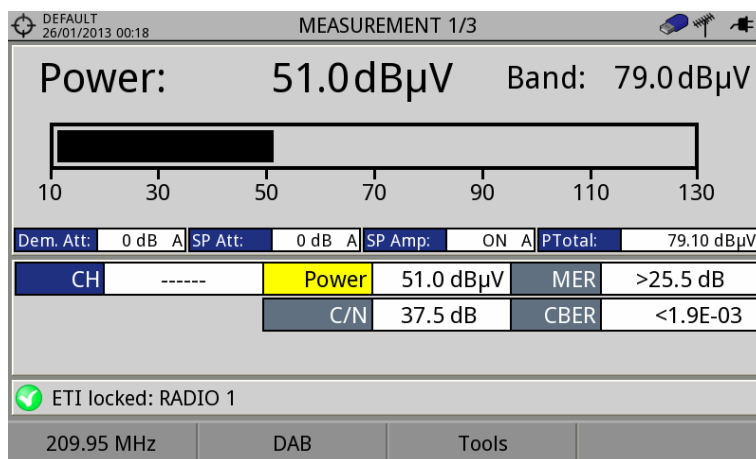


Figure A7 1. Measurement 1/3

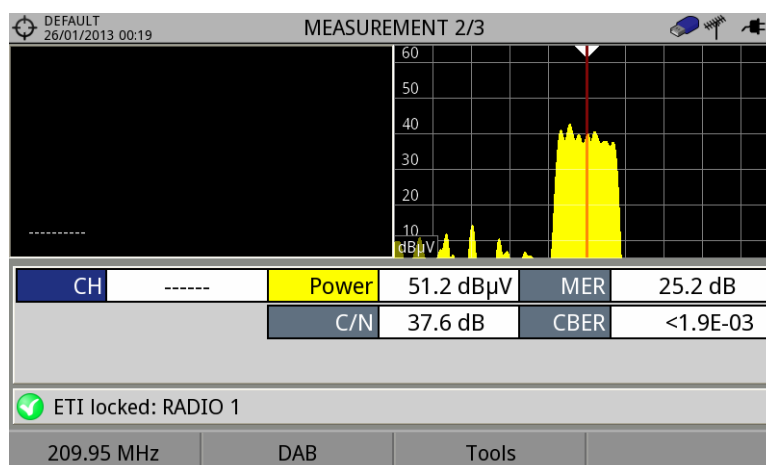


Figure A7 2. Measurement 2/3

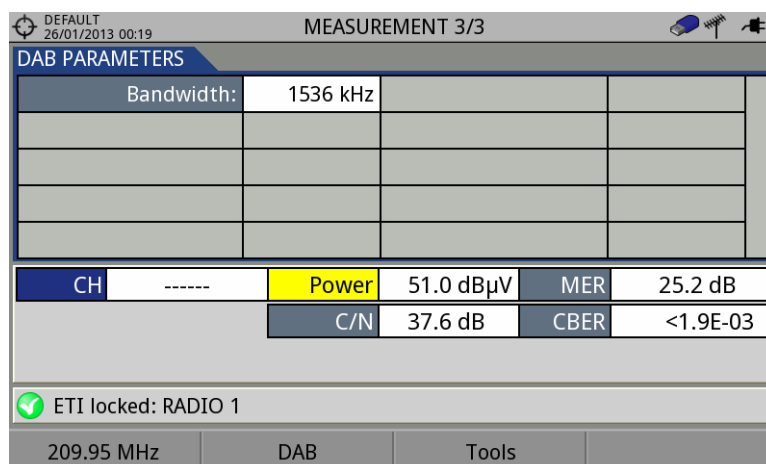


Figure A7 3. Measurement 3/3



A7.4 SPECTRUM ANALYSER Mode

Views for **DAB/DAB+** signal in **MEASUREMENT** mode are:

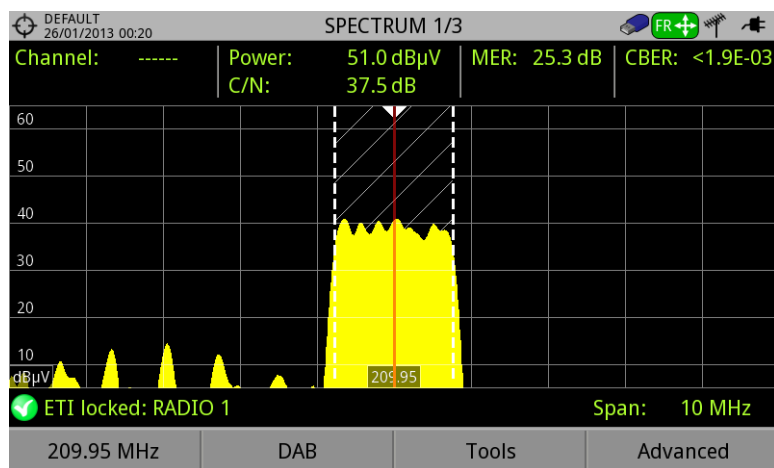


Figure A7 4. Spectrum 1/3

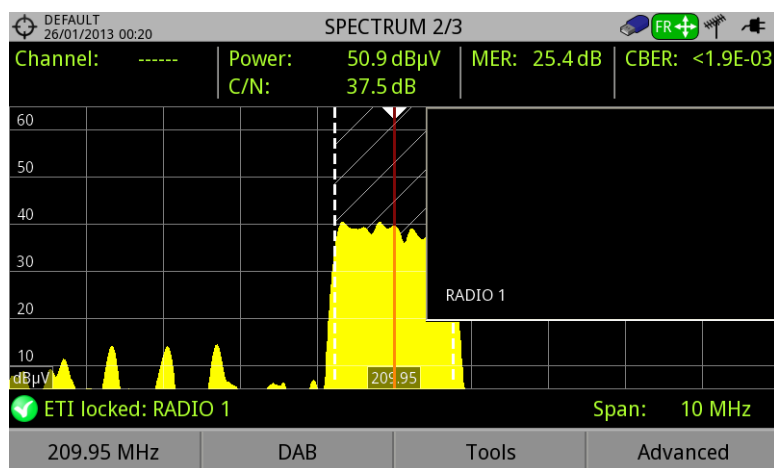


Figure A7 5. Spectrum 1/3

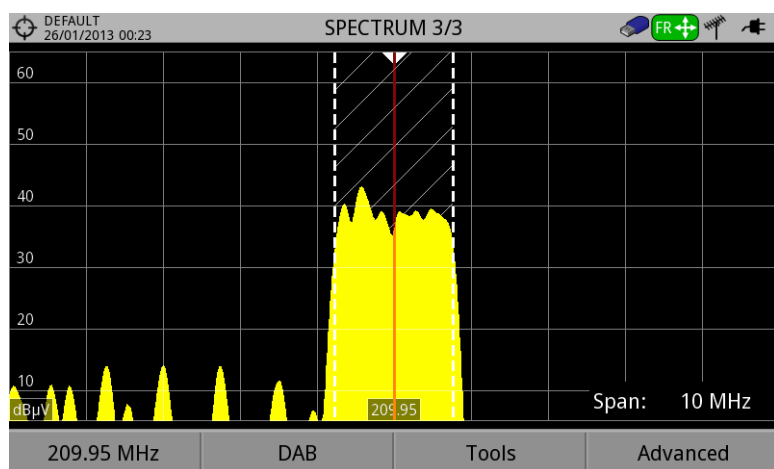


Figure A7 6. Spectrum 1/3



A7.5 TV Mode

Views for **DAB/DAB+** signal in TV mode are:



Figure A7 7. DAB 1/3

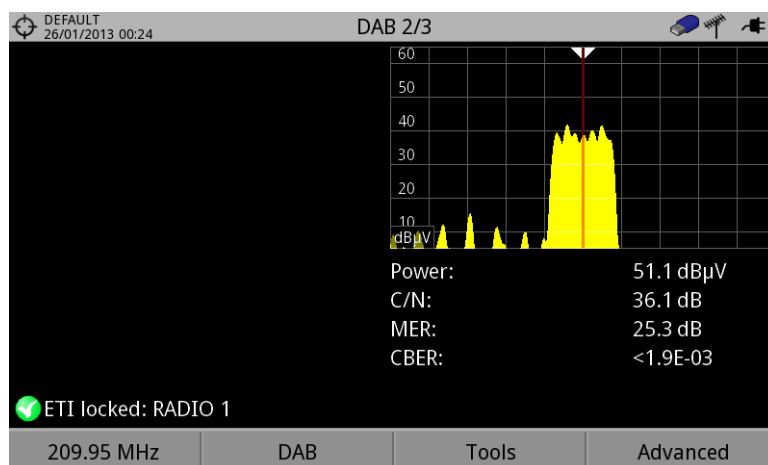


Figure A7 8. DAB 2/3

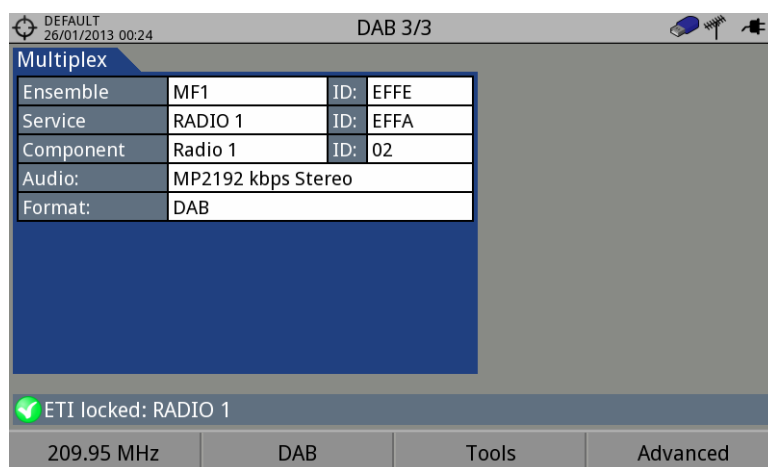


Figure A7 9. DAB 3/3



ANNEX 8 DIGITAL DIVIDEND (LTE)

8.1 Introduction

LTE (Long Term Evolution) is a standard for mobile data connection, commonly called 4G, with up to 44 frequency bands assigned. These bands are located in the radio spectrum between the frequencies 698 MHz and 3600 MHz.

Although LTE standard is applied virtually worldwide, each country and each operator chooses the bands and the individual technological aspects of its implementation.

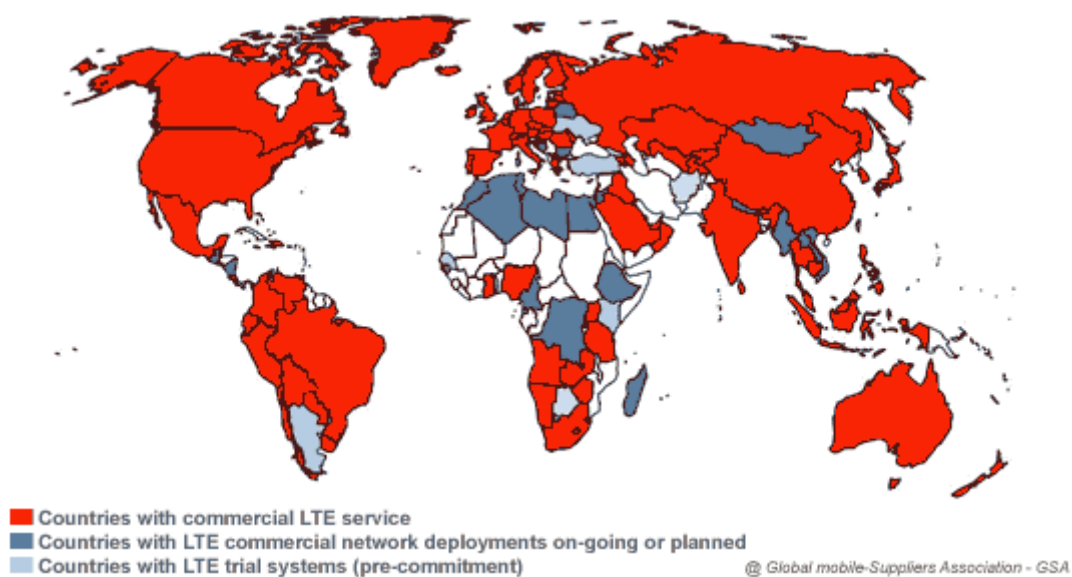


Figure A8.1. Map of 4G-LTE deployment in late 2014.
© Global mobile-Suppliers Association - GSA.

8.2 Why LTE is a problem for television installations?

As TV installers, LTE worries us because of its ability to generate interferences over the TV signals, especially in those cases where an LTE repeater is located in the surroundings of our receiving antenna. Specifically, the band 20 in the LTE (also called LTE-800) corresponds to frequencies between 791 MHz and 862 MHz, and it is one of the bands that will be used in Europe.



Currently, TV operators are restructuring some UHF channels in order to release the frequencies corresponding to the band LTE-800. These channels are those between 61 and 69 inclusive. This process is called "Digital Dividend". After migration of frequencies has been completed, the mobile operators, which own the concession, will begin to transmit LTE signals.

8.3 **Detection and correction of LTE interferences**

Fortunately, all the PROMAX field strength meters in the **HD RANGER** series have tools to detect and correct any interference caused by LTE / 4G mobile phone signals.

The interference caused over DTT signals by LTE can be produced because of near 4G mobile telephony base stations, as well as the proximity of mobile devices that use this band. The TV reception installations, especially in the channels near to LTE-800 band, can be protected from interference with the installation of a filter to reject the LTE band. Such filters are easily found in shops, are easy to install and have a reasonably high attenuation for such interfering signals.

8.4 **Step by Step: Solving the case of a LTE interference with any HD RANGER field strength meter**

Now we are going to simulate a case of interference and how it can be solved with a field strength meter of the HD RANGER series.

The best option is to start measuring the highest power of LTE signals in the band between 791 MHz and 862 MHz. This frequency band comprises a first block for downlink with 6 channels of 5 MHz bandwidth each, and a second block for uplink with the same distribution. See this spectrum in the following figure:

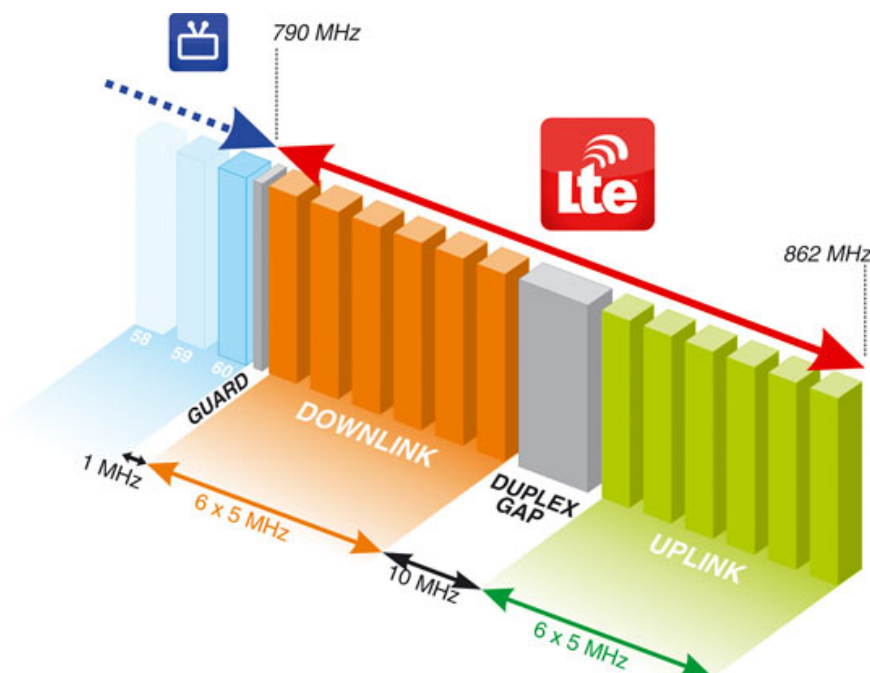


Figure A8.2 Picture of the terrestrial band occupied by LTE frequencies.

We will use the **Spectrum Analyser** mode with the **Max Hold** and **Marker option**. Now the step by step explanation.

- 1 First tune the channel 60 in the 786 MHz frequency. This is the last channel currently available for DTT (or highest frequency channel in the UHF band, in our case).DT (o el canal de frecuencia más alta en la banda de UHF, en nuestro caso).

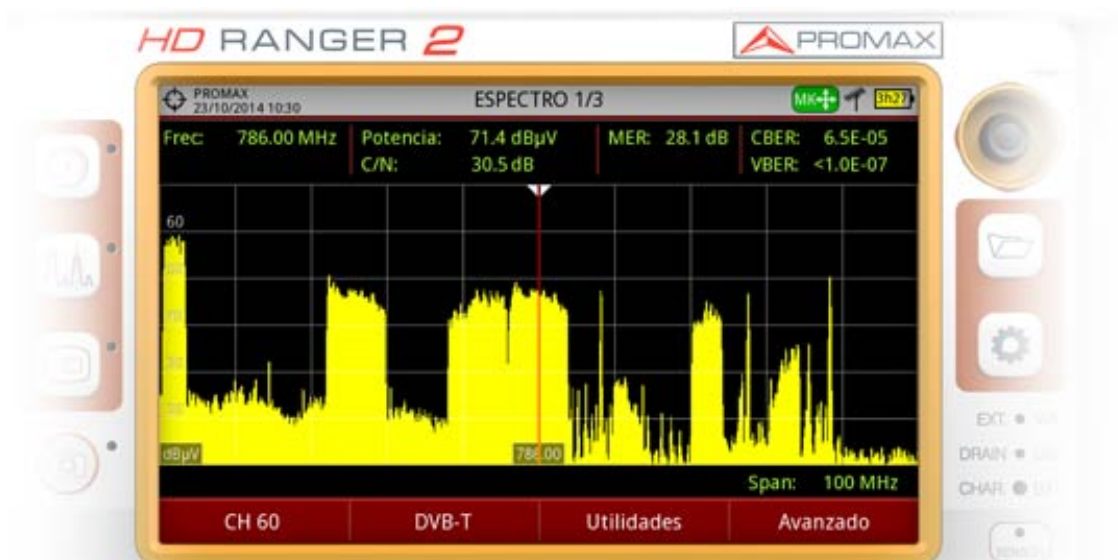


Figure A8.3 Pointer over the spectrum at channel 60 in the terrestrial band. The spectrum band reserved for LTE is visible on the right.

- 2 In the **Spectrum Analyser** mode, drop down the **Advanced** menu and select the **Max Hold** option in Permanent mode. Keep in mind that the LTE signal changes continuously its power, according to the instant traffic data. With this option, we can view on screen not only the signals in real time but also the peak values. A trace in blue shows the peaks.

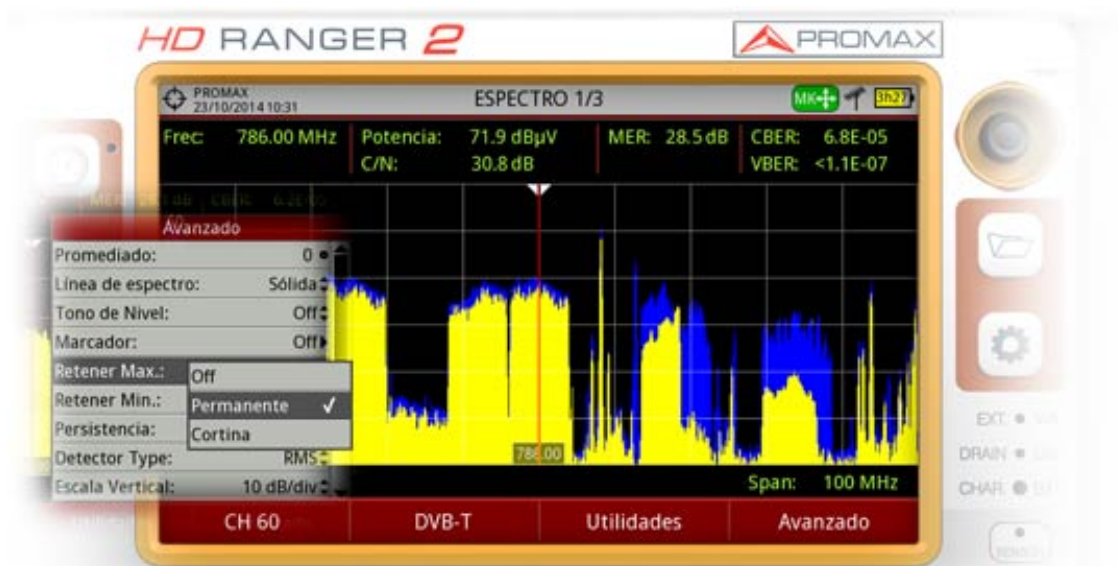


Figure A8.4 Max hold on the signal. The maximum power of the spectrum is traced in blue, behind the real-time spectrum (yellow).

- 3 Then, drop down again the **Advanced** menu and switch the **Marker** option to ON. With the joystick move the marker to the LTE channel at the lowest frequency. In our case, we assume that this frequency is 793.5 MHz, the first data multiplex at the downlink area. With these settings we can quantify in real time the difference between real-time DTT levels and the LTE signal.
- 4 The experience, to observe pixelations in the image or artefacts in the sound, as well as measurements of the TV signal quality, especially the MER, will tell us if we are in a risk situation.

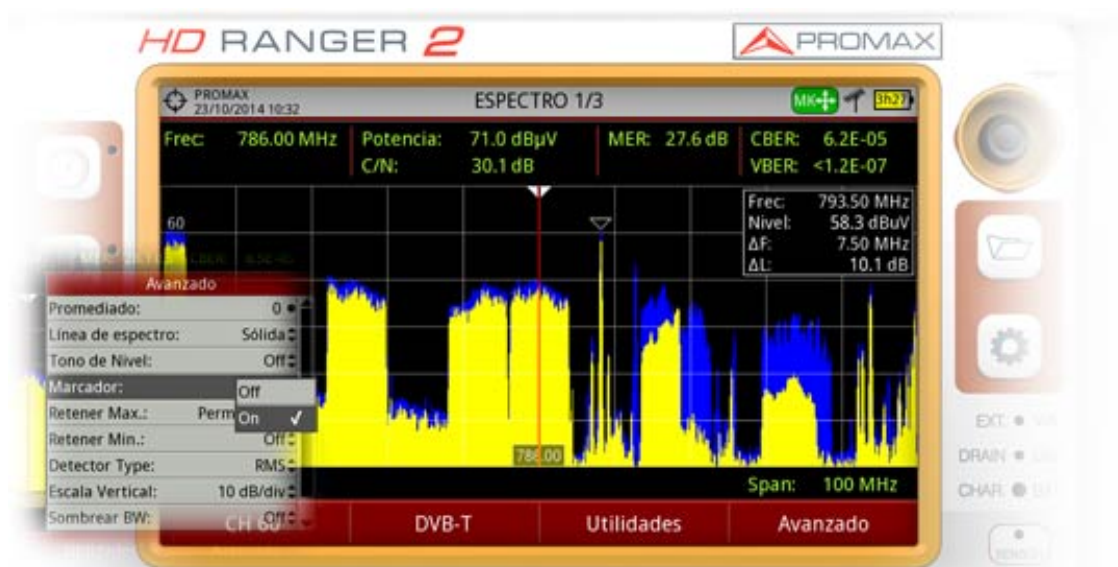


Figure A8.5 Marker enabled and placed in one of the LTE channels, at the frequency 793.5 MHz.

- 5 In case of anomalies on the DTT signal, the procedure to follow would be to connect a filter in the RF signal to determine if the presence of LTE signals is the cause of our interferences.

In the **HD RANGER Lite**, this filter should be external to the equipment and can be easily connected, by screwing it in the proper input connector (see photo).

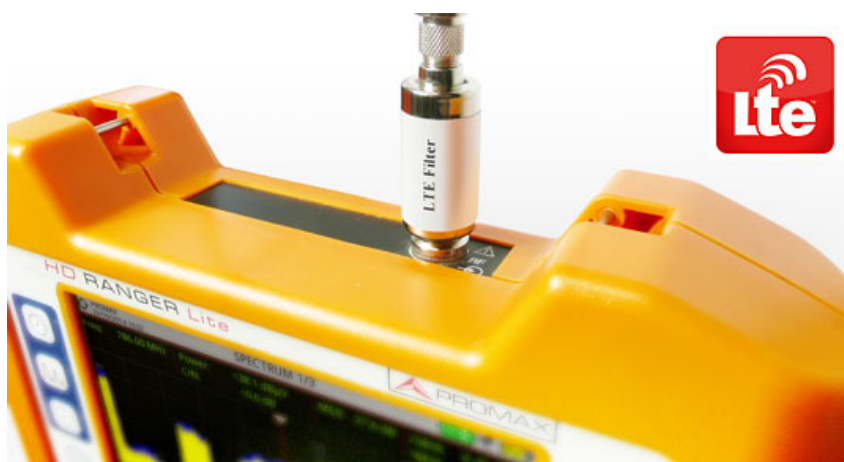


Figure A8.6 LTE filter coupled to a **HD RANGER Lite** field strength meter.



8.4 **LTE filter built-in the *HD RANGER+* and *HD RANGER 2* meters**

The most advanced equipment such as the *HD RANGER +* and the *HD RANGER 2*, have a built-in rejection filter for the LTE band. This filter can be enabled to check if the quality of the TV signal reception improves, when much of the LTE band has been attenuated by the filter.

To be clarified that these filters, internal or external, cannot completely remove the LTE band signals. Especially for the TV channels close to 790 MHz, where is the end for the current UHF. If we are close to a LTE station with low downlink channels, (as in the example) a filter cannot be a sufficient solution.

Other options to better mitigate the LTE signals can be considered, such as a change in the location of the TV antenna or a passive shield in the way between the two antennas (TV and LTE).

As an additional feature, the *HD RANGER +* and the *HD RANGER 2* equipment have a specific tool for LTE, called LTE Ingress Test. With this tool you can measure the MER of a DTT channel, presumably affected by an LTE signal, and evaluate the effects of enabling an LTE filter.

Specifically, in the screen of this tool you can view the spectrum of the LTE-800 band between frequencies 776 and 876 MHz. In the measurement window is shown the minimum and maximum MER for the tuned TV channel (the one we suspect may be affected by a possible interference of a LTE signal) and the minimum and maximum power in the LTE bandwidth. The measurement can be done with the filter on and off.

By this way, the installer will check if the installation of a filter will absorb the effects of the LTE signal and if it affects in a positive way the quality of reception for the television signals.

With these options, the *HD RANGER* field strength meters are the ones better prepared to deal with interference problems that may arise with the beginning of the LTE emissions.



ANNEX 9 MULTIMEDIA CONTENT

Next it is the list with all the links of the multimedia content in the user's manual:

TITLE	LINK
Introducing the HD RANGER Series	http://youtu.be/XpNxlOSfkf0
Introducing the HD RANGER 2	http://youtu.be/dl11jXoi_FQ
Navigating through the menus	http://youtu.be/Zm_QT-qtY4
Switching satellite/terrestrial bands	http://youtu.be/ecv1P0Cf_fI
Manual input of frequencies	http://youtu.be/81l5ezO4cgg
DVB-S2 multi stream decoding	http://youtu.be/xuv9ESed_Ak
What is LTE?	http://youtu.be/ZNPcDC4K-YI
Datalogger	http://youtu.be/TUuHJBX0BQI?t=3m55s
Channel plan exploration	http://youtu.be/TUuHJBX0BQI?t=2m54s
Installation manager	http://youtu.be/TUuHJBX0BQI
Generating a measurement report	http://youtu.be/fQP8n-59pHc
Creation of a channel plan	http://youtu.be/YwbpfRNGJYI
Digital dividend	http://www.promaxelectronics.com/ing/news/437/the-hd-ranger-meters-ready-for-the-digital-dividend-lte



PROMAX ELECTRONICA, S. L.

Francesc Moragas, 71-75
08907 L'HOSPITALET DE LLOBREGAT (Barcelona)
SPAIN
Tel. : 93 184 77 00 * Tel. Intl. : (+34) 93 184 77 02
Fax : 93 338 11 26 * Fax Intl. : (+34) 93 338 11 26
<http://www.promaxelectronics.com>
e-mail: promax@promaxelectronics.com